



EVOTECH®
P E R F O R M A N C E

Triumph Tiger 1200
SP Connect Sat Nav Mount


Installation Instructions






Kit Contents PRN014516-014677


- (A) 1 x M6 x 16 Countersunk Screw
 - (B) 1 x Pivot Plate
 - (C) 1 x SP Connect Plate
 - (D) 2 x M5 x 10mm Caphead Bolts
 - (E) 2 x P-clips (No.1)
 - (F) 2 x P-clips (No.2)
 - (G) 2 x P-clips (No.3)
 - (H) 2 x P-clips (No.4)
 - (I) 2 x Lobe Screw
 - (J) 2 x Locking Washer
 - (K) 2 x M5 Black Washer
 - (L) 2 x M4 x 5mm Button Head Bolts
 - (N) 1 x Spanner
- Sub Kit




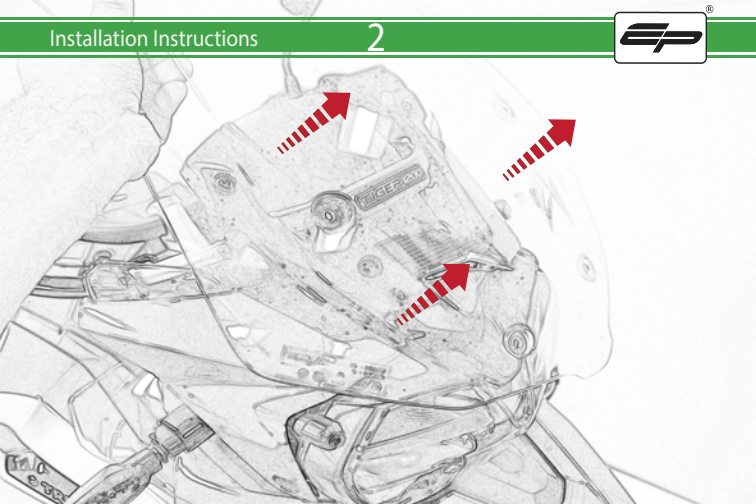


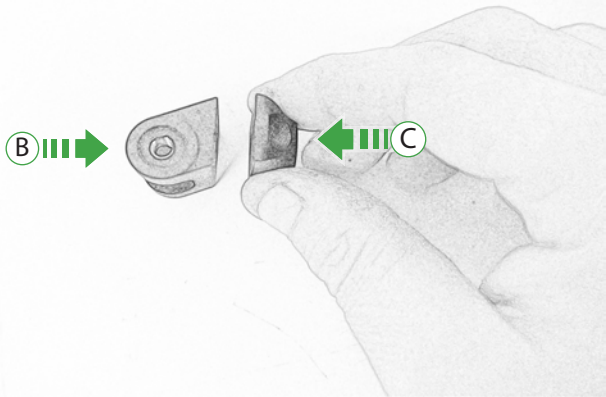


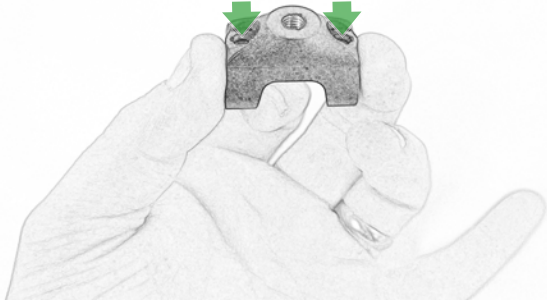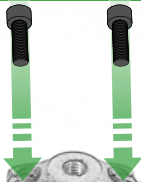

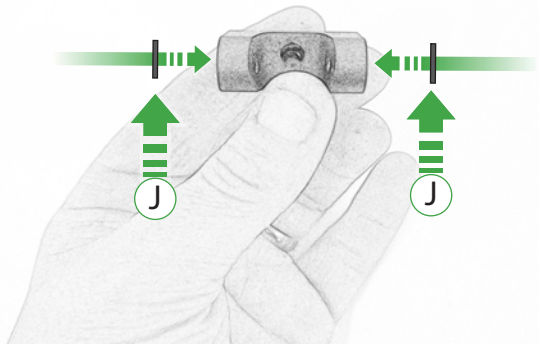


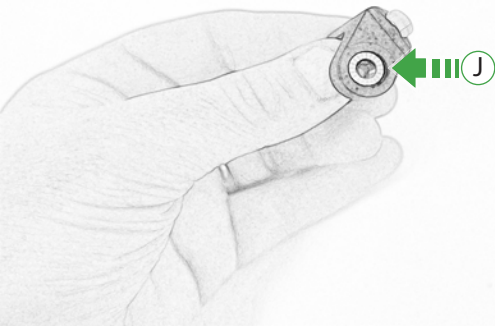


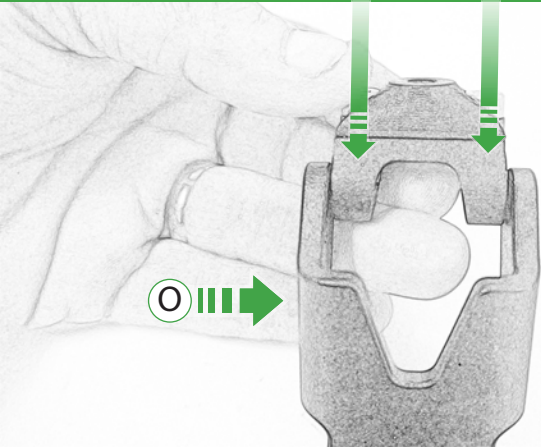


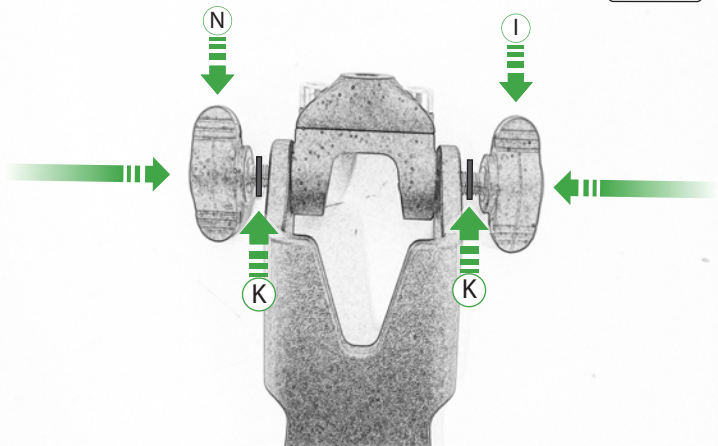





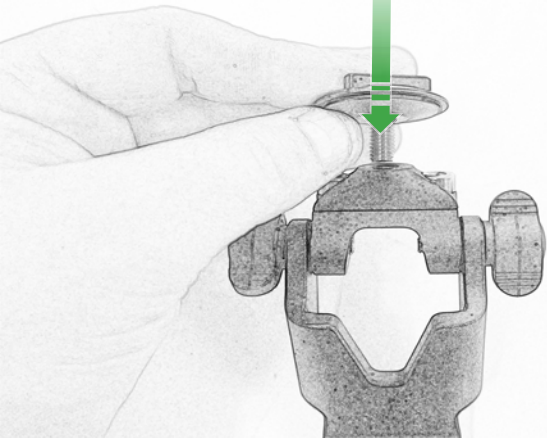

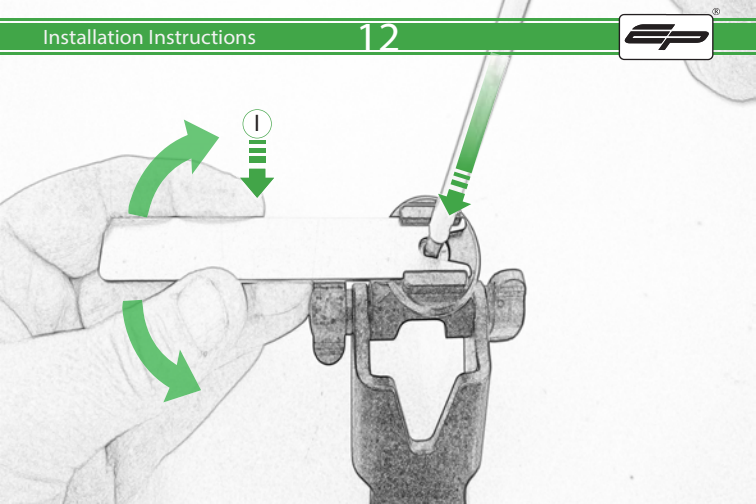

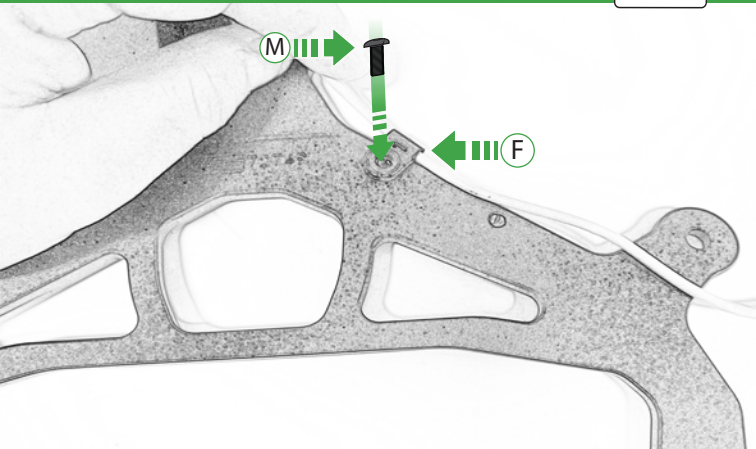

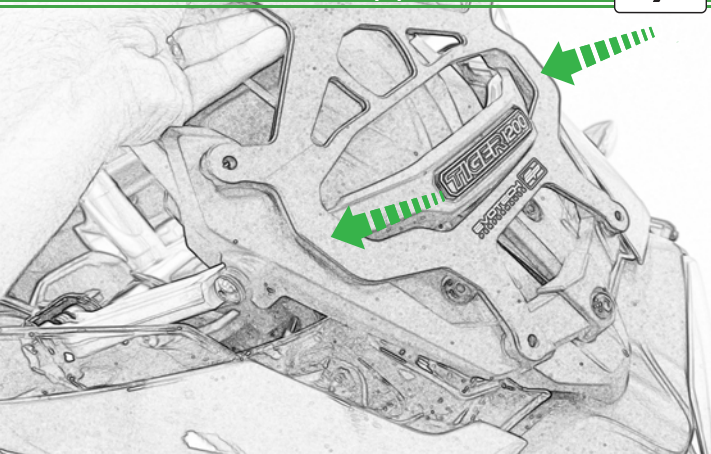

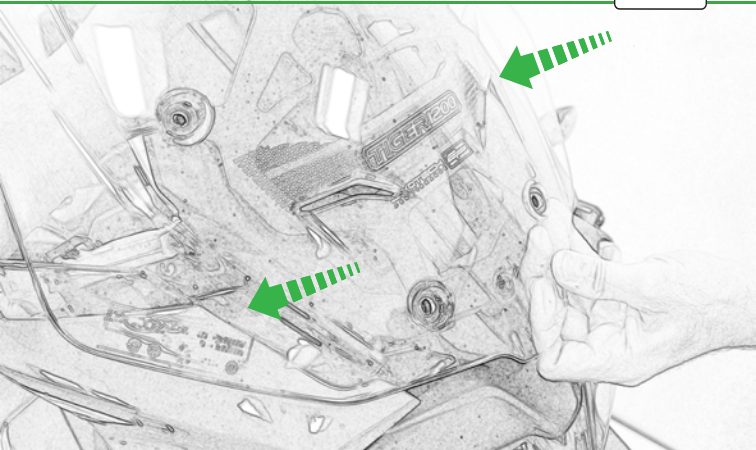




OEM PART

OEM PART

OEM PART

OEM PART

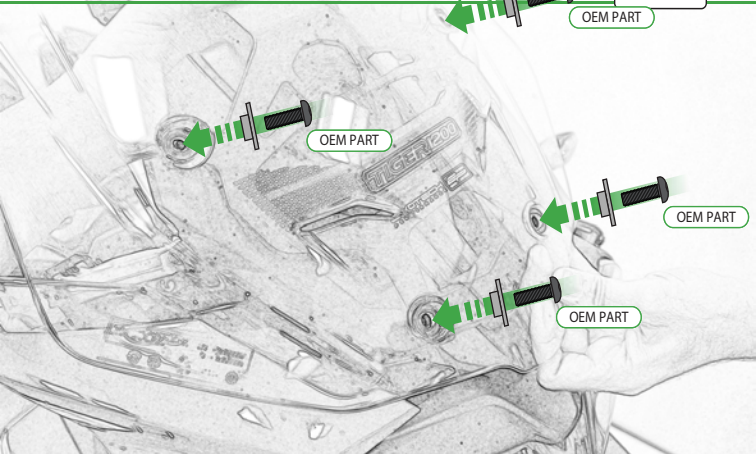



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com