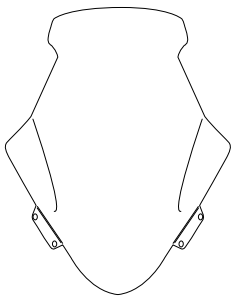





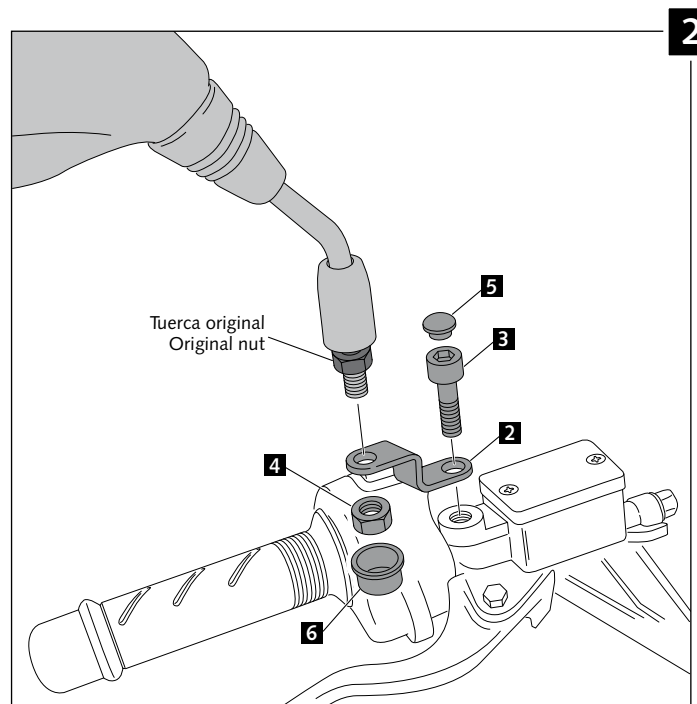
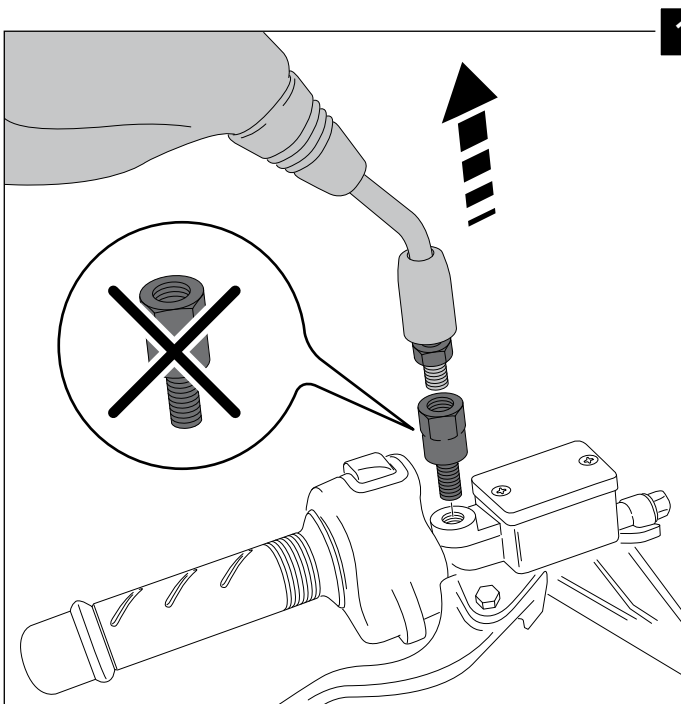


INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**VTECH TOURING PARA - VTECH TOURING FOR - VTECH TOURING FÜR
HONDA PCX 125-150 '14-'15**

ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.
1		VTech Touring	VTech Touring	1
2		Desplazador espejo retrovisor	Back mirror move set	2
3		Tornillo M10x15	M10x15 screw	2
4		Tuerca M10 (rosca izquierda)	M10 nut (left fastener)	2
5		Tapón tornillos	Allen Screw cap	2
6		Caperuza plana M10	M10 nut cover	2



MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

www.puig.tv - www.puigusa.com

Ref.: 7549

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

VTECH TOURING PARA - VTECH TOURING FOR - VTECH TOURING FÜR HONDA PCX 125-150 '14-'15

