

Thank you for purchasing a ZTechnik product. Read these instructions carefully and thoroughly before beginning work. Dealers, if installing this windscreen for a customer, please give them this manual. It contains information needed to properly maintain and use this product.





**Attention:**

Special notes and cautionary measures which can prevent damage to the accessory or motorcycle.



**Note:**

Tips for facilitation of operation, control and adjustment, as well as maintenance work.

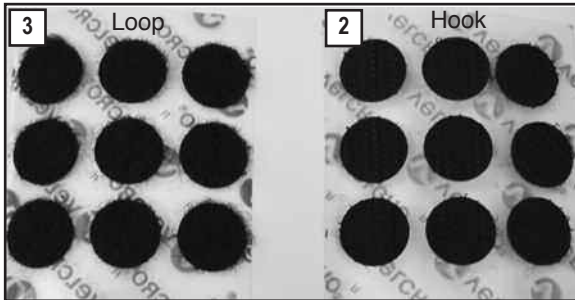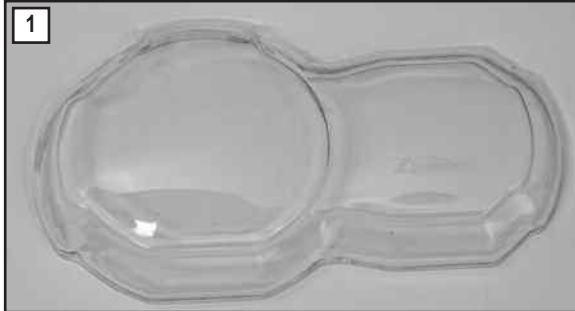

**CONTENTS OF KIT**

| Item            | Description                            | Part No.      | Qty. |
|-----------------|--|---------------|------|
| 1               | Headlight Guard with Quantum® Hardcoat |               | 1    |
| <b>Bag#1154</b> |  |               |      |
| 2               | Velcro Hook                            | 77-771159-000 | 9    |
| 3               | Velcro Loop                            | 77-771160-000 | 9    |

**TOOLS REQUIRED:**

- T10 Torx
- Grease Pencil or Crayon



**PREPARATION**



The Velcro® Industrial grade fasteners will securely hold your Quantum Hardcoated Polycarbonate Headlight Cover to the motorcycle's headlight.

For best performance and adhesion the Headlight Cover and motorcycle surface should be a minimum of 65 °F (18 °C)

Cleaning is critical. Be sure to clean the headlight rim and remove all wax, cleaners, and protectants (Armor-All). These can contaminate the adhesive causing it to fail.

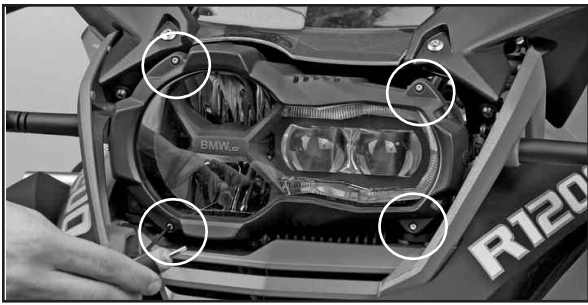


Figure 1



Figure 2

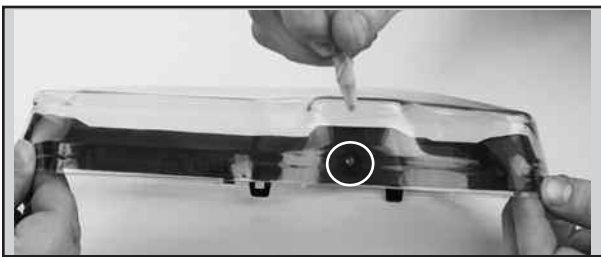


Figure 3

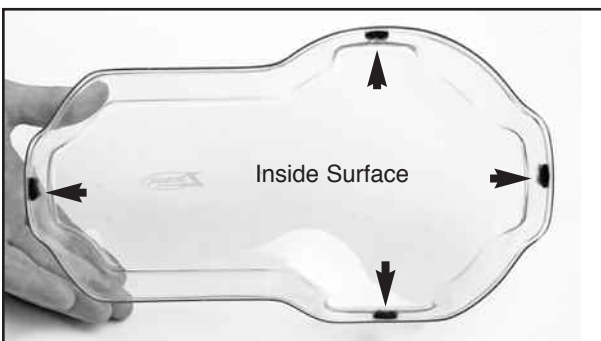


Figure 4



Figure 5

## INSTALLATION

1. For ease of installation, it is recommend to remove the Headlight Rim. **(T10Torx) Figure 1**

2. Apply 4 pieces of Velcro Loop to Rim. Position Velcro Dot at inside edge of Rim as shown in inset. **Figure 2**

3. Align the Headlight Cover to Rim. Make 4 marks on the *outside* of the Guard where the Hook will match to the Loop. **Figure 3 (Grease Pencil)**

4. Install Hook at the mark on the *inside* of the Guard. Press down to ensure good contact of adhesive with Guard. **Figure 4**

 Let Velcro Hook and Loop cure for 5 minutes before installing Headlight Guard.

5. Re-install Rim to motorcycle. **(T10 Torx)**

6. Install Guard. Align Loop fastener with Hook and press into place until fully engaged. Wipe marks from Guard. **Figure 5**

## CLEANING AND MAINTENANCE

To clean the guard, wash with a clean soft cloth, plenty of warm water and if necessary, a non-abrasive soap such as dishwashing liquid. Flannel or soft chamois make good cleaning cloths. Paint, glue residue or tar removal: Moisten cotton with naphtha or turpentine **followed by a wash as above.**

Do not clean the guard with abrasive cleaners, alcohol, or strong solvents. Except as recommended above for paint, glue, or tar removal.