



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

Triumph Speed Triple RS Bar Ends

Installation Instructions




Kit Contents PRN015509-001089

Ⓐ 2 x Bar Ends




Repeat
Both Sides

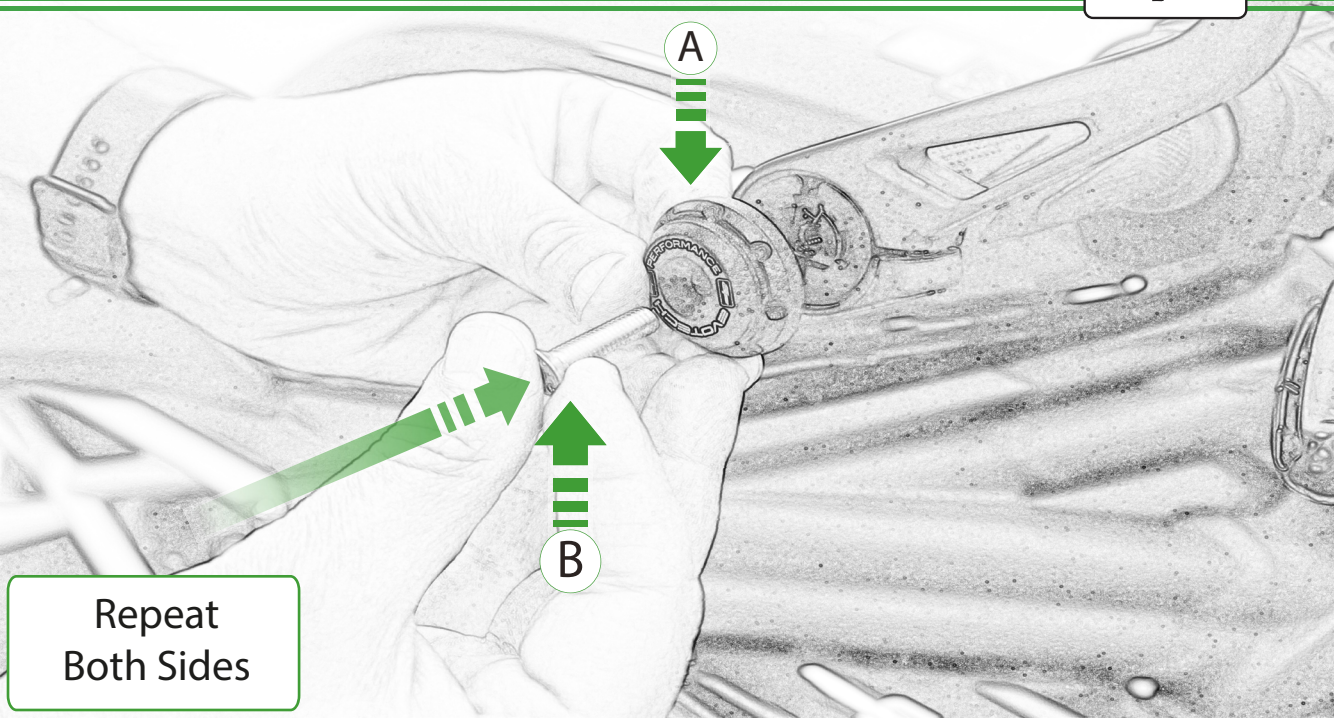

B

A

Repeat
Both Sides

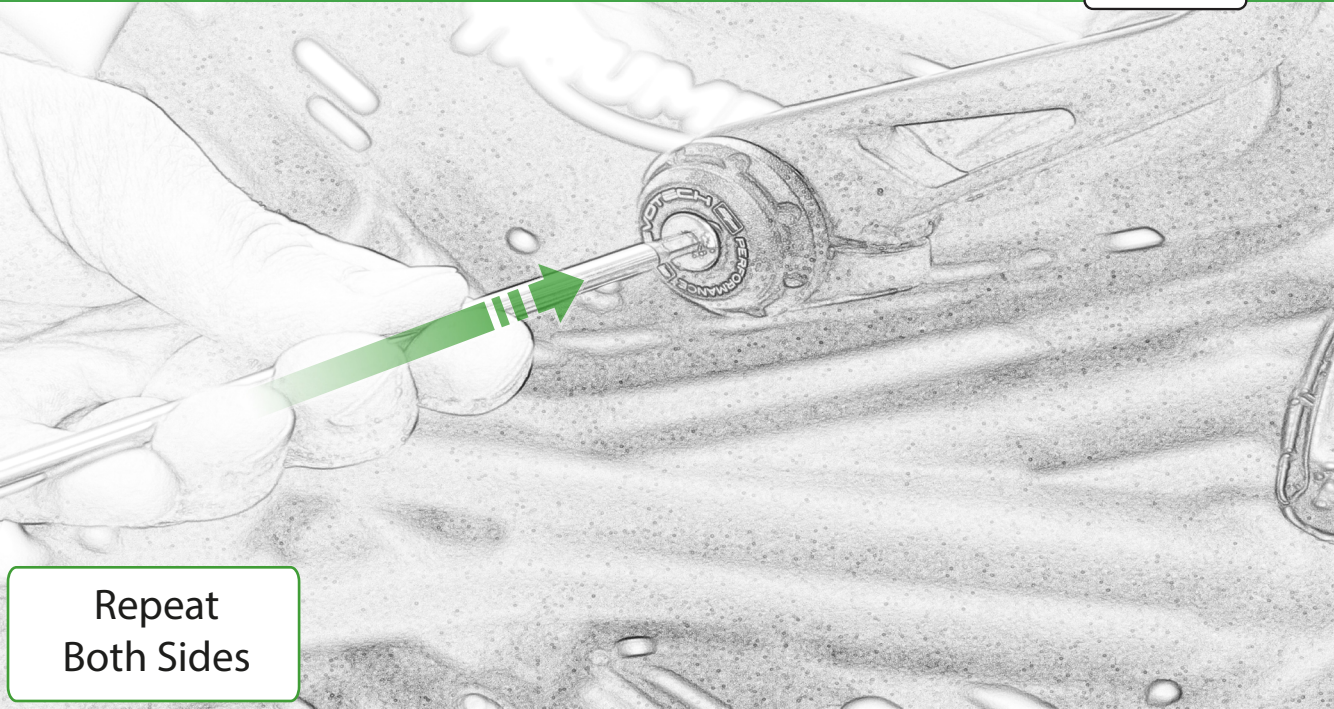

Repeat
Both Sides



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com