

Griffschutz/ Handle protection

KTM 1190 Adventure / R

ab Baujahr 2013 / from date of manufacture 2013

KTM 1050 Adventure

ab Baujahr 2015 / from date of manufacture 2015

4207519-01 schwarz/black

KTM 1290 Super Adventure / R / S / T

ab Baujahr 2015 / from date of manufacture 2015

4207533-01 schwarz/black

KTM 1090 Adventure

ab Baujahr / from date of manufacture 2017

42127556 00 01 Schwarz/black

KTM 1090 Adventure R

ab Baujahr / from date of manufacture 2017

42127563 00 01 Schwarz/black



DE INHALT
GB CONTENTS

1	700008976	Griffschutz links schwarz	1	700008976	Handle protection left black
1	700008977	Griffschutz rechts schwarz	1	700008977	Handle protection right black
1	700008978	Schraubensatz:	1	700008978	Screw kit:
4x		Senkkopfschrauben M8 x 45	4x		countersunk head screw M8 x 45
2x		Senkkopfschrauben M8 x 60	2x		countersunk head screw M8 x 60
6x		Senkscheiben ø8,4xø25 mm	6x		countersunk washer ø8,4xø25 mm
4x		Aludistanzen ø15 x ø9 x 10 mm	4x		alu spacer ø15 x ø9 x 10 mm



DE WICHTIG
GB IMPORTANT

Eine Seite nach der anderen montieren, damit sich der Lenker nicht verstellt !

Die Voraussetzung für die Montage ist natürlich eine gewisse technische Erfahrung. Wenn Sie sich nicht sicher sind, wie man eine bestimmte Arbeit ausführt, sollten Sie diese Ihrer Fachwerkstatt überlassen. Ziehen sie alle zugänglichen Schrauben zuerst nur locker an. Nachdem alles montiert ist, werden die Schrauben dann auf das entsprechende Anzugsmoment festgezogen. Dadurch wird sichergestellt, dass das Produkt spannungsfrei angebaut ist. Anzugsmomente beachten!

Mount one side after the other, so that the handle bar position does not change !

Of course, the assembly requires a certain technical experience. If you are not sure how to execute a determined action, you should ask your local distributor to do it. First, tighten all screws only loosely. After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the product is mounted without tension. Observe the tightening torques of the manufacturer!

Griffschutz/ Handle protection

KTM 1190 Adventure / R

ab Baujahr 2013 / from date of manufacture 2013

KTM 1050 Adventure

ab Baujahr 2015 / from date of manufacture 2015

4207519-01 schwarz/black

KTM 1290 Super Adventure / R / S / T

ab Baujahr 2015 / from date of manufacture 2015

4207533-01 schwarz/black

KTM 1090 Adventure

ab Baujahr / from date of manufacture 2017

42127556 00 01 Schwarz/black

KTM 1090 Adventure R



ab Baujahr / from date of manufacture 2017

42127563 00 01 Schwarz/black




DE BENÖTIGTE WERKZEUGE

GB TOOLS REQUIRED



Verlängerung/extension



Ratsche/Ratchet

DE MONTAGEANLEITUNG

GB MOUNTING INSTRUCTIONS

Befestigung des Griffschutzes seitlich links und rechts:

Der Griffschutz wird an dem Lenkerende und an der Lenkeraufnahme montiert. Die Originalschrauben entfallen.

Achtung ! Die Schraube an den Lenkerenden nur lösen, nicht ganz ausdrehen - sonst zerfällt die Einheit und die Teile bleiben im Lenker. Nun die ganze Einheit herausziehen.


Den Griffschutz mit der Senkkopfschraube M8 x 60 und Senkscheiben ø8,4 in die Klemmvorrichtung schrauben und wieder in den Lenker einstecken.

Fastening of the handle protection bar left and right laterally:

At the ends of the original handlebar The original screws are obsolete.

Attention! Unscrew the screw at the end of the handlebar just a few turns, otherwise the clamping device remain in the handlebar. Now pull the whole unit out.

First, fix the handle protection with countersunk head screw M8 x 60 and countersunk washers ø8,4 to the clamping device and plug it back into the handlebar.

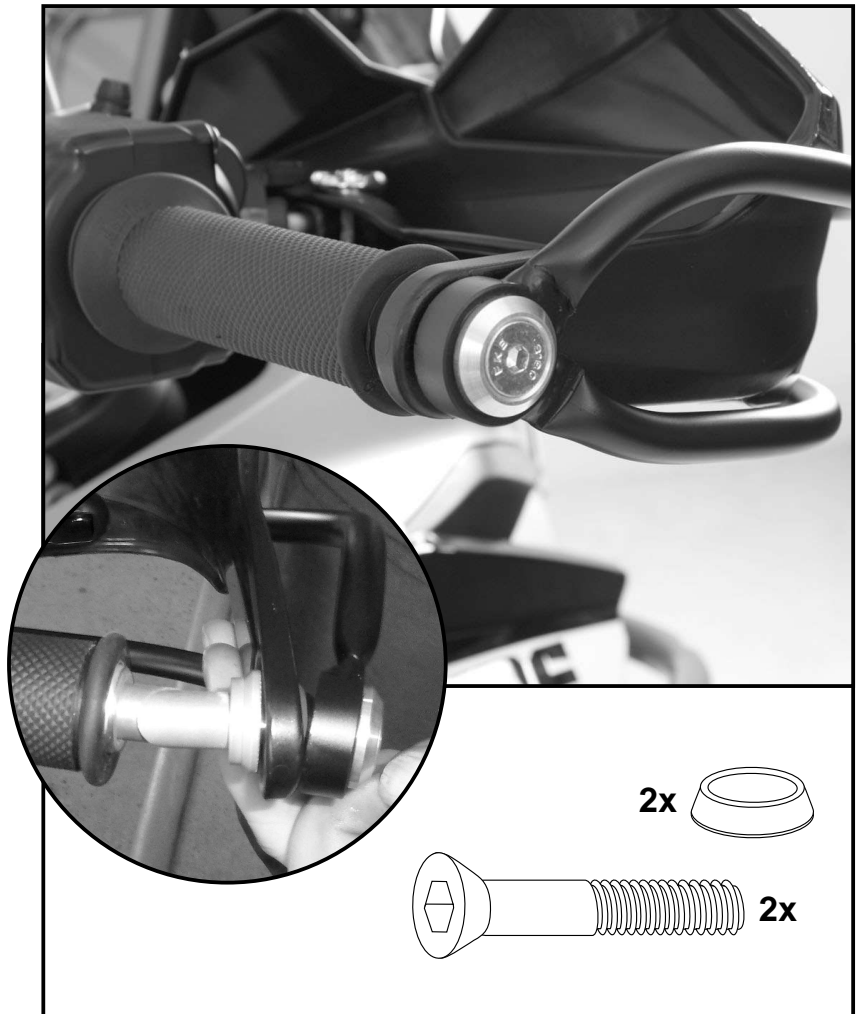

Griffschutz/ Handle protection



KTM 1190 Adventure / R

ab Baujahr 2013 / from date of manufacture 2013

KTM 1050 Adventure

ab Baujahr 2015 / from date of manufacture 2015

4207519-01 schwarz/black

KTM 1290 Super Adventure / R / S / T

ab Baujahr 2015 / from date of manufacture 2015

4207533-01 schwarz/black

KTM 1090 Adventure

ab Baujahr / from date of manufacture 2017

42127556 00 01 Schwarz/black

KTM 1090 Adventure R

ab Baujahr / from date of manufacture 2017

42127563 00 01 Schwarz/black

DE MONTAGEANLEITUNG GB MOUNTING INSTRUCTIONS

Befestigung des Griffschutzes oben links und rechts:


Über der Lenkerverschraubung, die Originalschrauben entfallen.
Mit den Senkkopfschrauben M8 x 45 und Senkscheiben ø8,4 verschrauben. Die Aludistanzen ø15xø9x10mm dazwischen fügen.

Abschließend den Griffschutz ausrichten und festziehen.

Fastening of the handle protection bar left and right top:

At the handle bar bolting.
Original screws are obsolete.
Fix the handle protection with countersunk head screw M8 x 45 and countersunk washers ø8,4.
Add alu spacer ø15xø9x10mm.

Finally, align and tighten the handle protection.



DE ACHTUNG
GB CAUTION

Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren ! Abgebaute Teile wieder montieren. Bitte beachten Sie unsere beigefügten Serviceinformationen.

Control all screw connections after the assembling for tightness! Reassemble the dismantled parts. Please notice our enclosed service information.

Weiteres Zubehör:

Kofferträger/Gepäckbrücke /Hauptständer/Motorschutzplatte/C-Bow Halter/Lampengitter
Für die jeweilige Bestellnummer siehe Katalog oder auf unserer webseite.

Also available:

Lock it side carrier/Center stand/Alurack rear rack/Skid plate/C-Bow holder/Headlight grilles
For item-numbers see our catalog or on our website.



Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: 06331 - 1453 - 100

Fax: 06331 - 1453 - 120

eMail: vertrieb@hepco-becker.de

www.hepco-becker.de