

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Ducati Multistrada V4
Tail Tidy Instructions





Kit Contents PRN015778


- Ⓐ 2 x M4 x 12mm Black Button Bolts
- Ⓑ 2 x Light Spacer
- Ⓒ 2 x Indicator Shields
- Ⓓ 2 x M4 x 16mm Black Button Bolts
- Ⓔ 2 x M5 x 12mm Countersunk Screw
- Ⓕ 2 x M6 x 16mm Caphead
- Ⓖ 2 x M6 x 25mm Black Button Bolts
- Ⓗ 2 x Large Spacer
- Ⓘ 4 x Indicator Cups
- Ⓙ 4 x M5 x 12mm Black Button Bolts
- Ⓚ 4 x Small Spacer
- Ⓛ 4 x M6 x 12mm Black Button Bolts

EVEREST[®] TECH[®]
PERFORMANCE

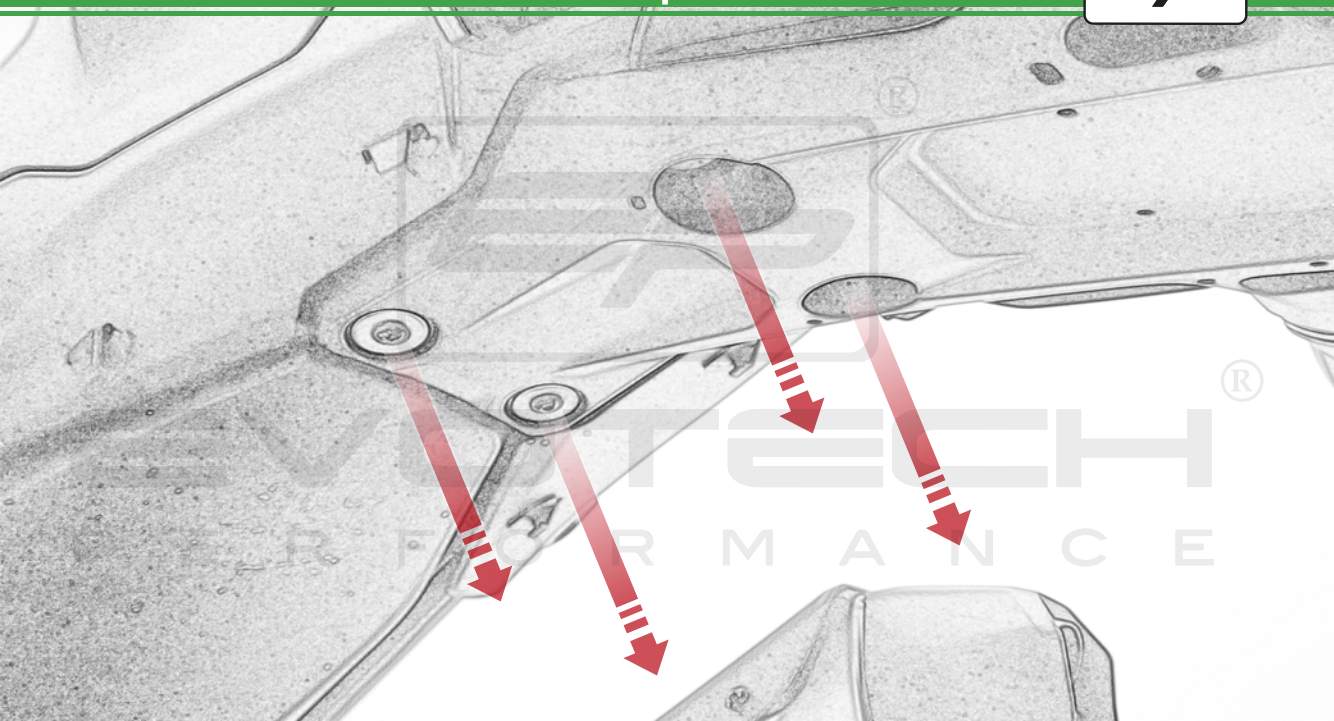


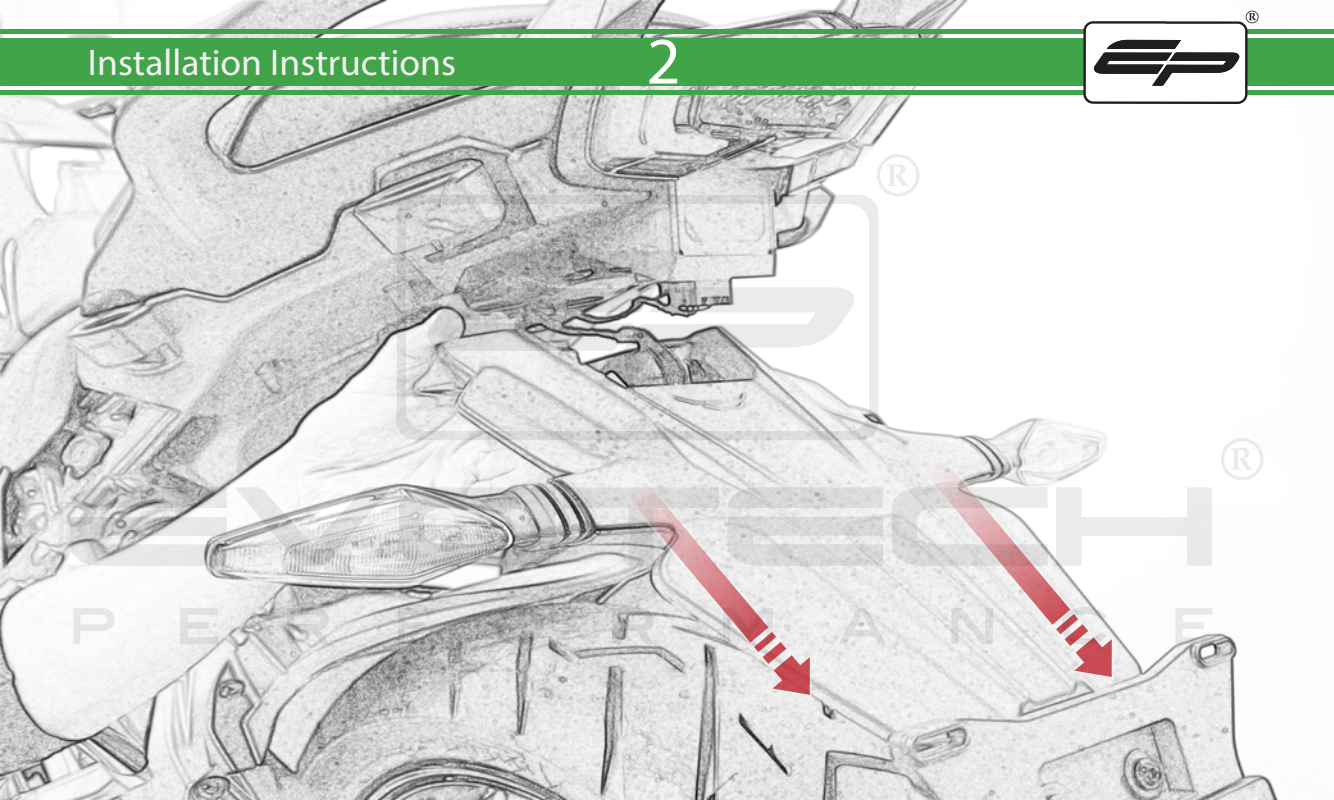


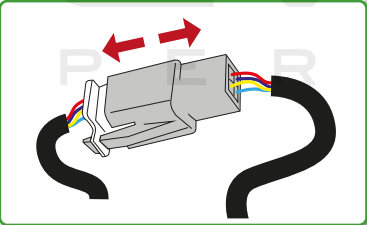


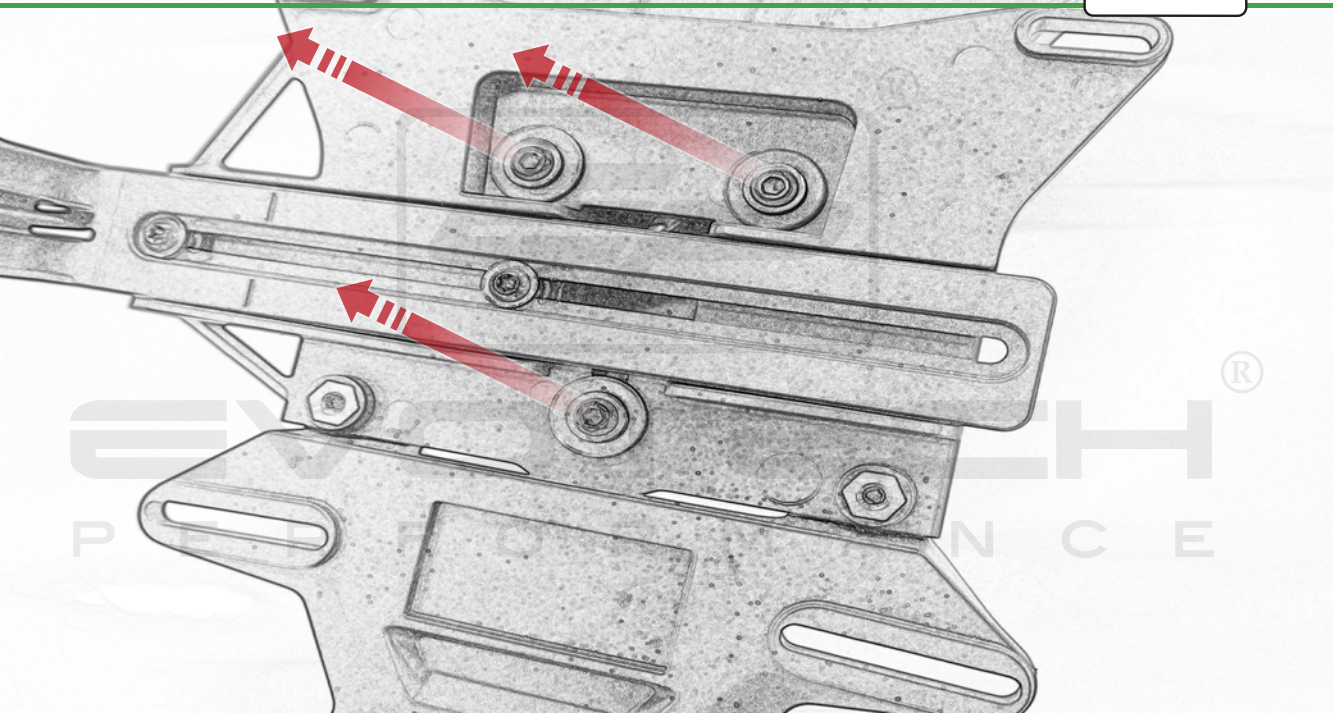


EP
PERFORMANCE

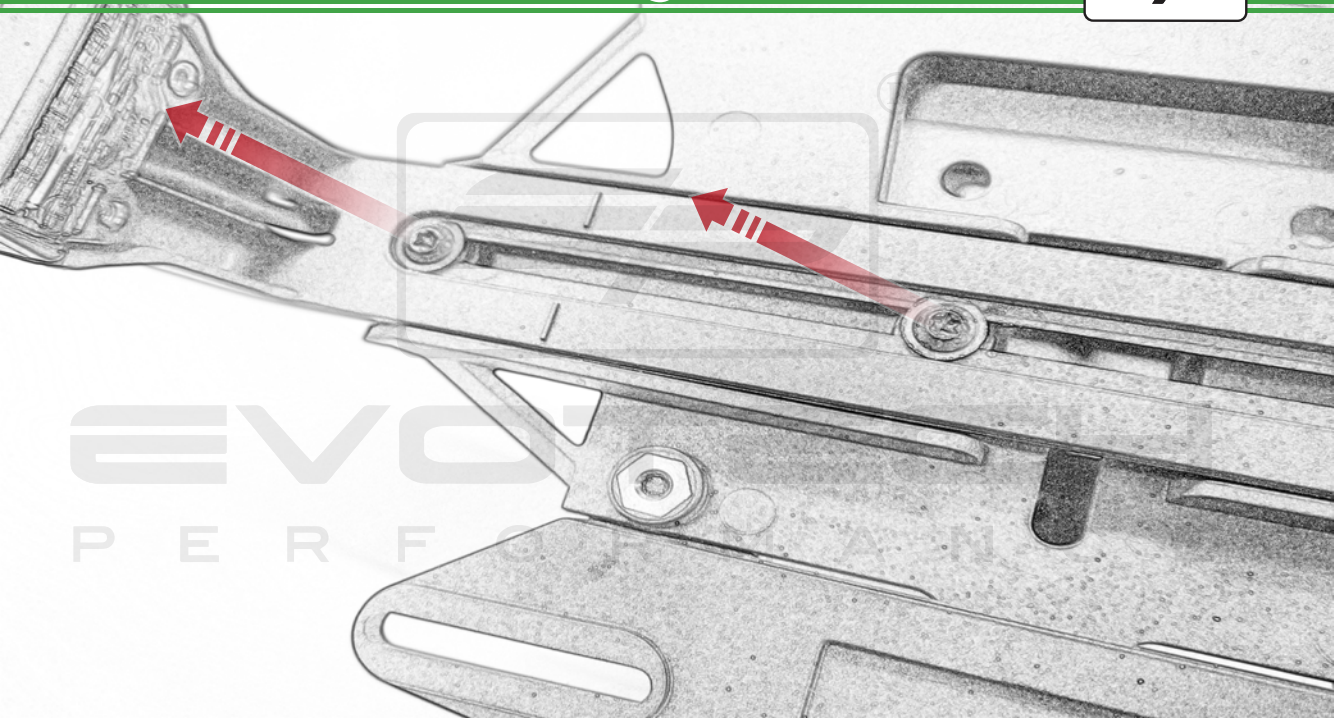

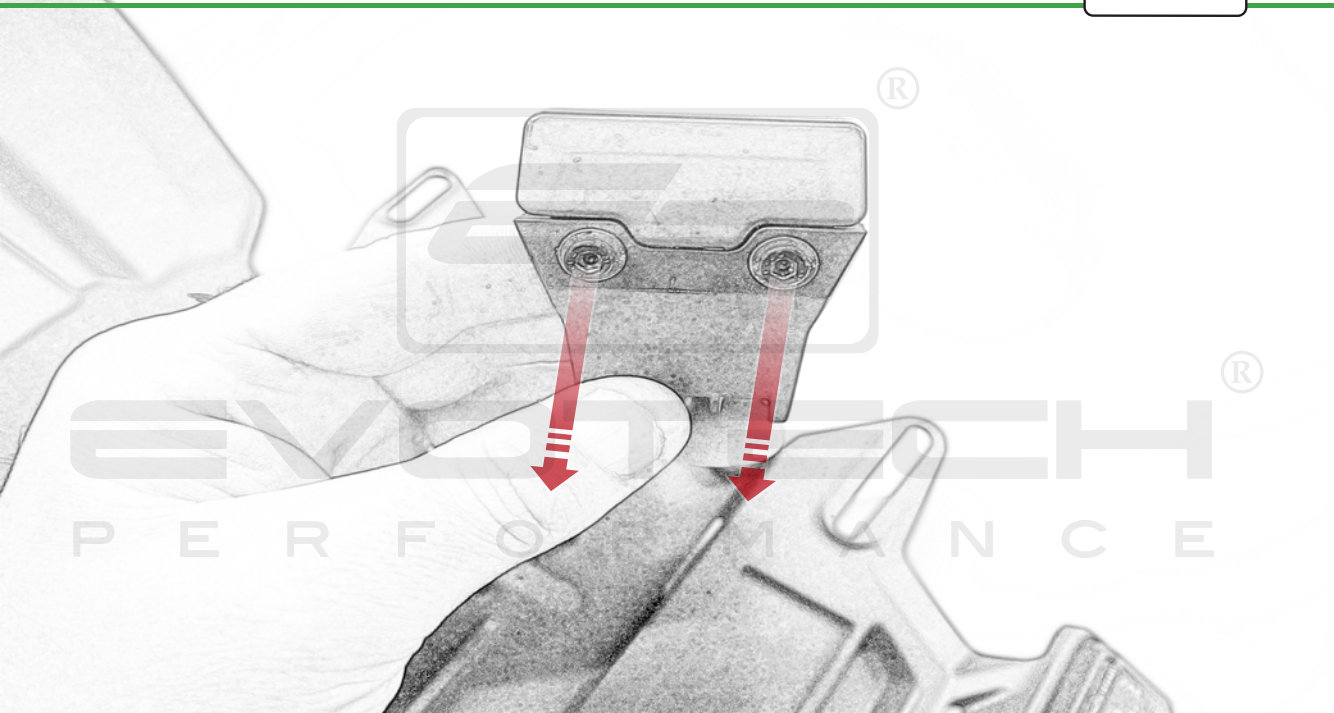



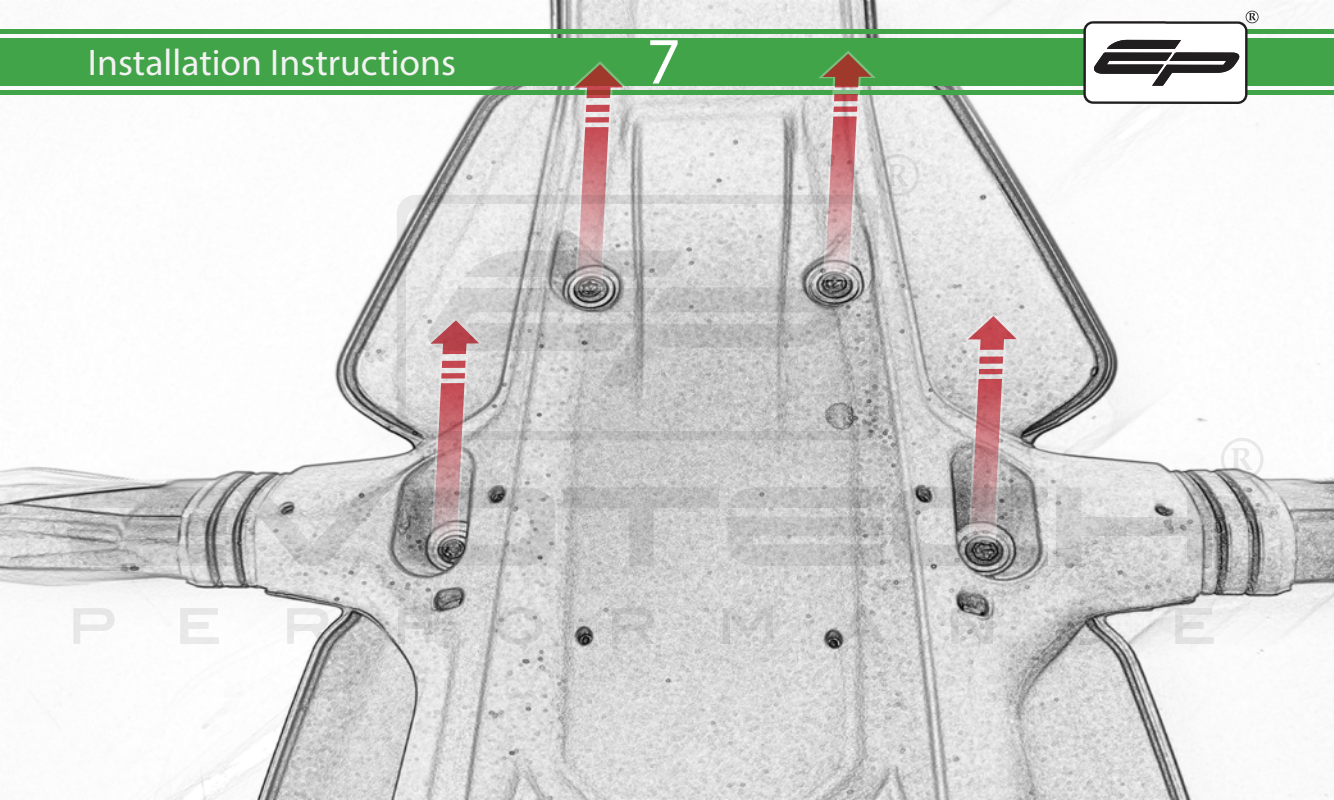



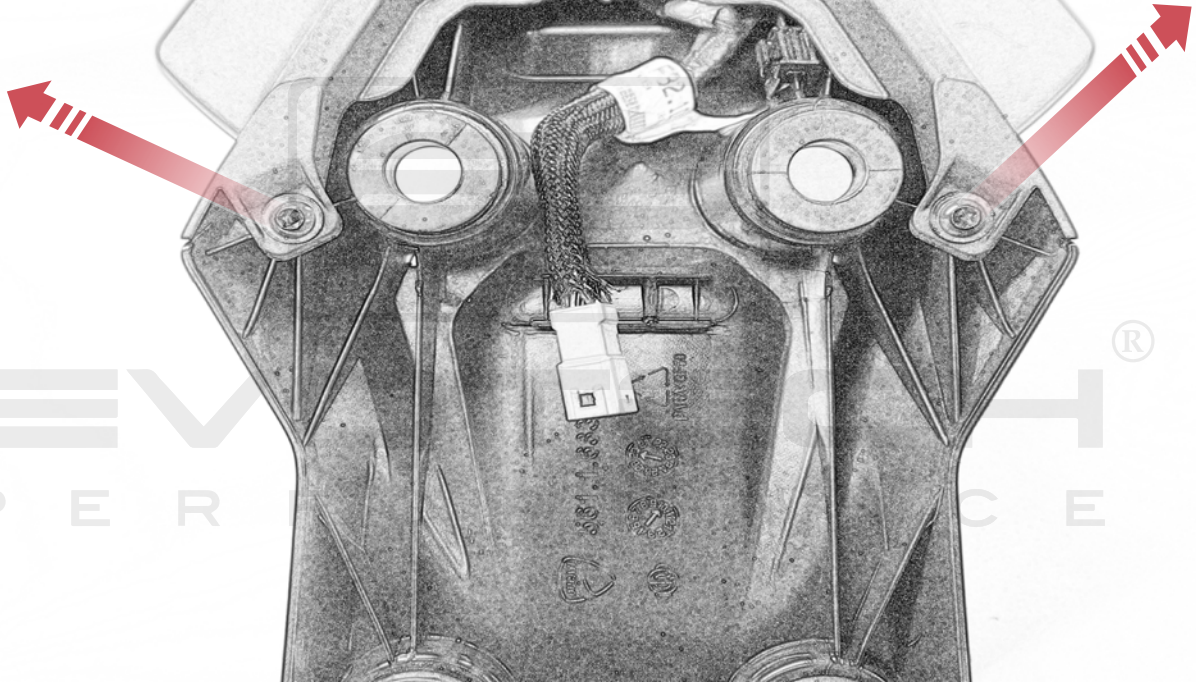



EV
PER


®
CE

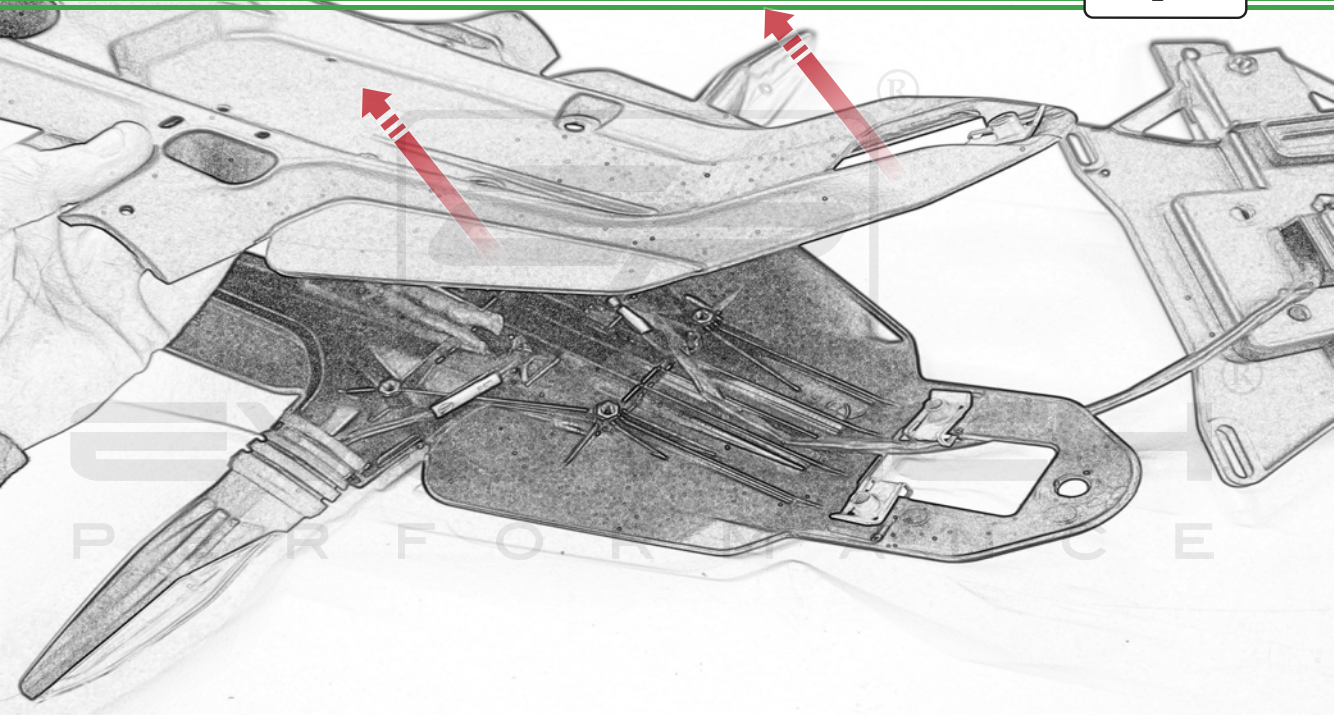

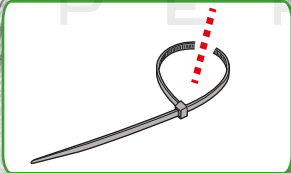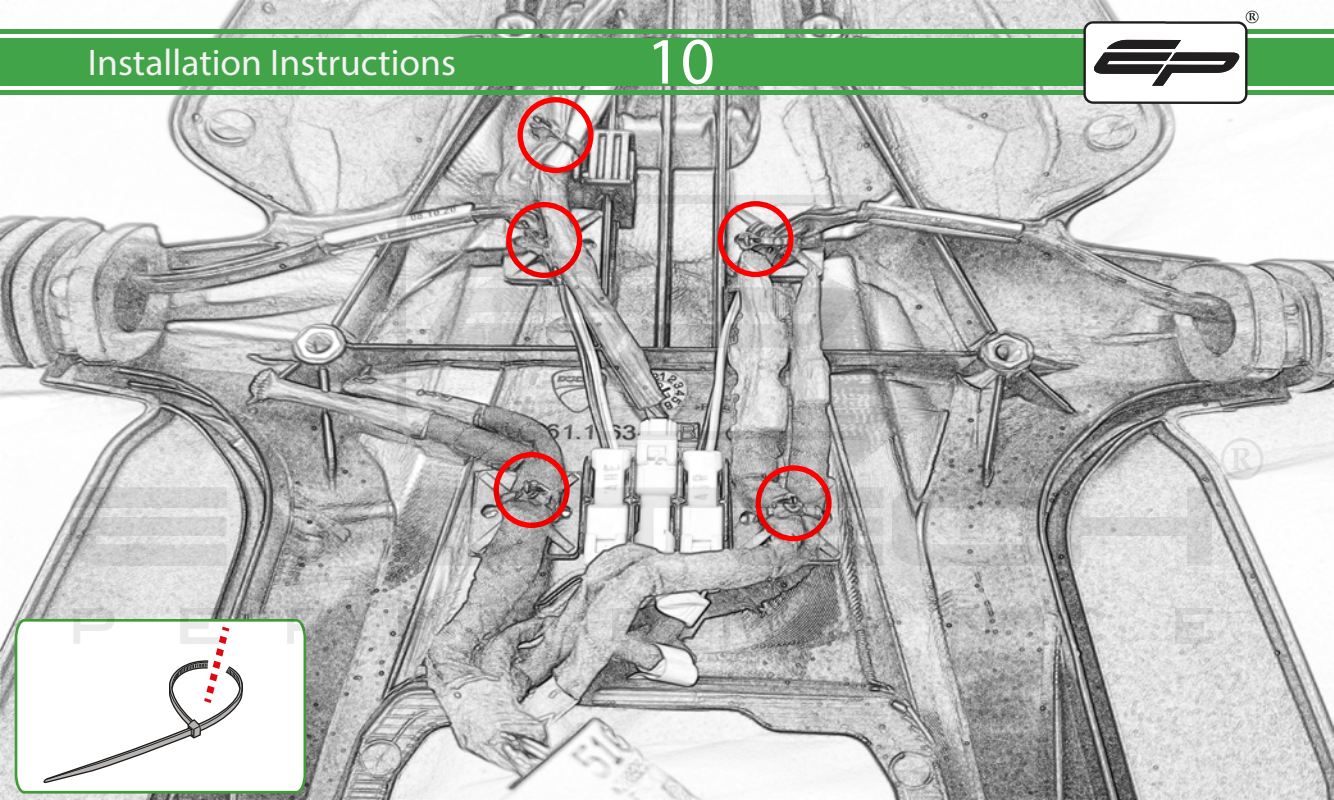


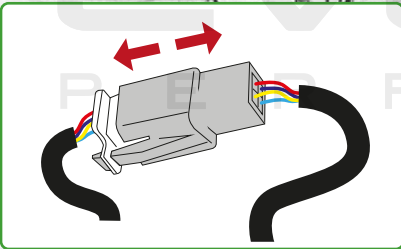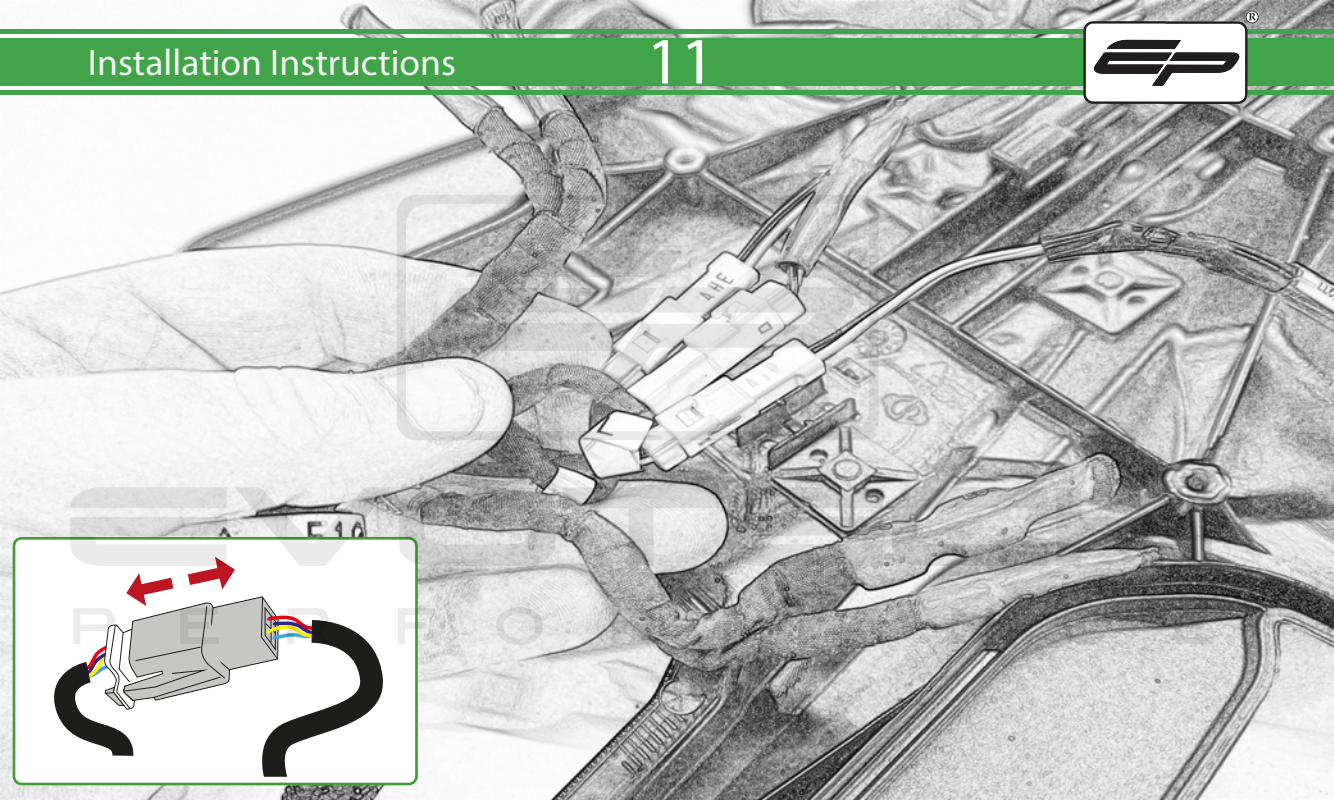

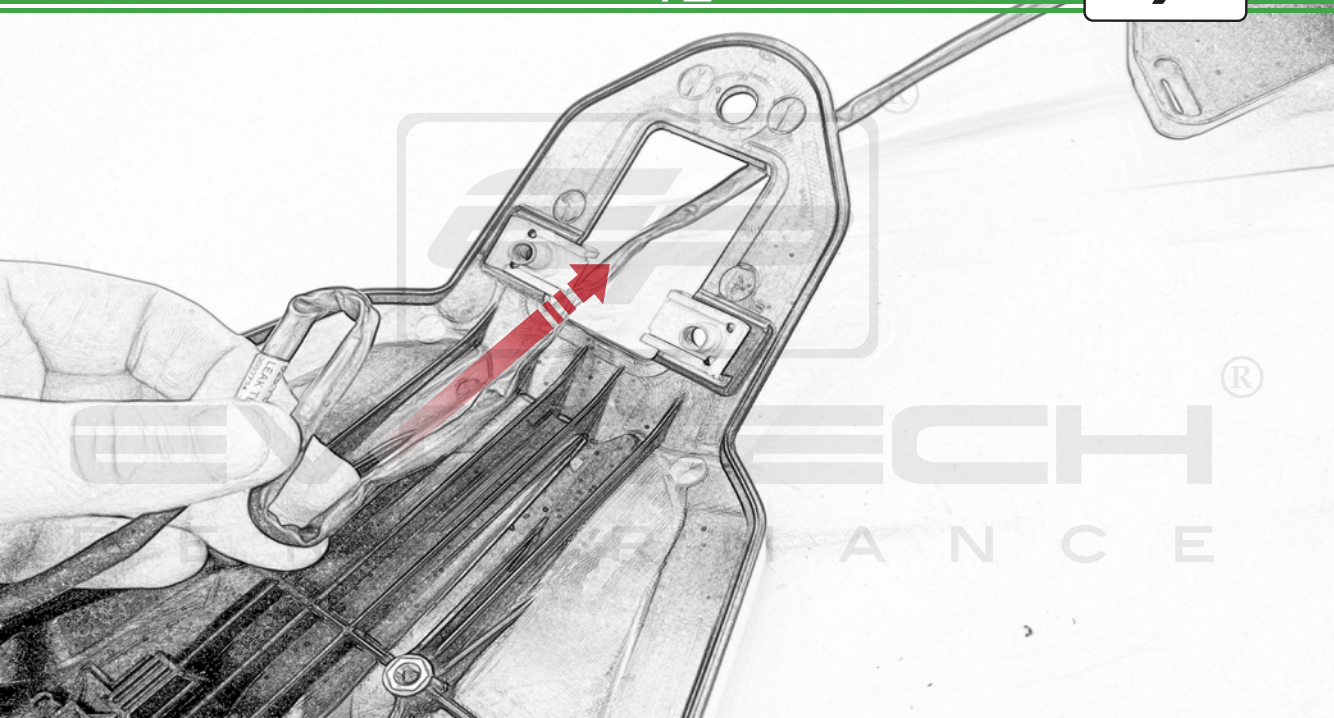

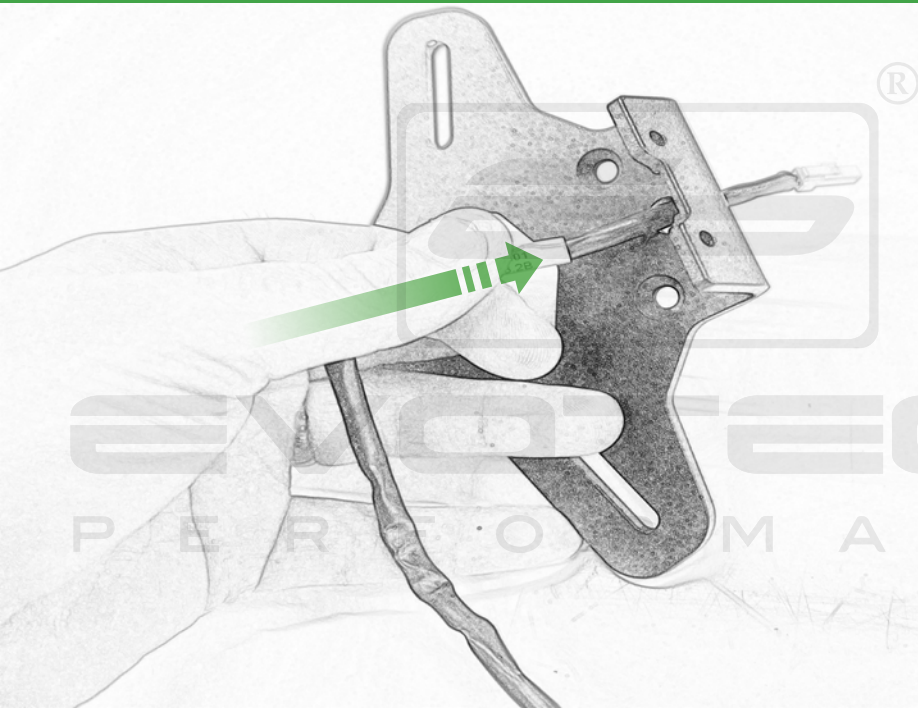


EP[®]
PERFORMANCE

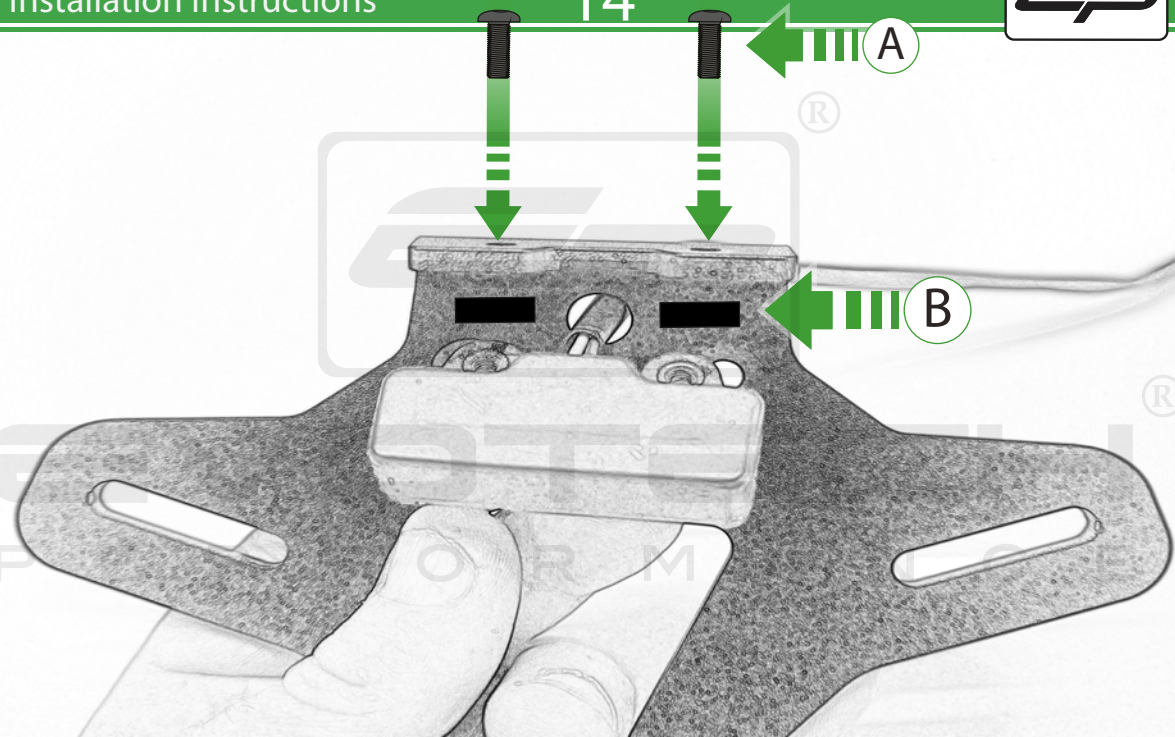



Repeat
Both Sides

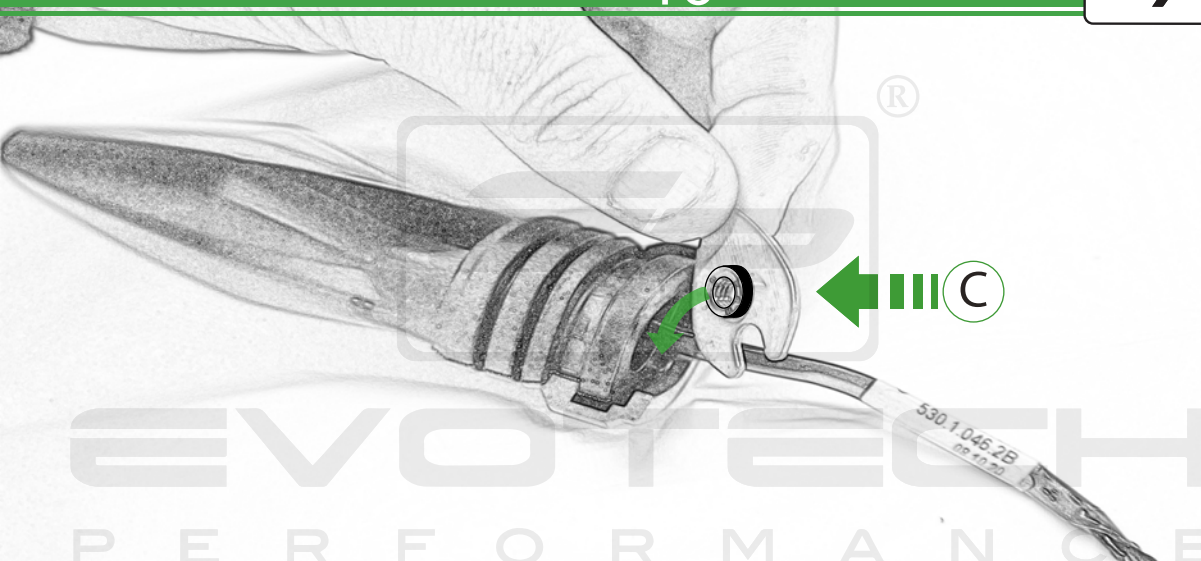


Repeat
Both Sides



Caution

Ensure the insert is
facing the indicator
on installation

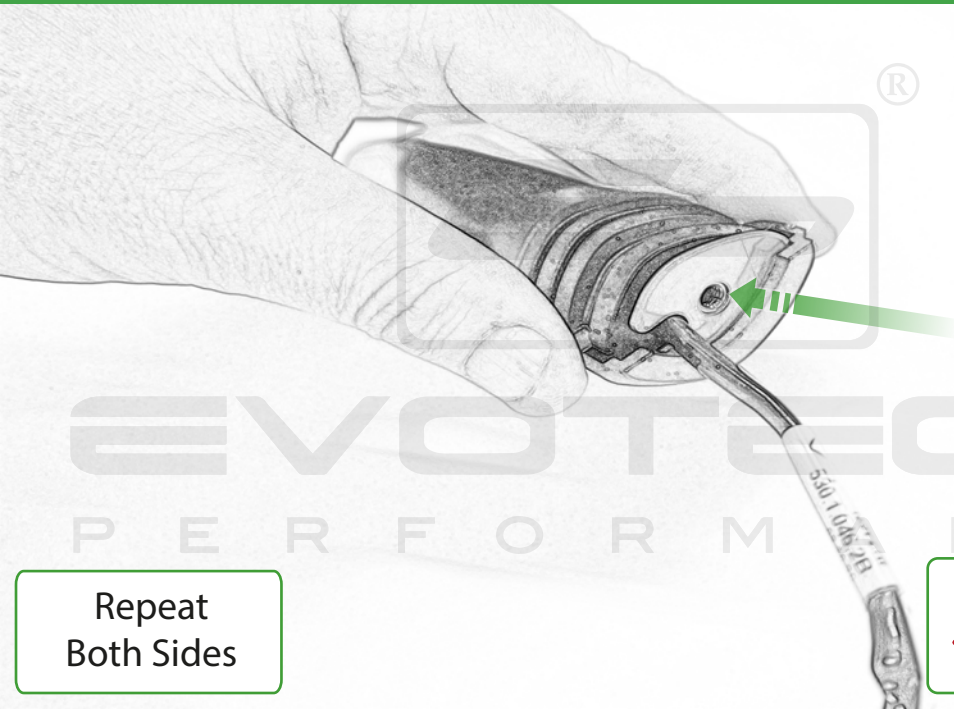


Repeat
Both Sides




Caution

Ensure the insert is
facing the indicator
on installation

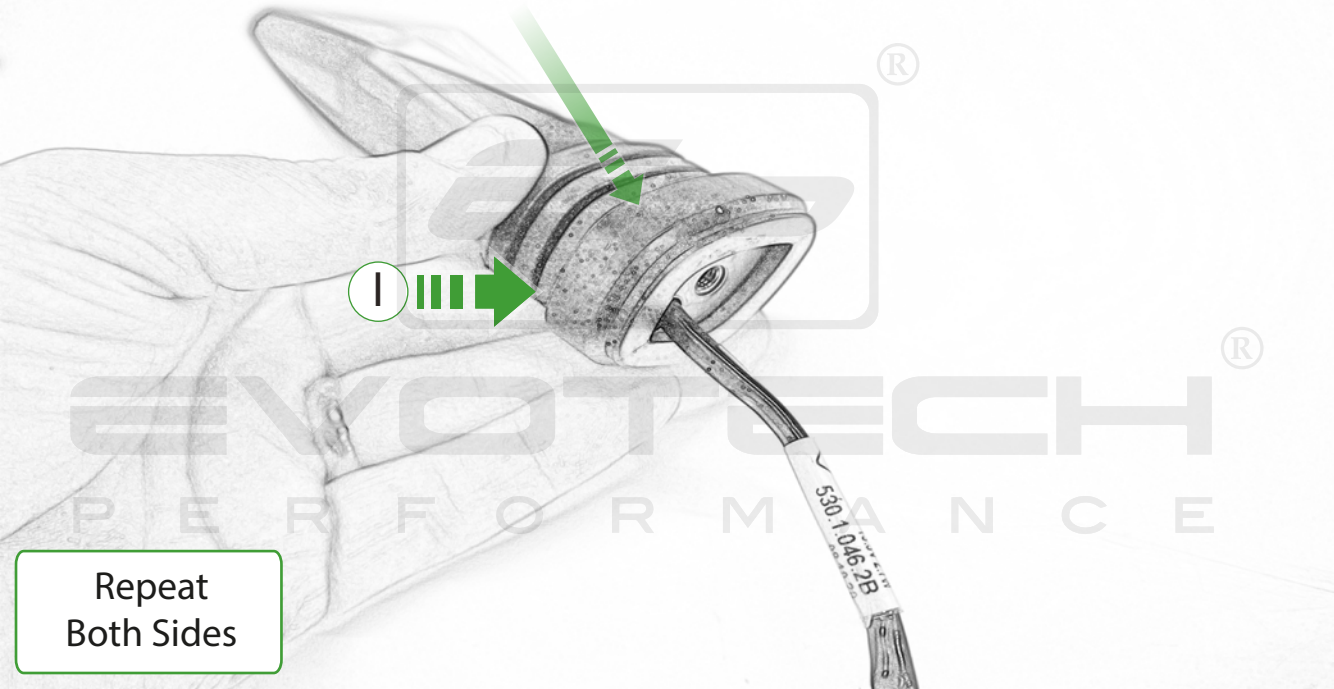


Repeat
Both Sides

530.1.046.2B
MADE IN USA

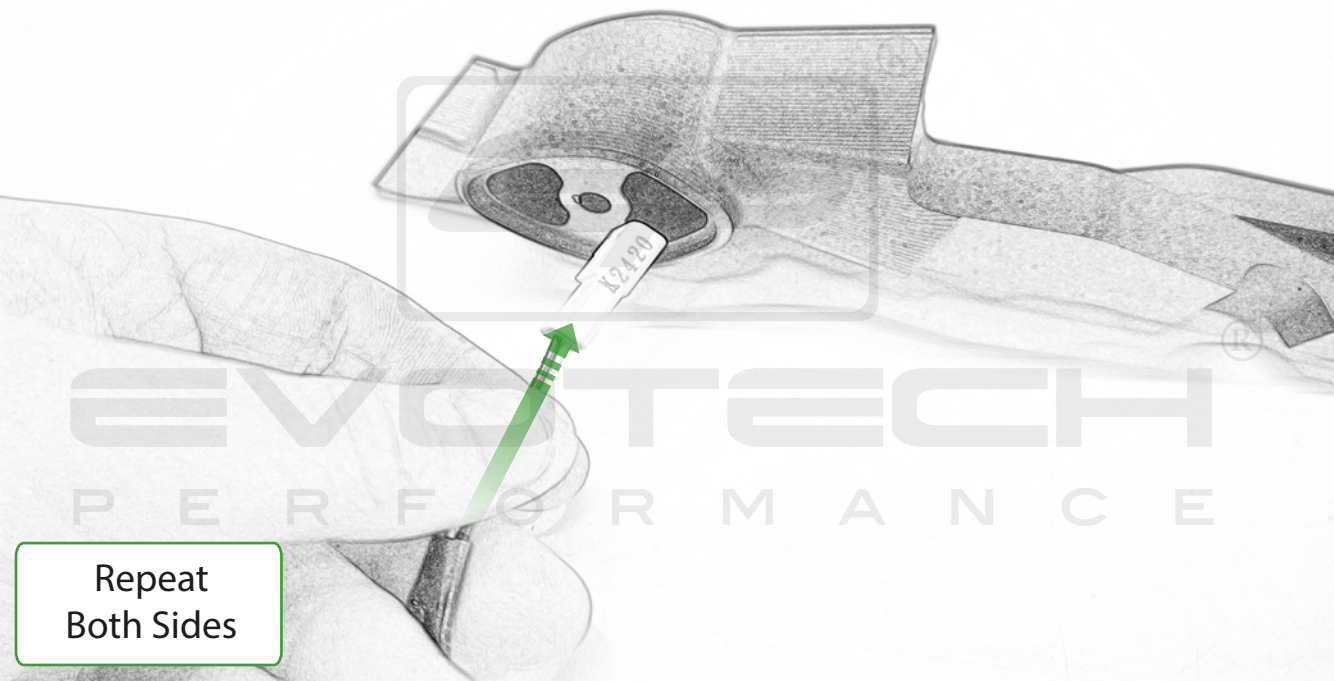

EVO TECH
P E R F O R M A N C E


Repeat
Both Sides


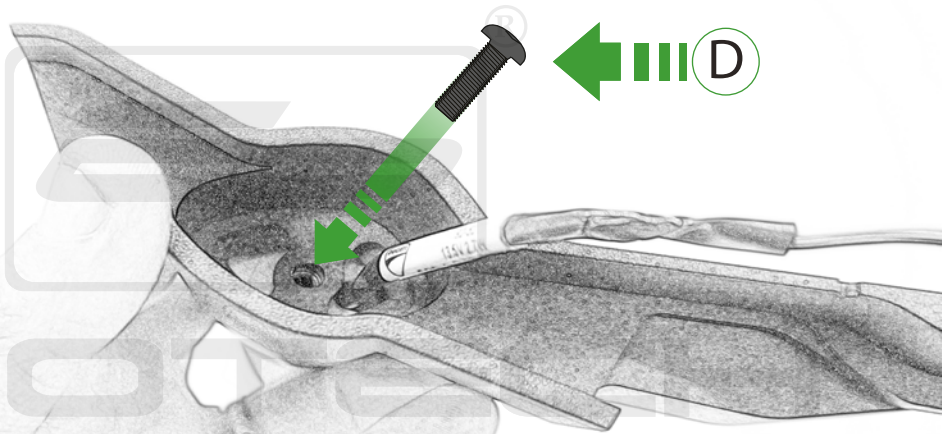


Repeat
Both Sides




E

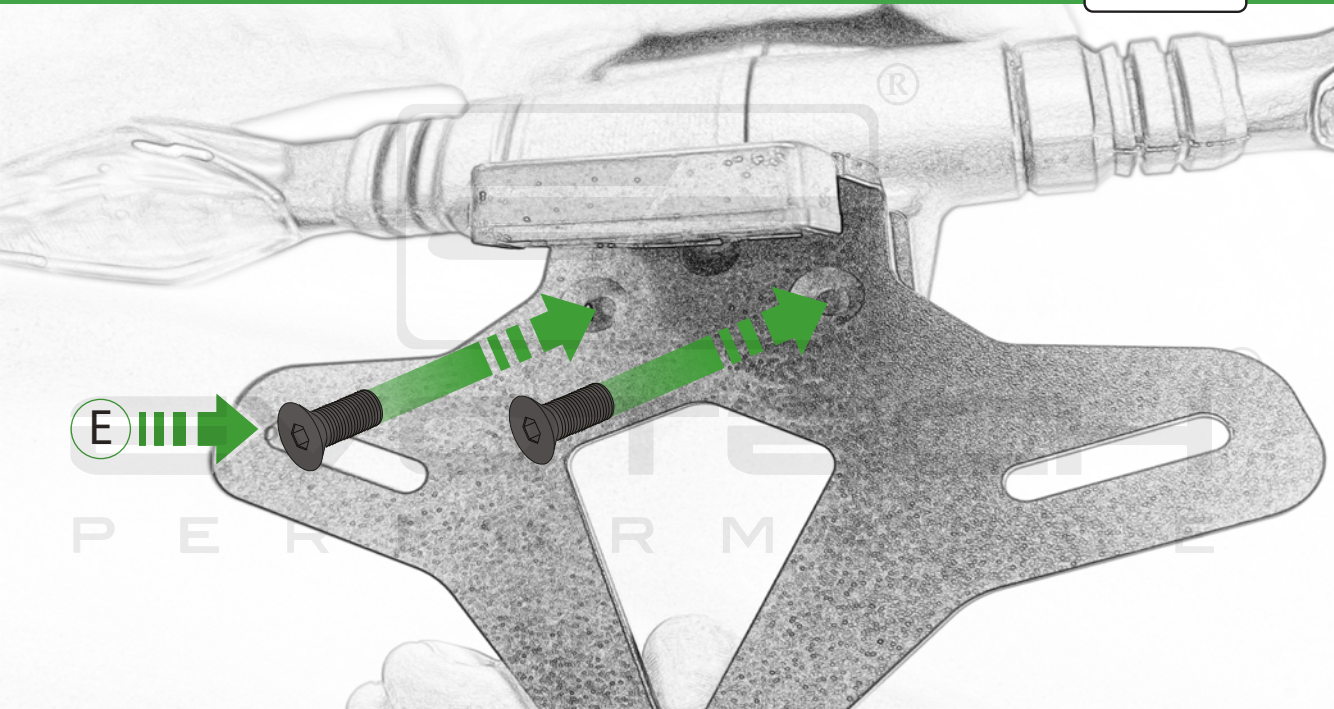

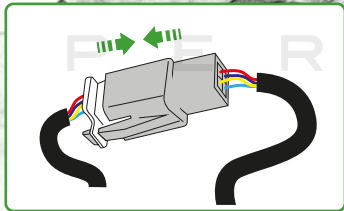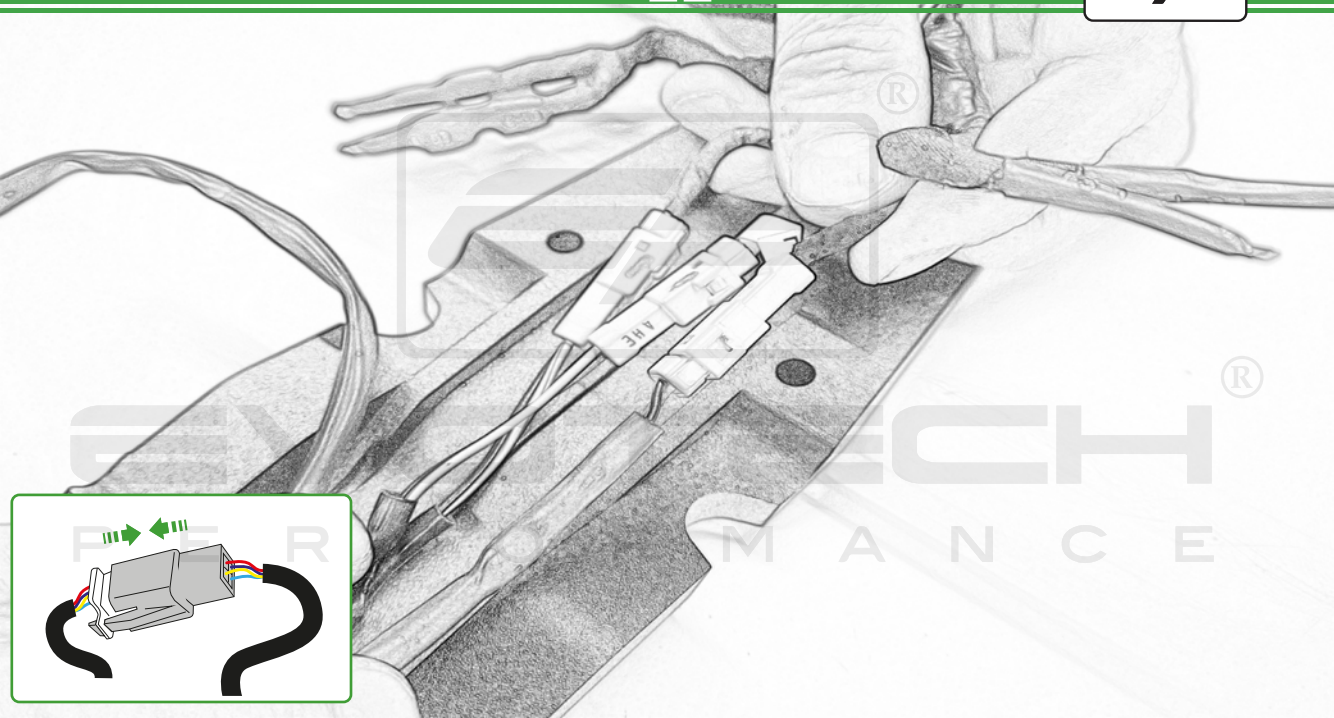

PERFORMANCE

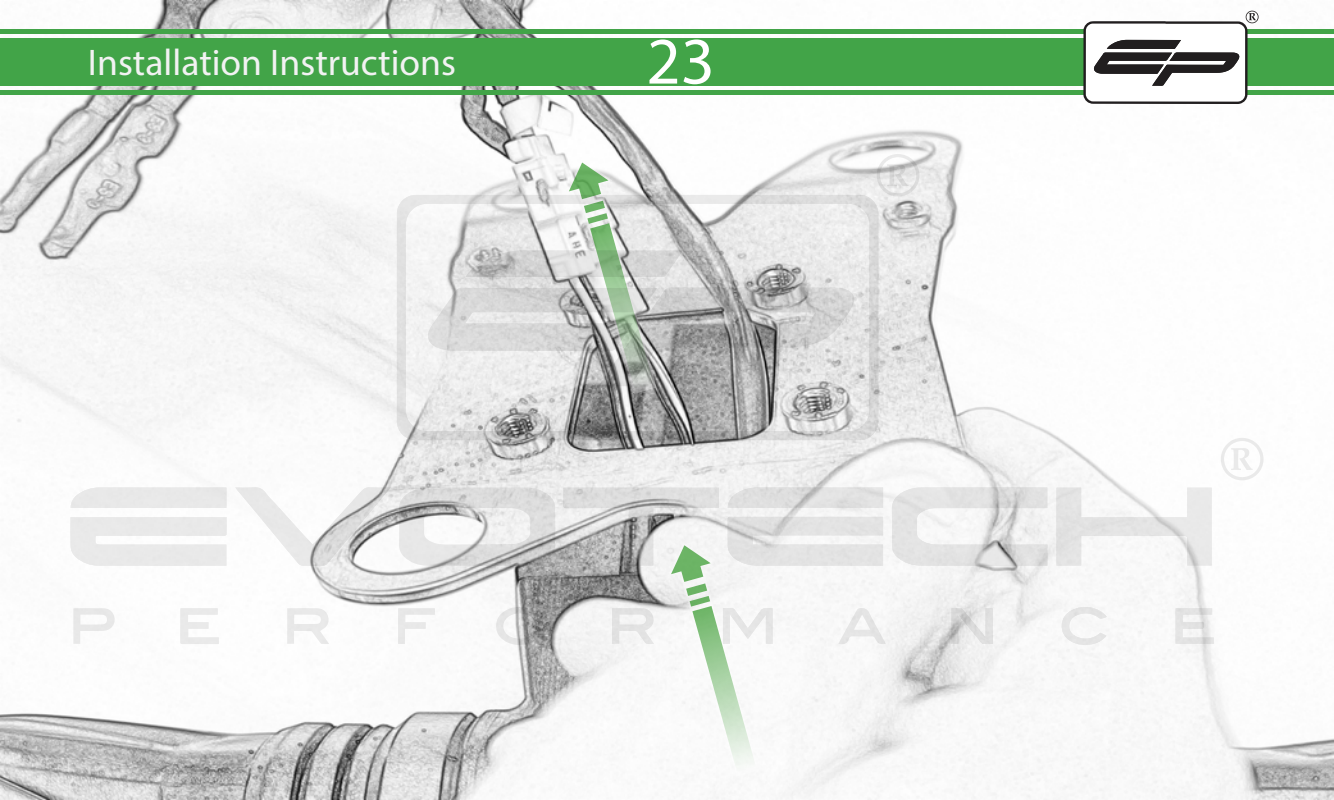



EVOTECH[®]
PERFORMANCE




F IIII →

← IIII L

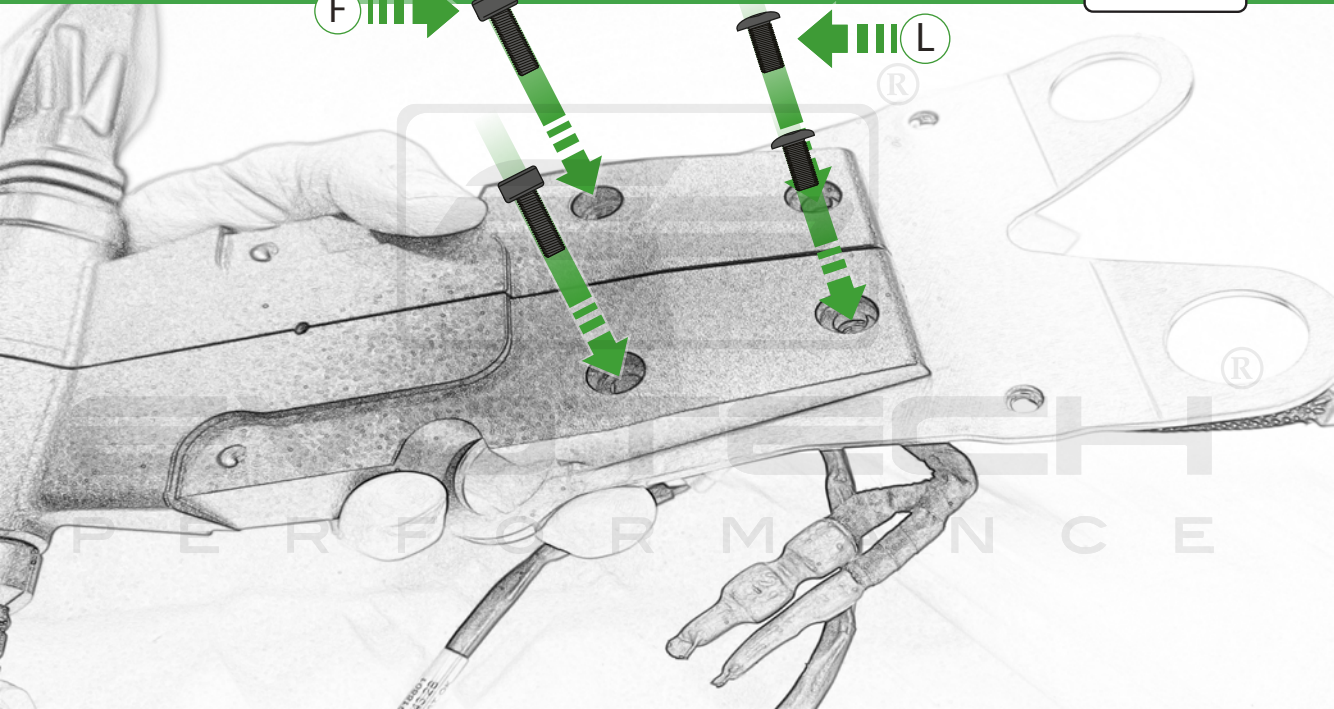


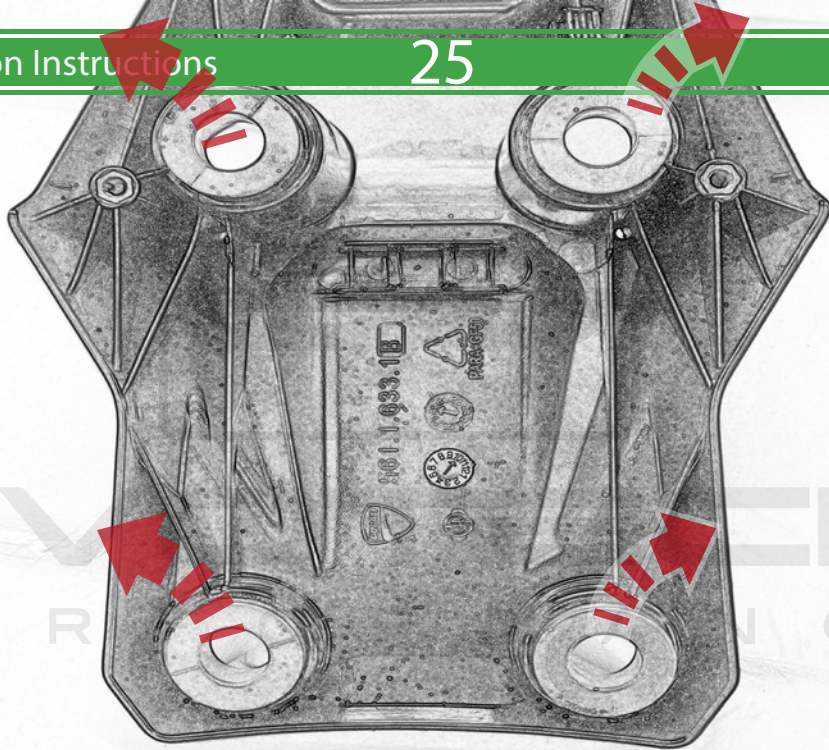



EVCH®
PERFORMANCE

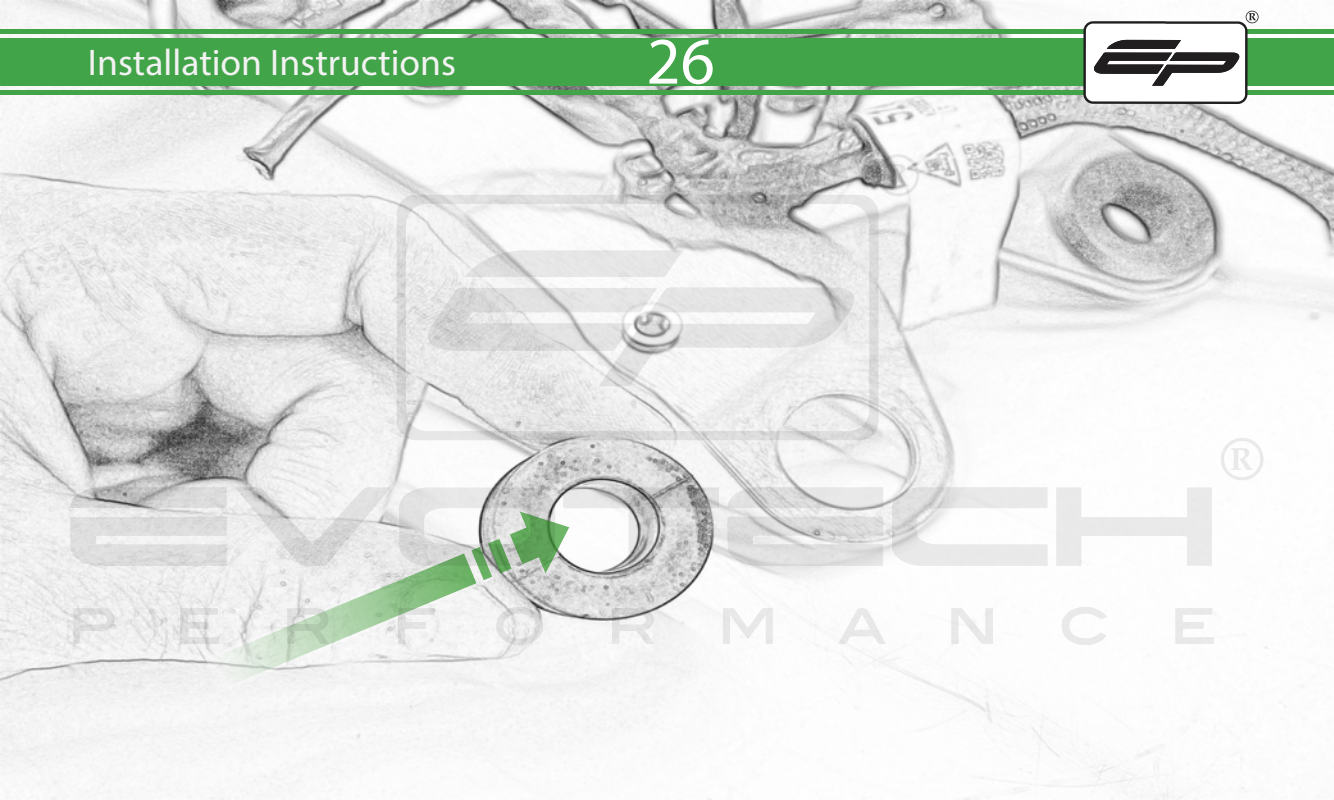

EVERATCH[®]
PERFORMANCE



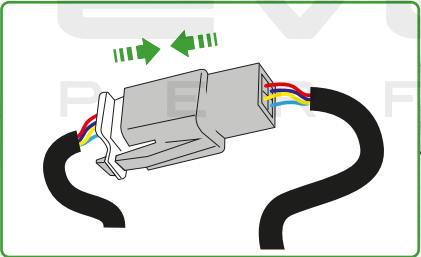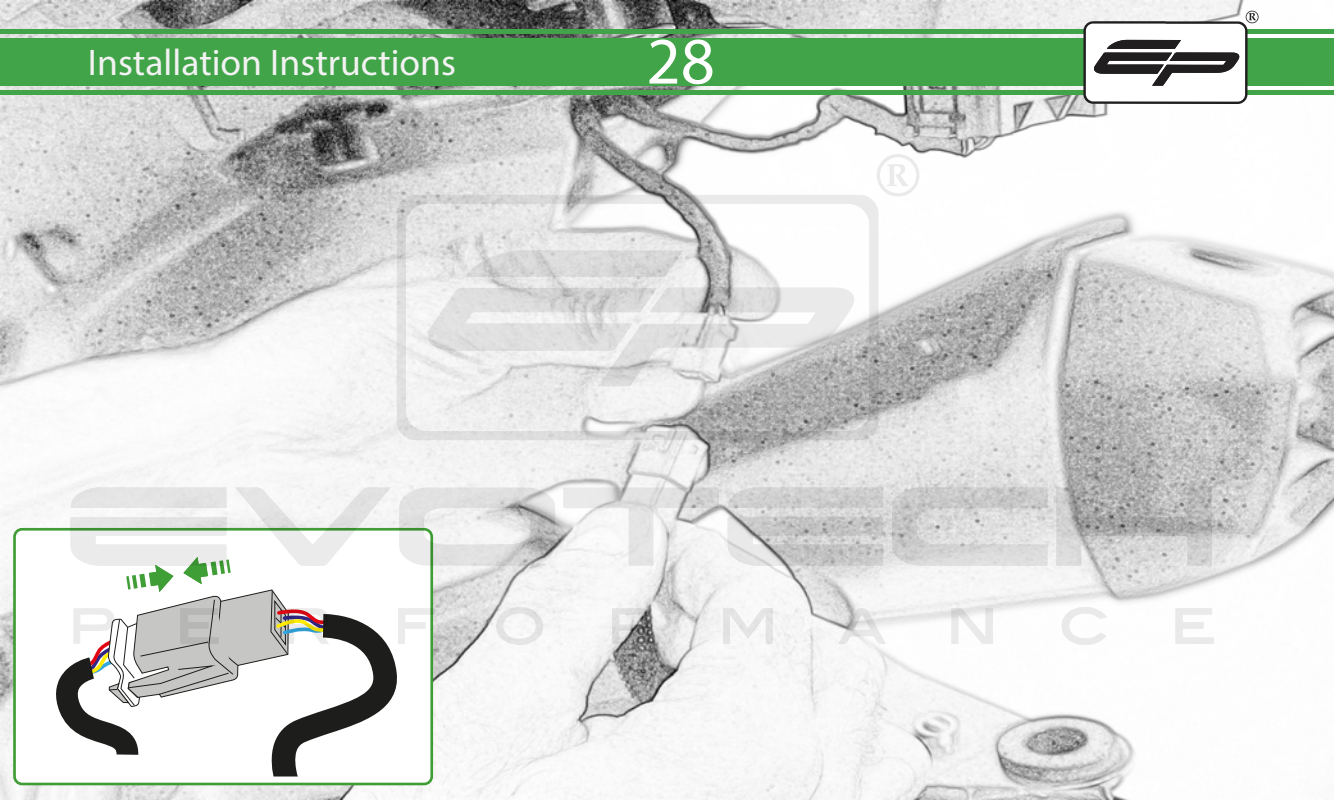

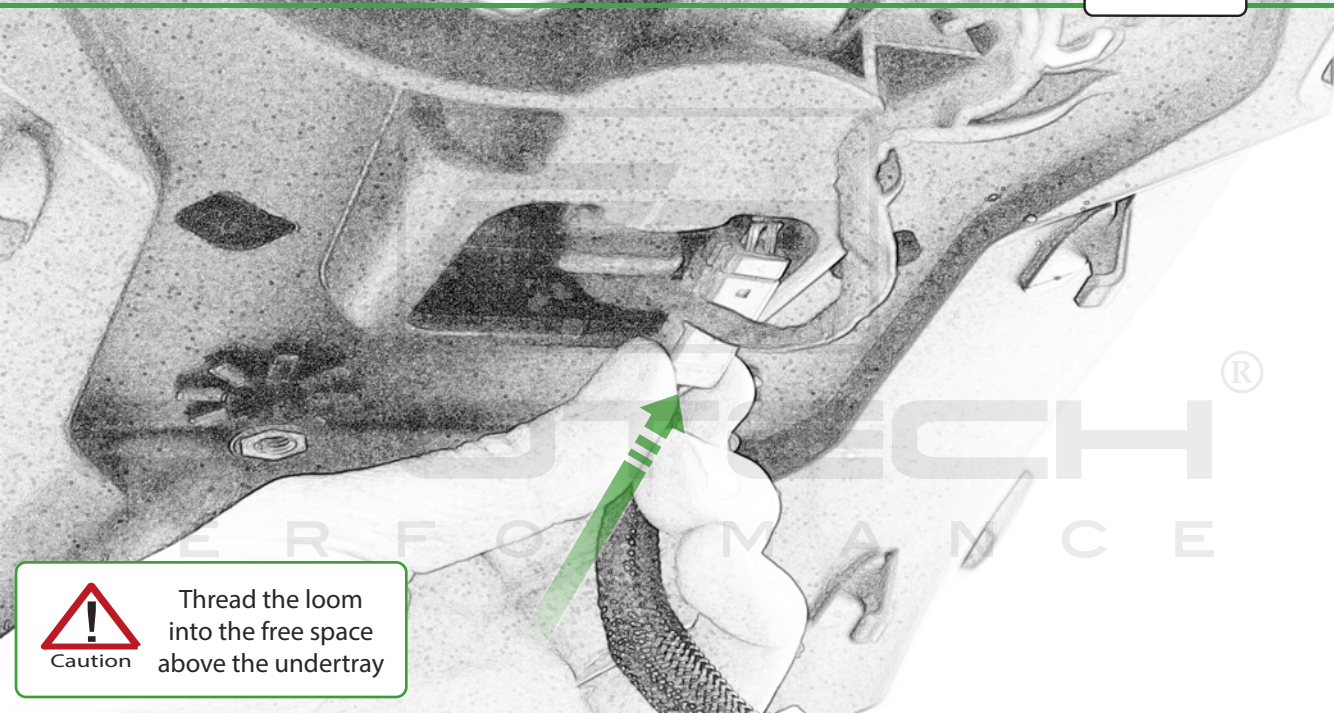


Caution

Thread the loom into the free space above the undertray




EP
PERFORMANCE

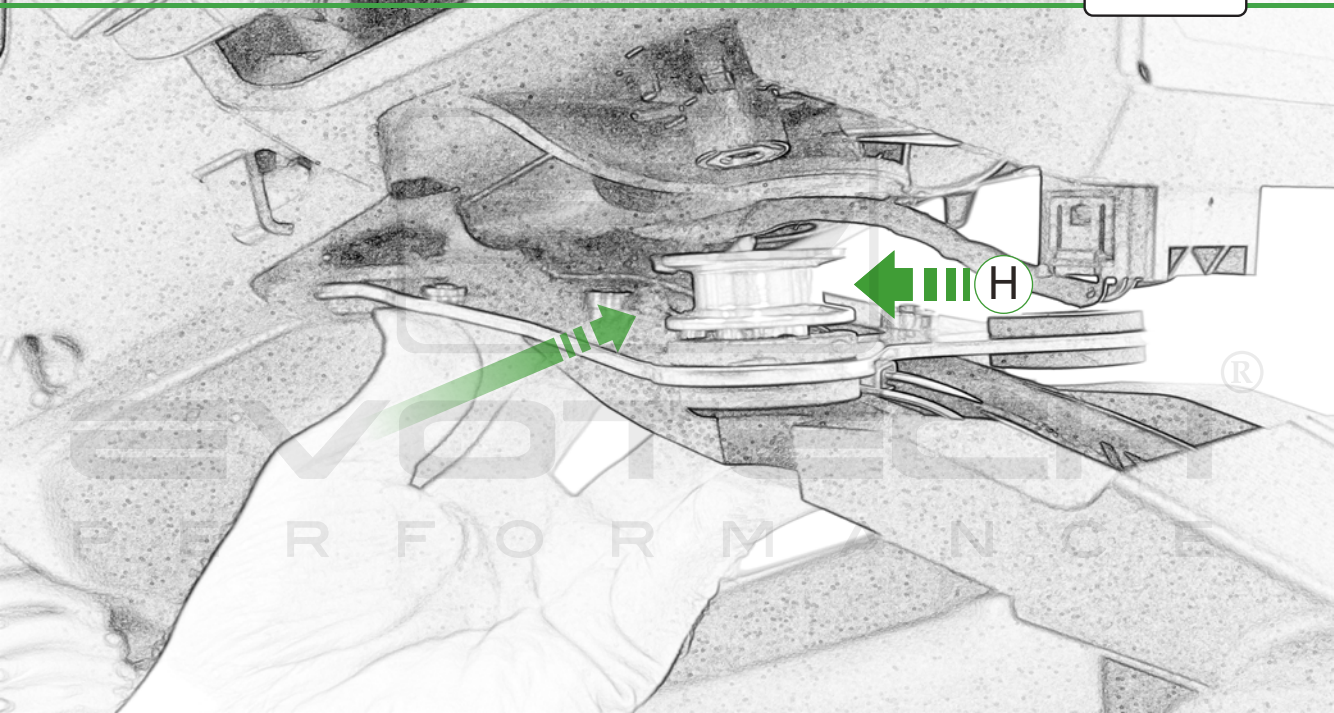

P E R F O R M A N C E



P E R F O R M A N C E

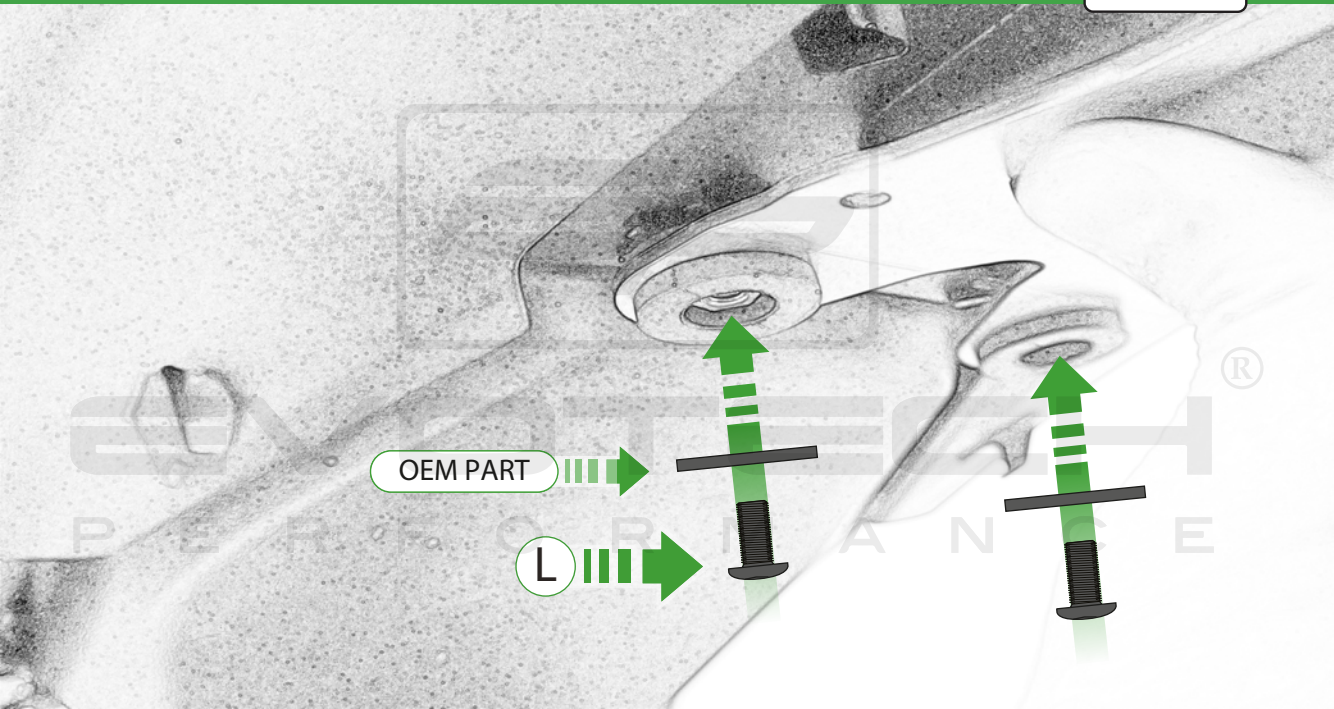


OEM PART



L




®

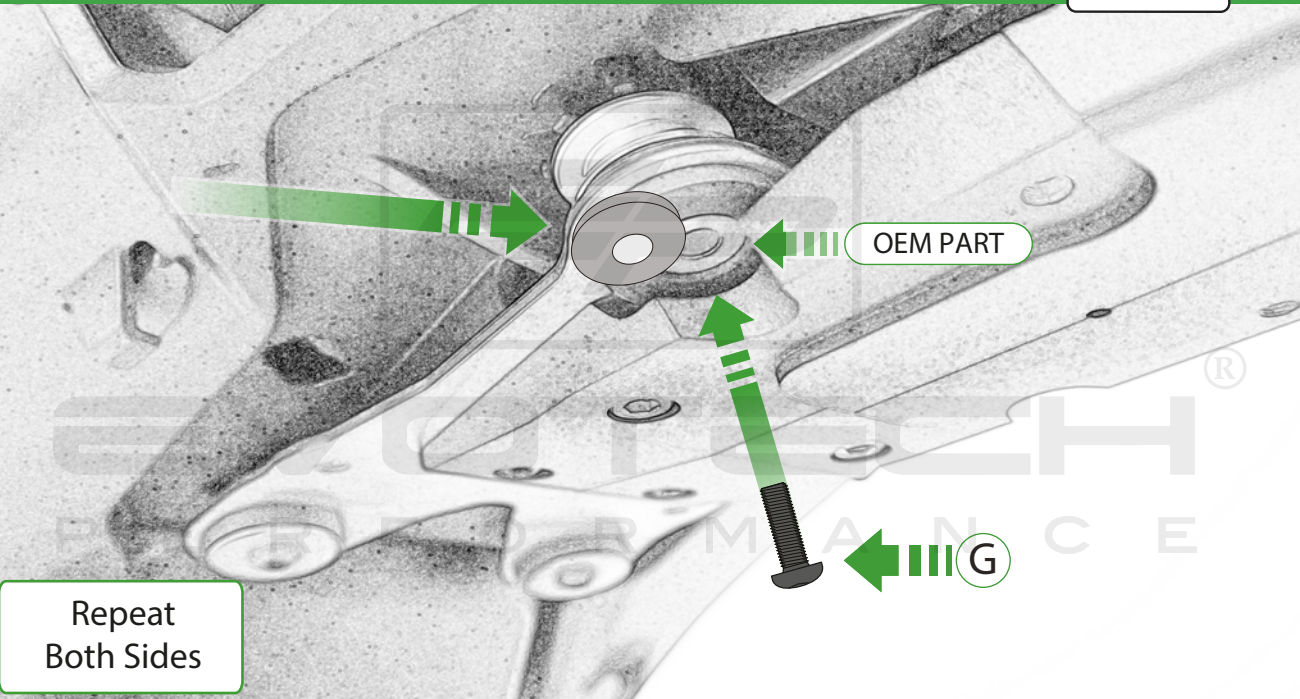




OEM PART

G


Repeat
Both Sides

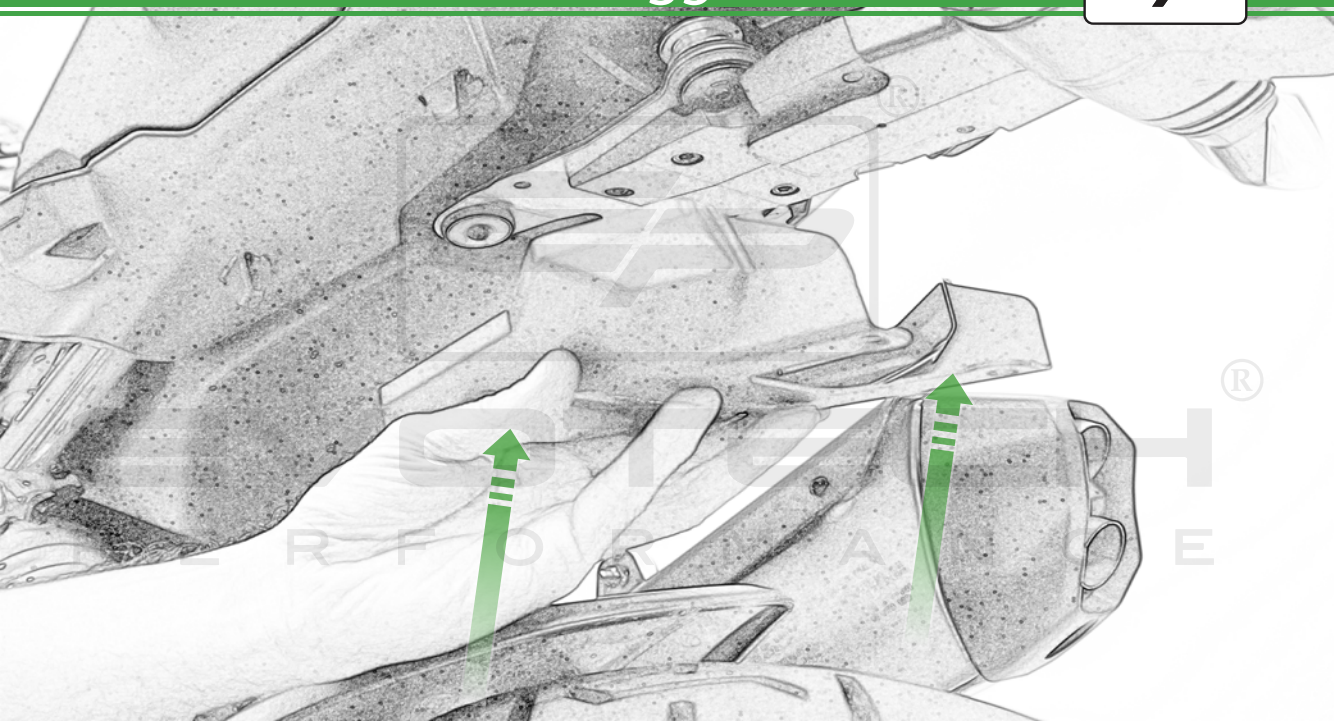

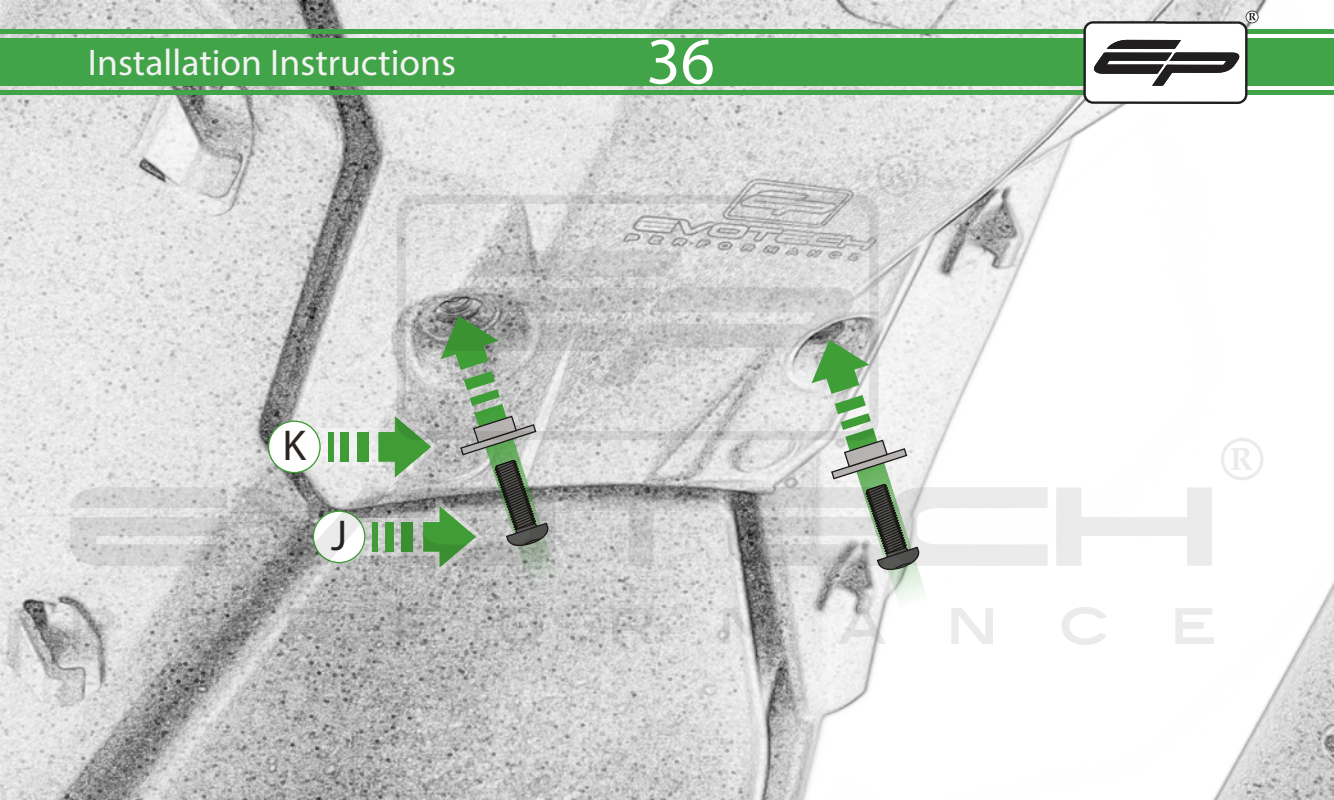

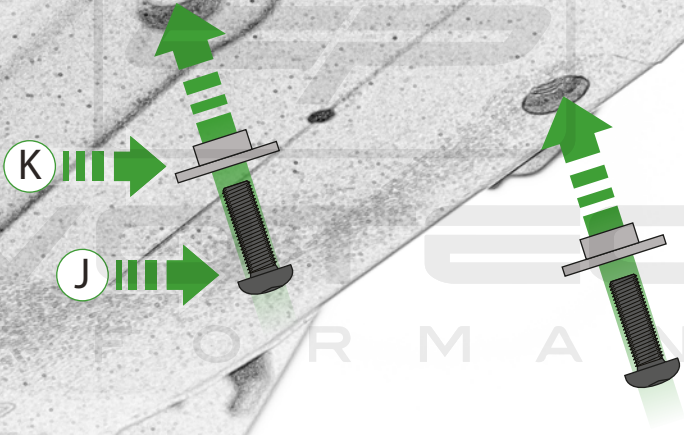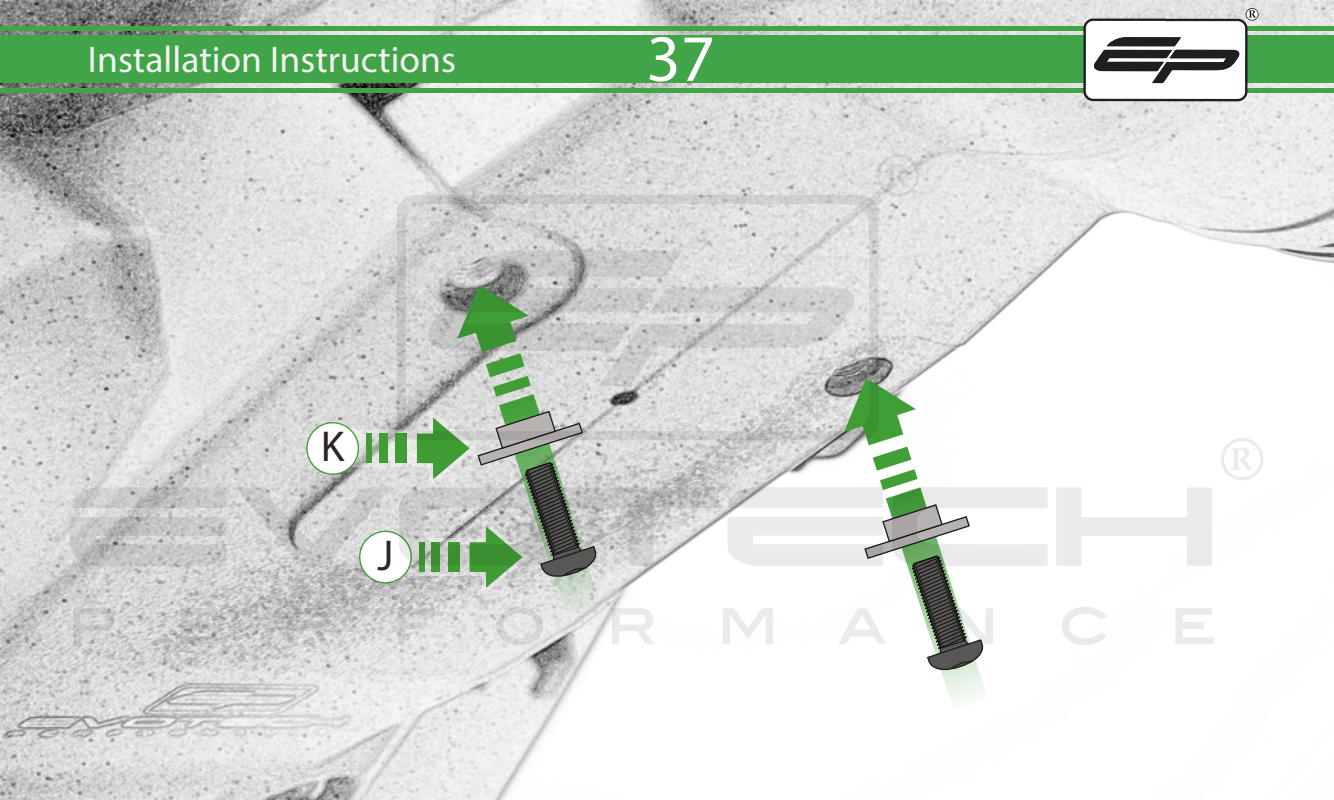


EPOCH[®]
PERFORMANCE

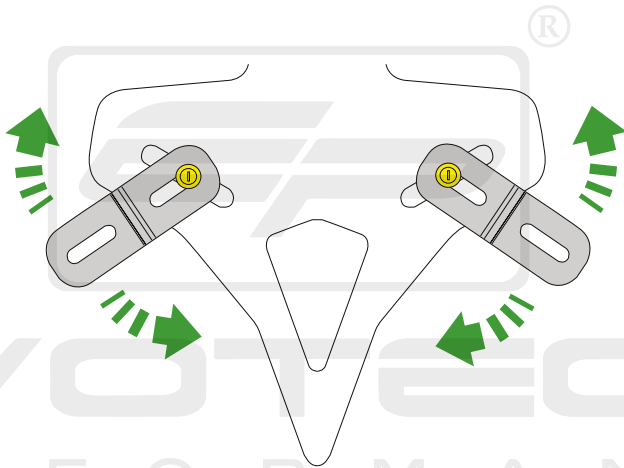

PERFORMANCE

Installation Instructions

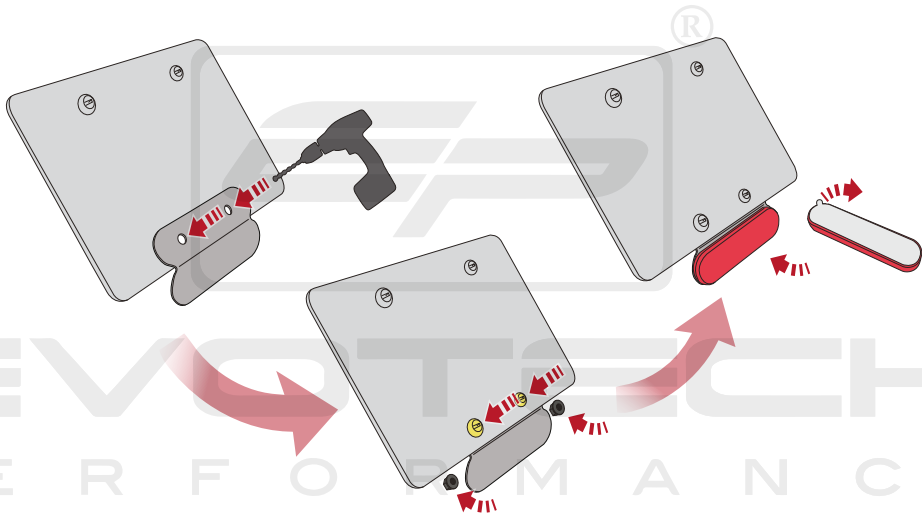



ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

EVOLUTION PERFORMANCE[®]



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com