



KTM 1290 Super Duke  
Rectifier Guard Pillion Peg Removal Kit


Installation Instructions





## Kit Contents PRN014515

- Ⓐ 2 x 1.5mm Spacer (Only used on pillion peg kit)
- Ⓑ 4 x M8 x 16mm Black Button Head Bolts
- Ⓒ 4 x M8 Washers



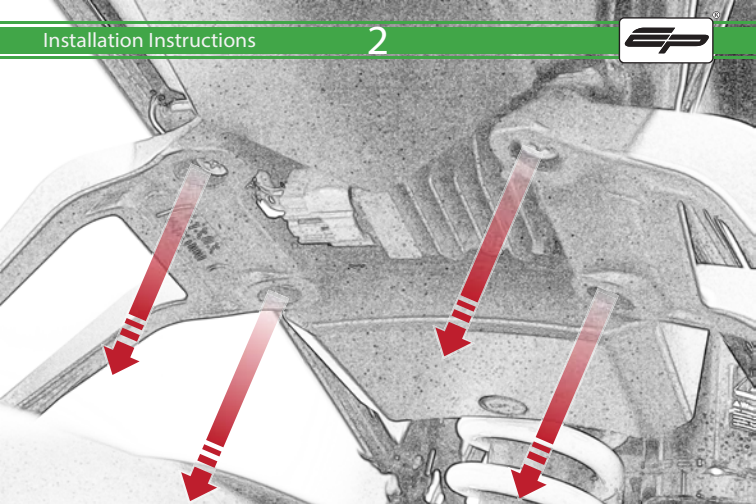

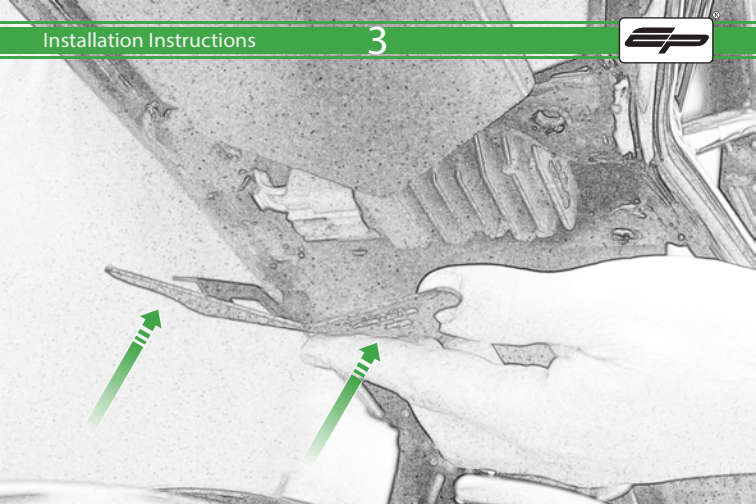


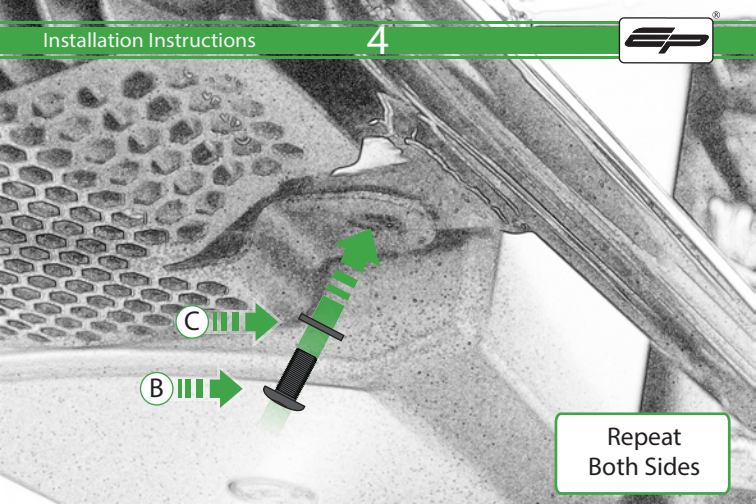

C

B

Repeat  
Both Sides

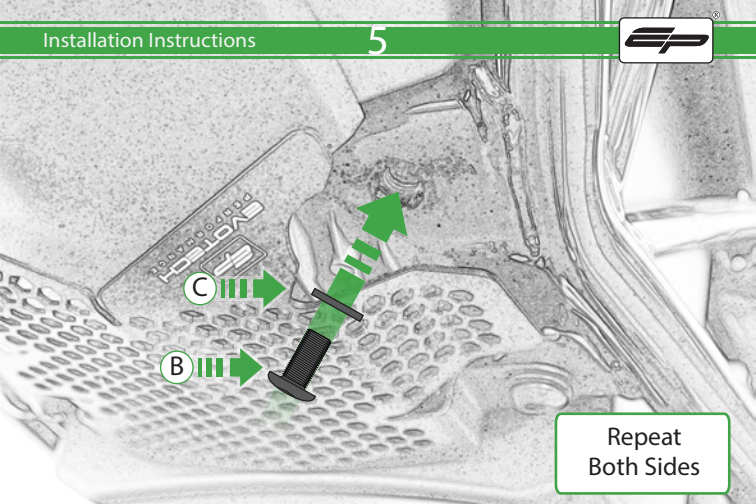

C

B

Repeat  
Both Sides



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)