



EVOTECH®
P E R F O R M A N C E

Installation Instructions





KAWASAKI VERSYS 650 CRASH PROTECTION

Product Reference - 12426

Kit Contents

- Ⓐ 1 x RH Bobbin Spacer (Shortest)
- Ⓑ 1 x LH Bobbin Spacer (Longest)
- Ⓒ 2 x Bobbin Heads
- Ⓓ 2 x Threaded Spindles
- Ⓔ 2 x M10 Washers
- Ⓕ 2 x M10 Nyloc Nuts

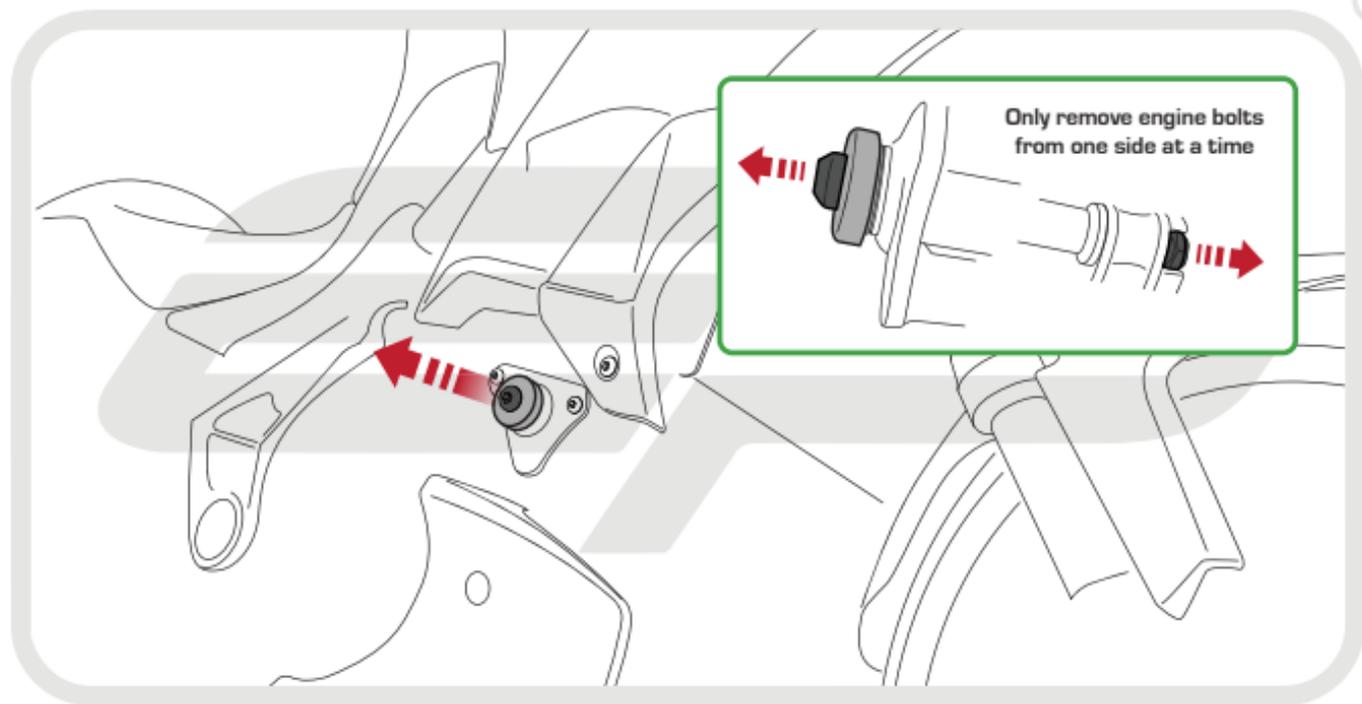

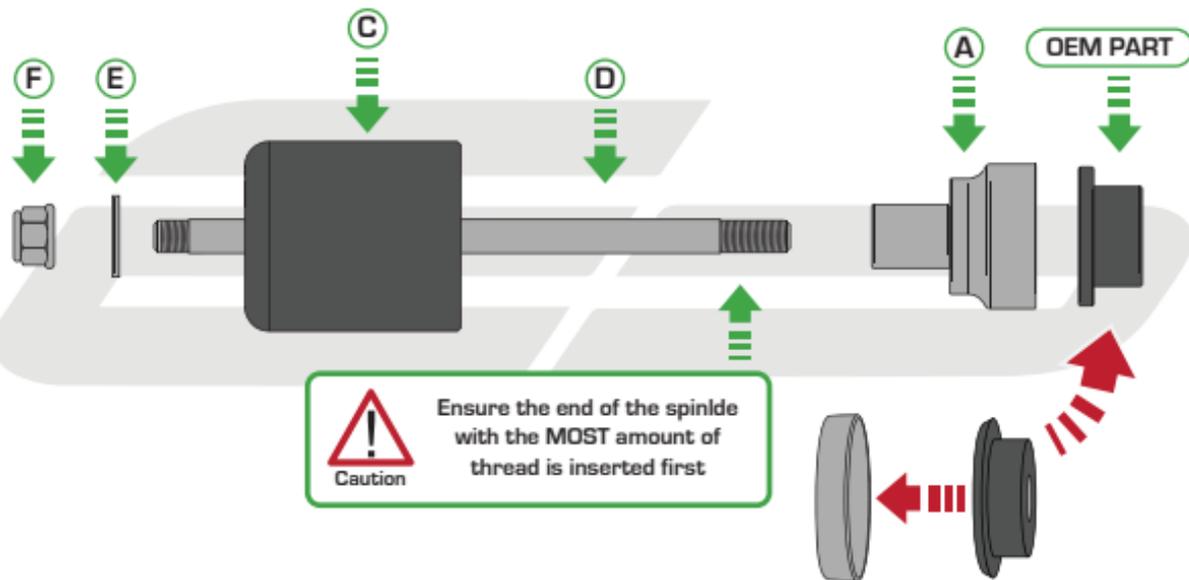





Caution


Manufacturers Torque
Specification
(Nm)

Refit original nut onto
end of new spindle

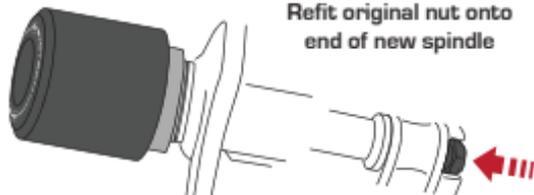


Only remove engine bolts
from one side at a time

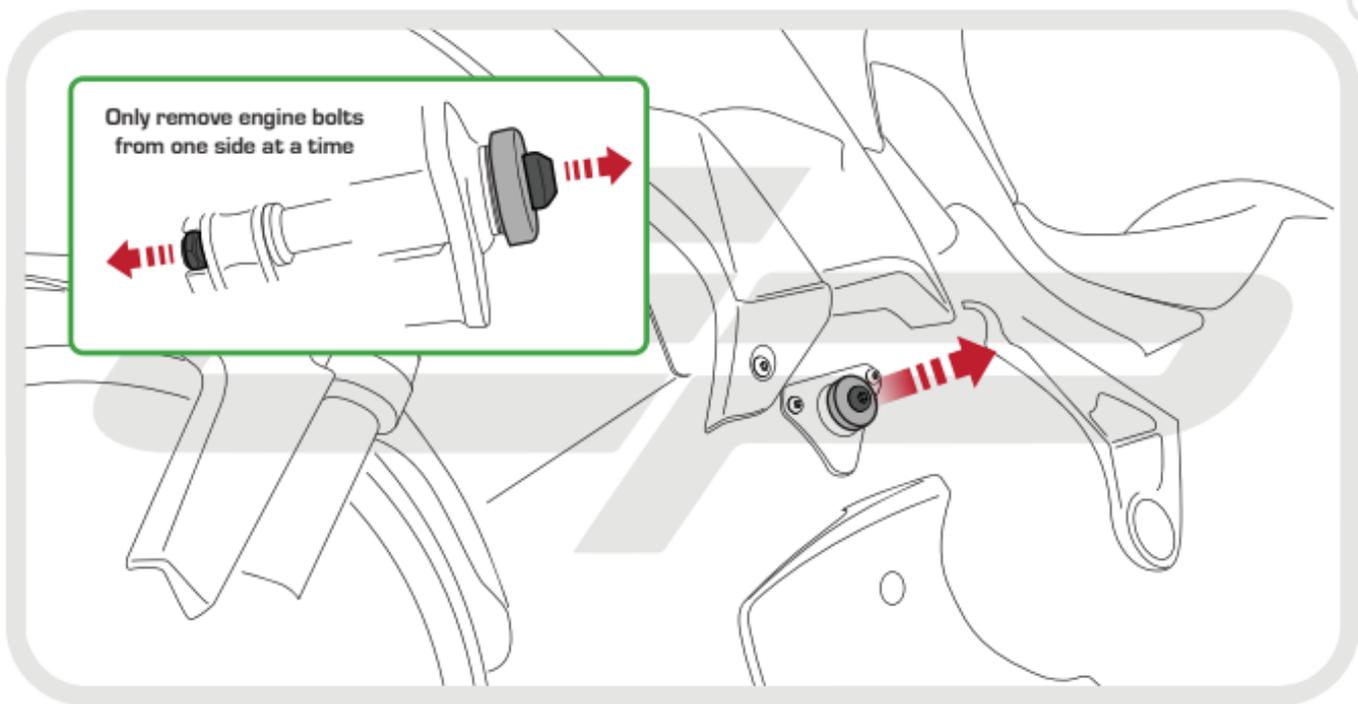


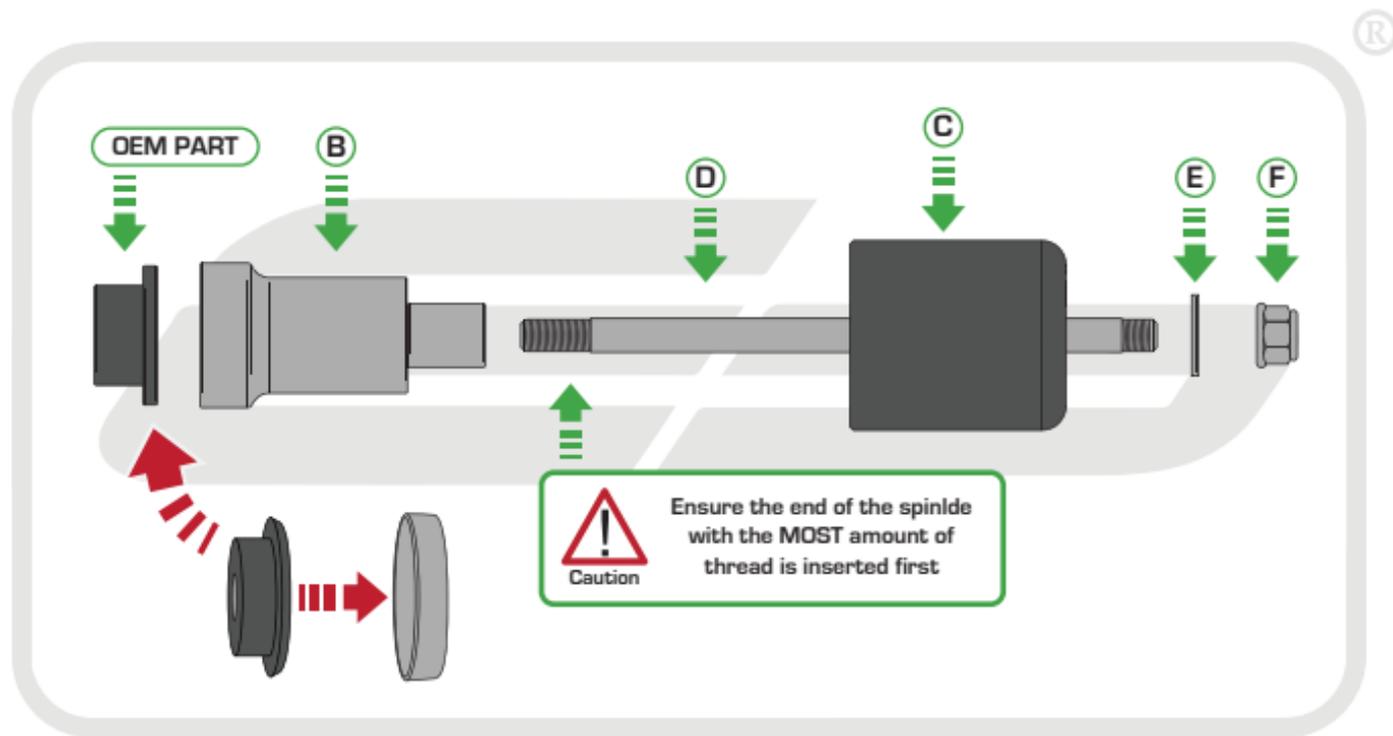

Refit original nut onto
end of new spindle

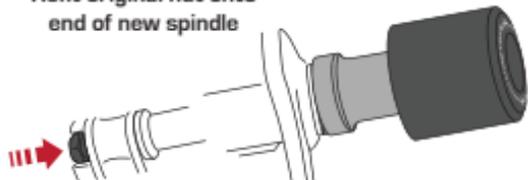

Manufacturers Torque
Specification
(Nm)

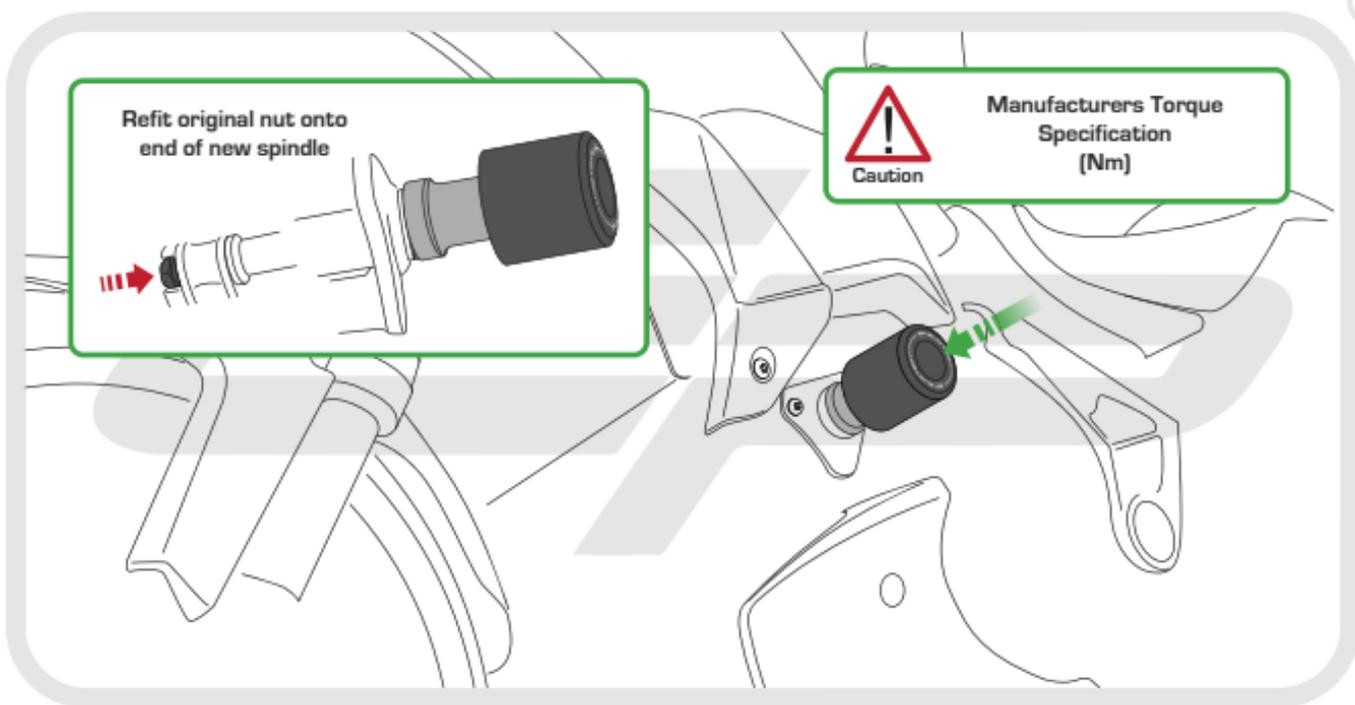



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com