



EVOTECH®
P E R F O R M A N C E

Installation Instructions






SUZUKI GSX-S 1000 F CRASH PROTECTION


Product Reference - 12750

Kit Contents

- A** 1 x RH Bobbin Spacer
- B** 1 x LH Bobbin Spacer
- C** 1 x M10 - 110 x 1.25 Cap Head Bolt
- D** 1 x M10 - 100 x 1.25 Cap Head Bolt
- E** 2 x Bobbin Heads
- F** 2 x Impact Absorbing Washers
- G** 2 x M10 Washers

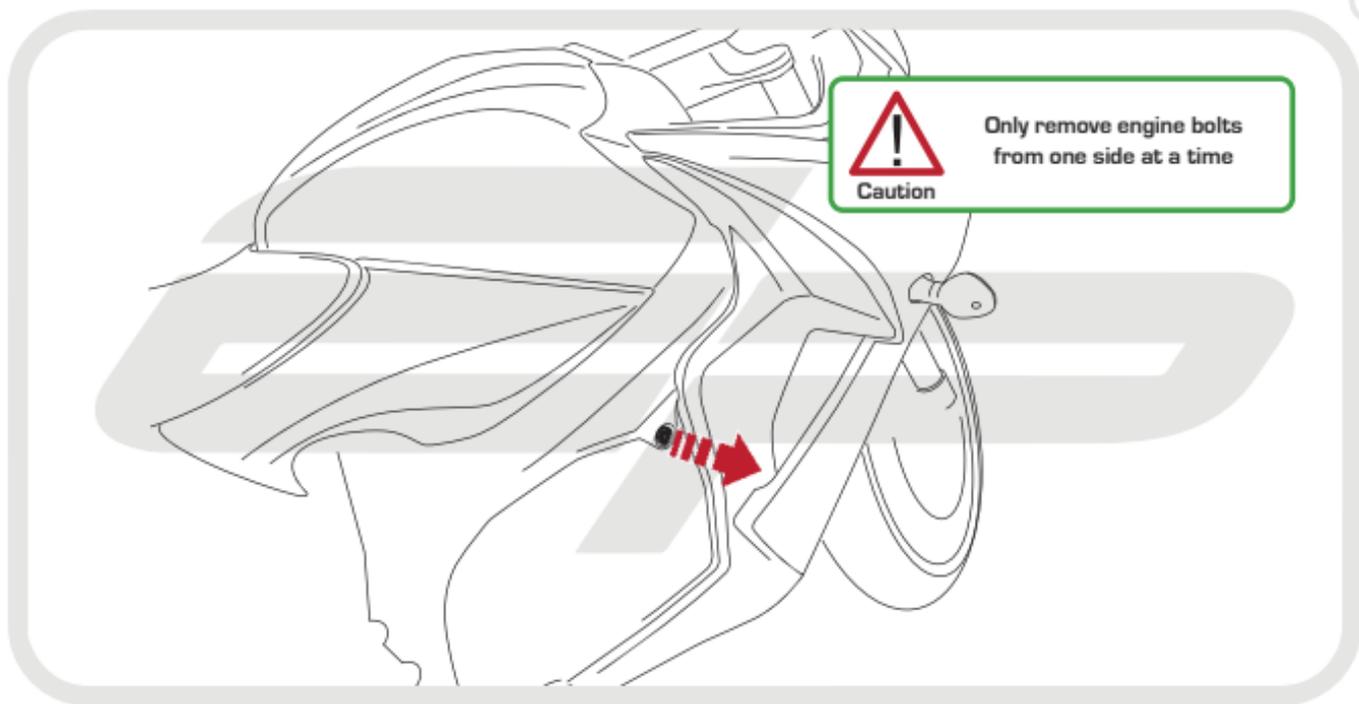

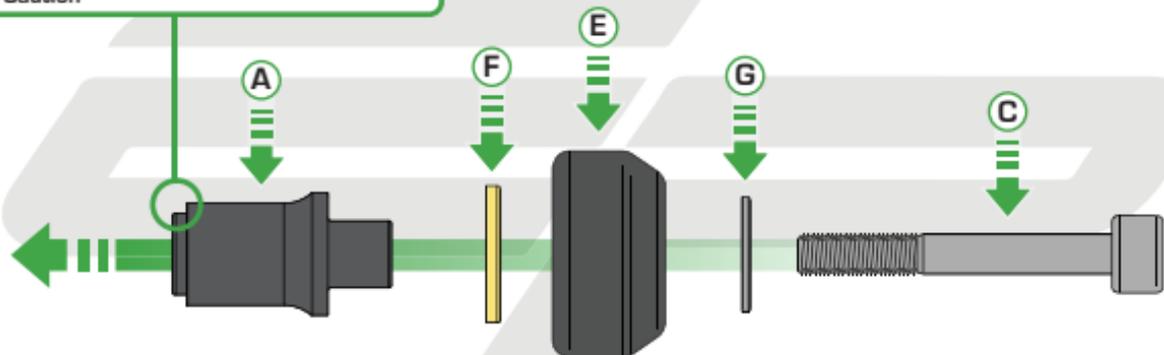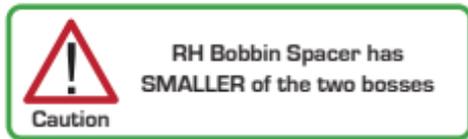

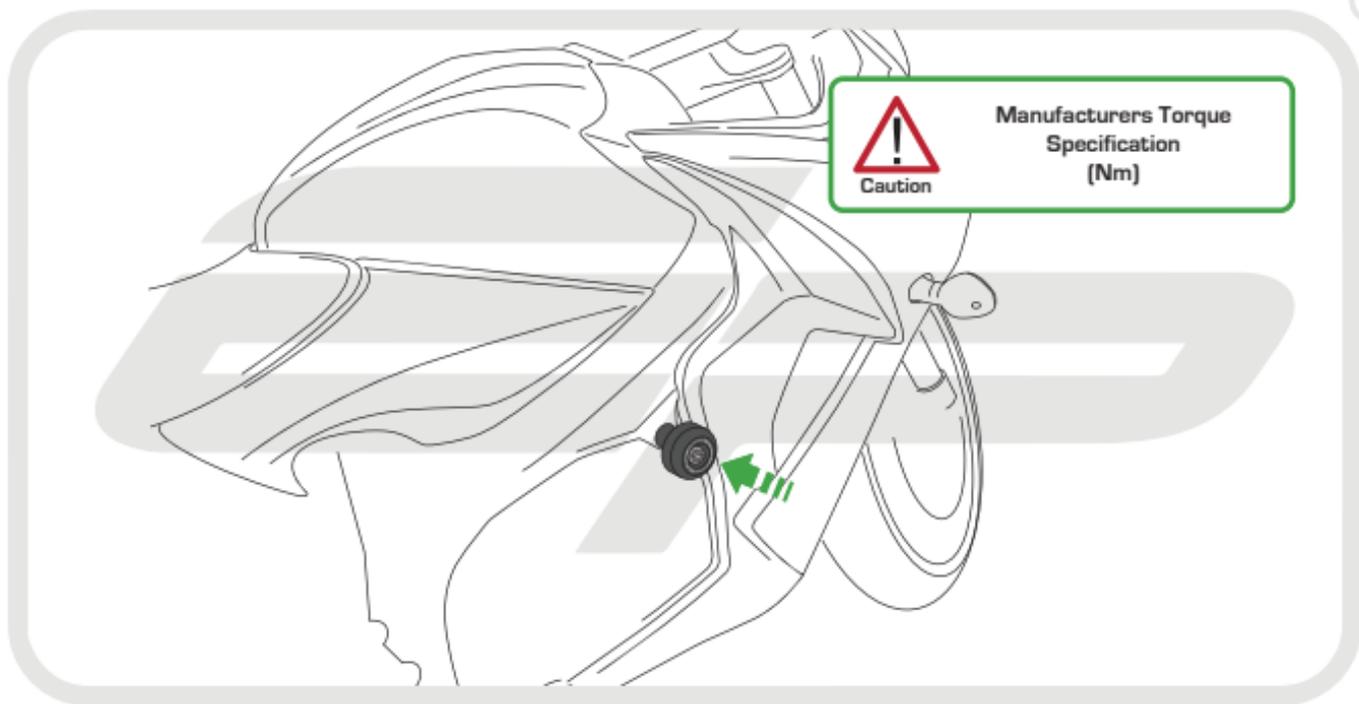




Caution

Only remove engine bolts
from one side at a time




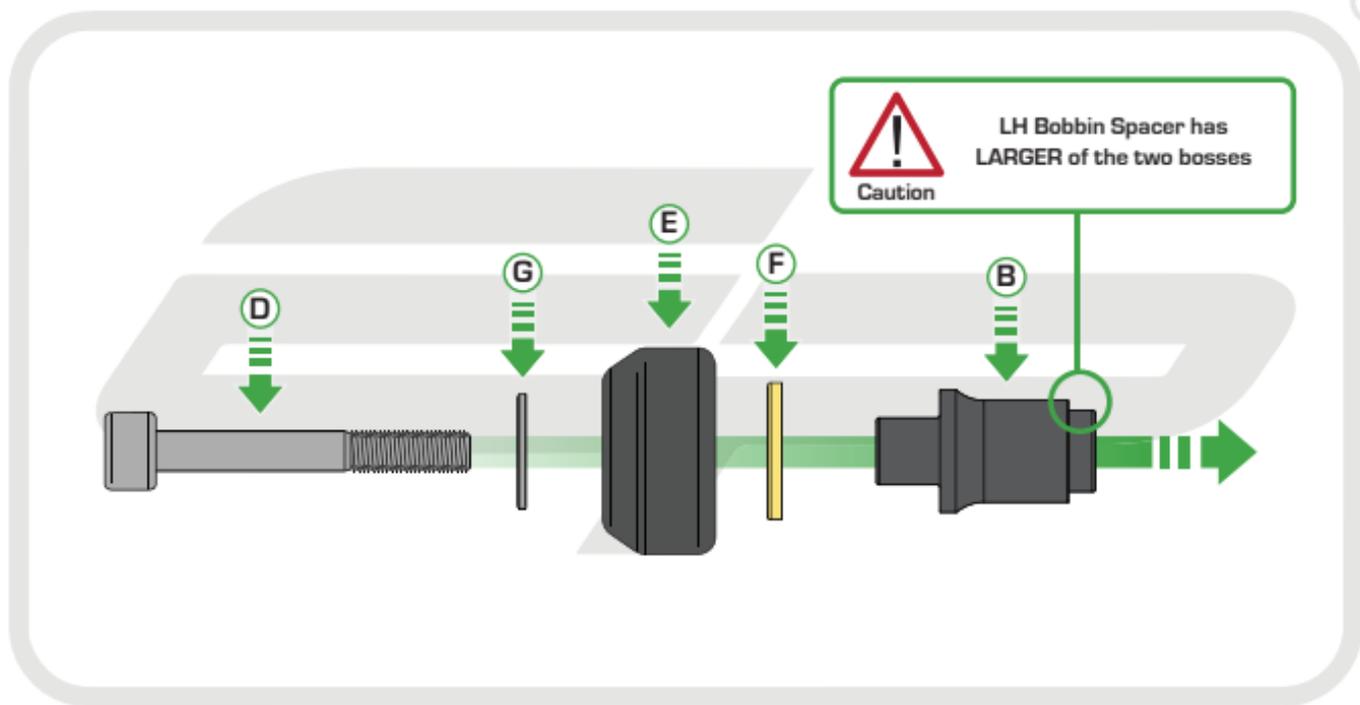



Caution

Manufacturers Torque
Specification
(Nm)

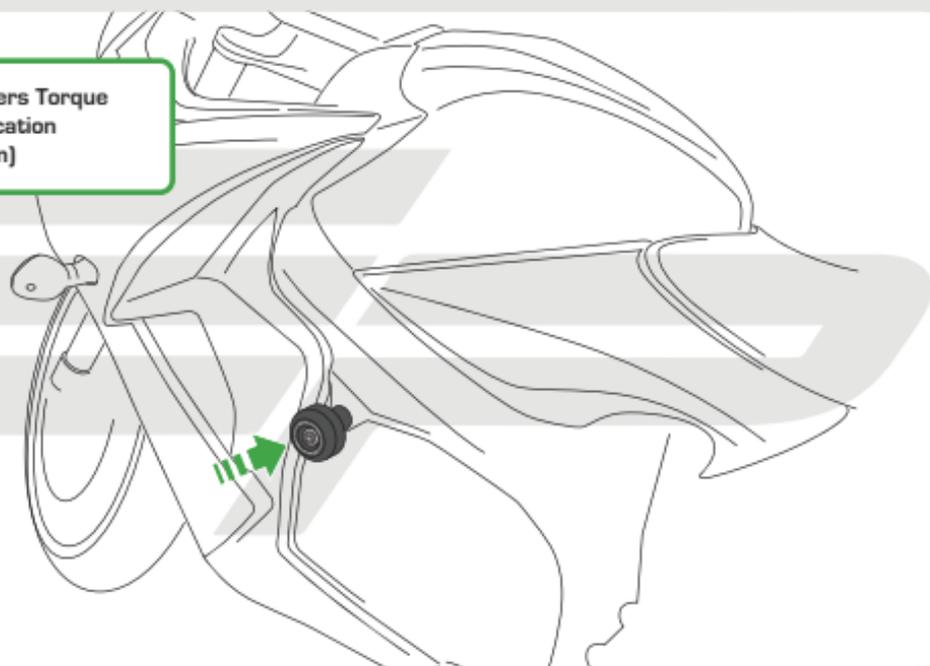



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com