



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Triumph Speed Triple RS Tail Tidy


Installation Instructions





Kit Contents PRN015492


- (A) 2 x M6 x 60 Button Head Bolts
- (B) 4 x M4 x 5 Button Head Bolts
- (C) 4 x M6 x 16 Button Head Bolts
- (D) 6 x M6 x 12 Button Head Bolts

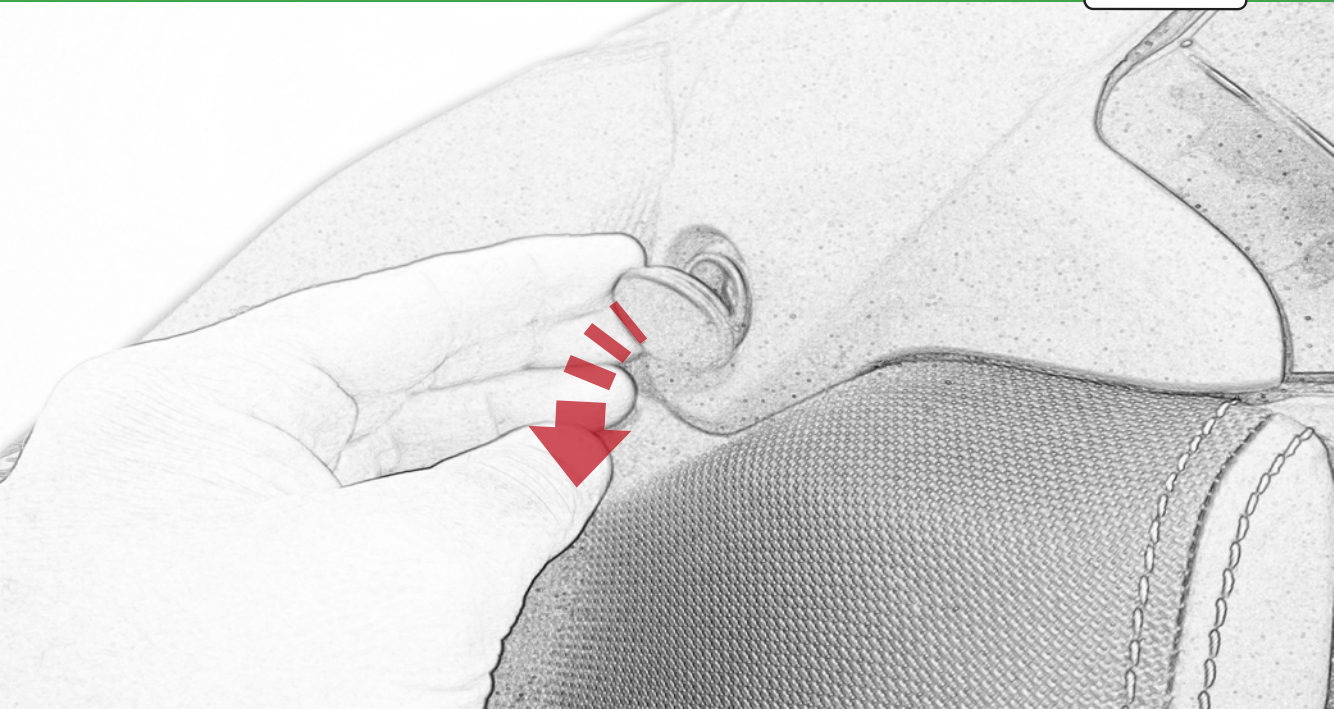

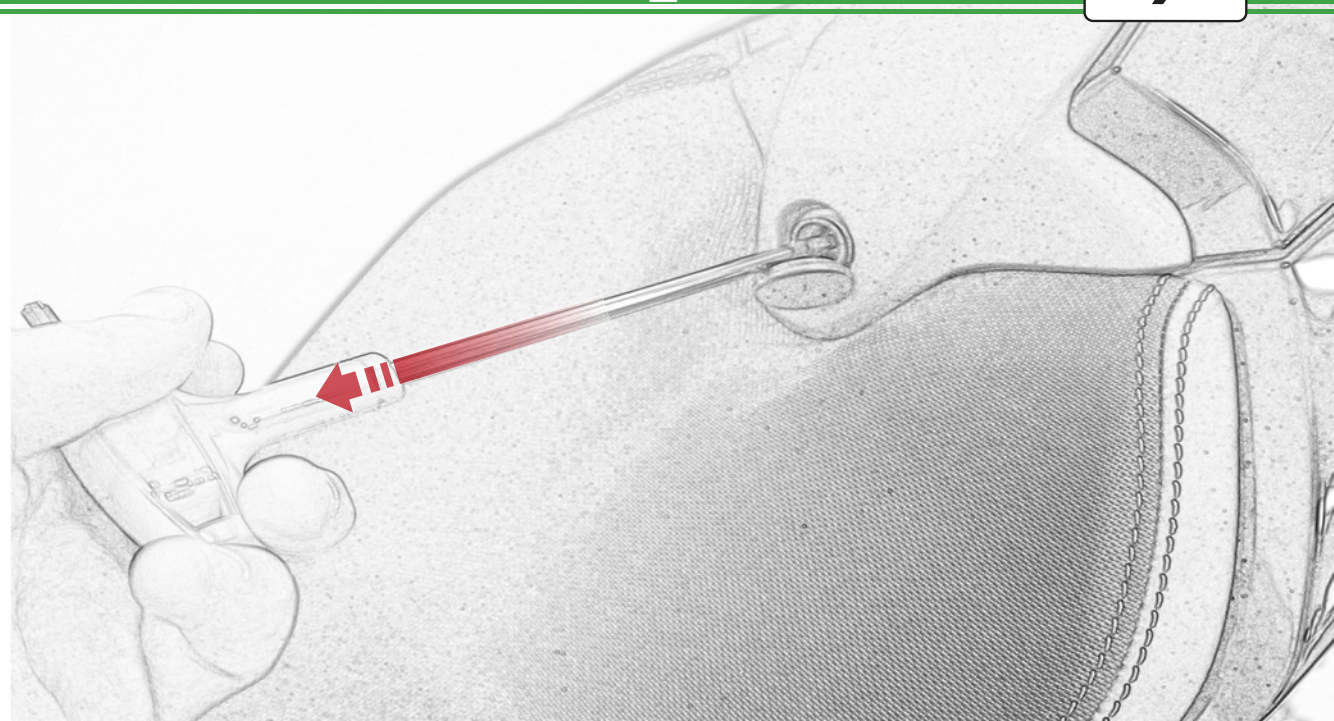


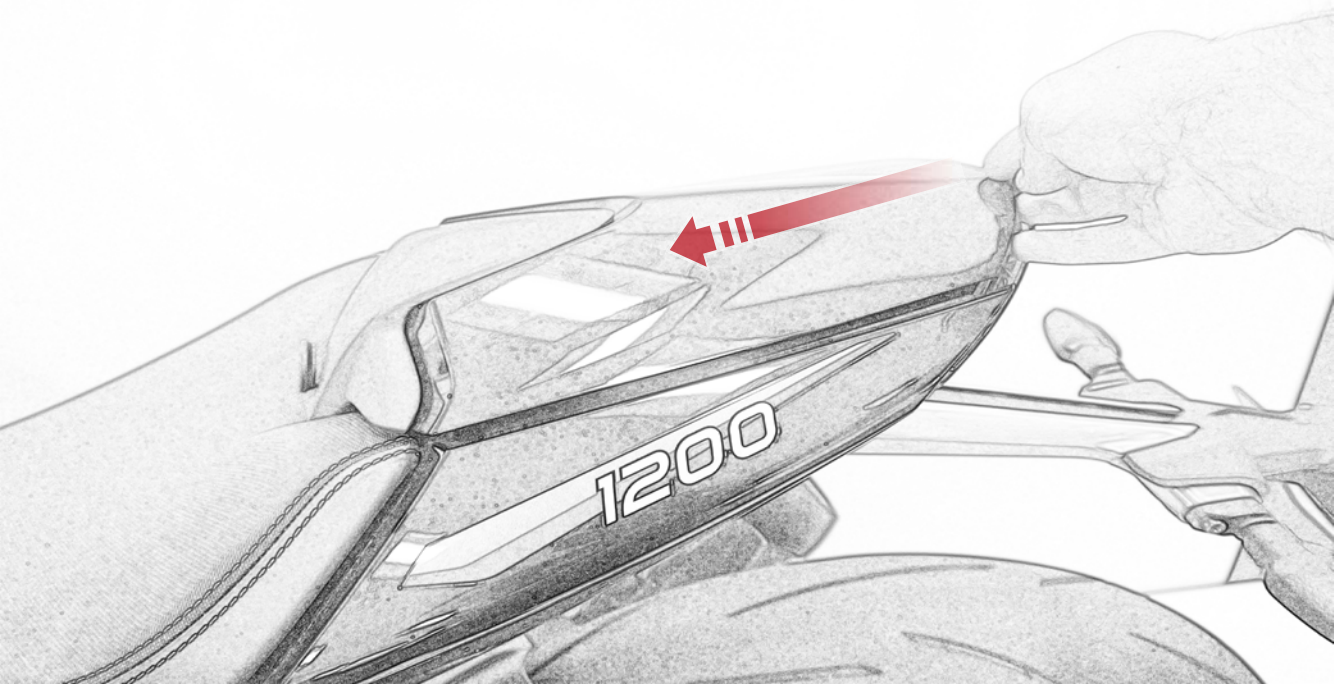


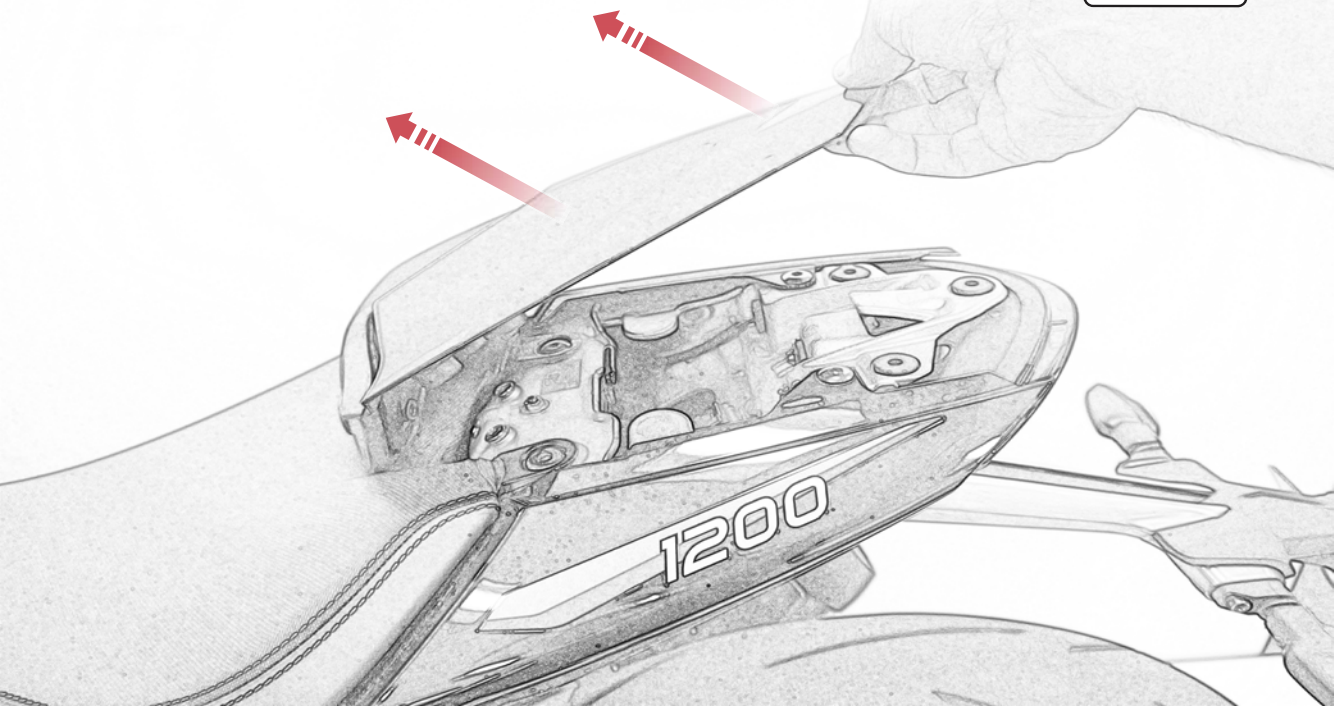


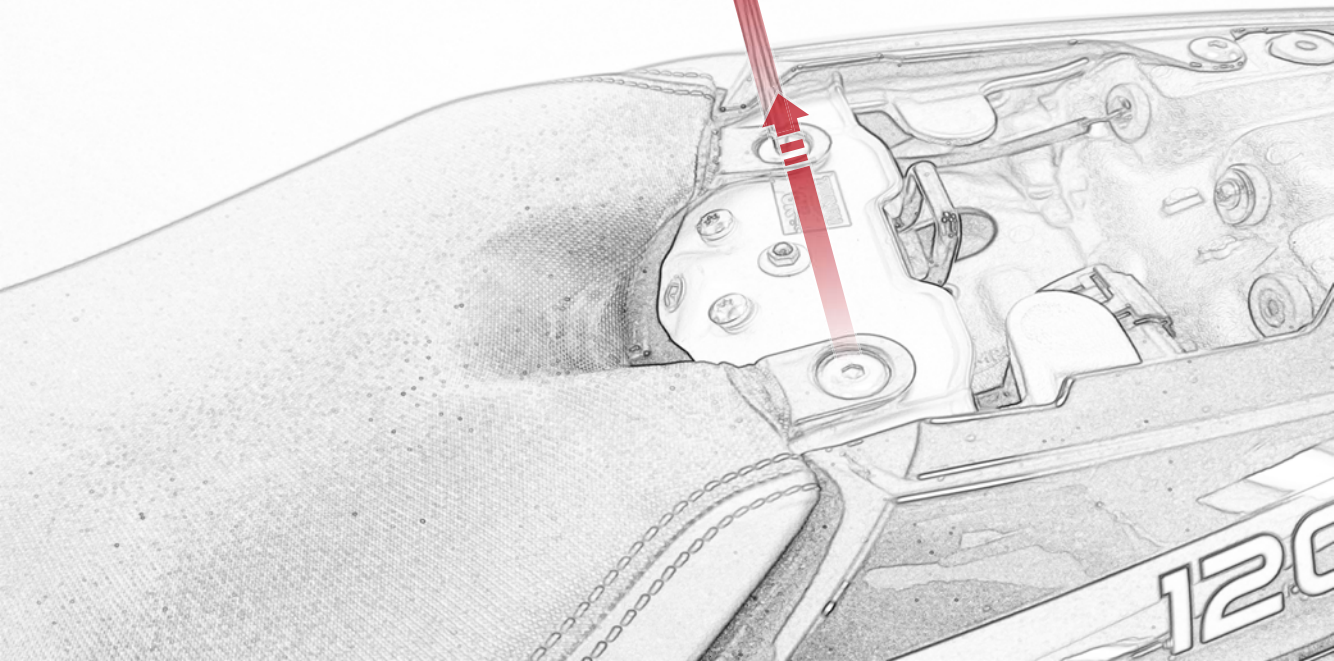



120

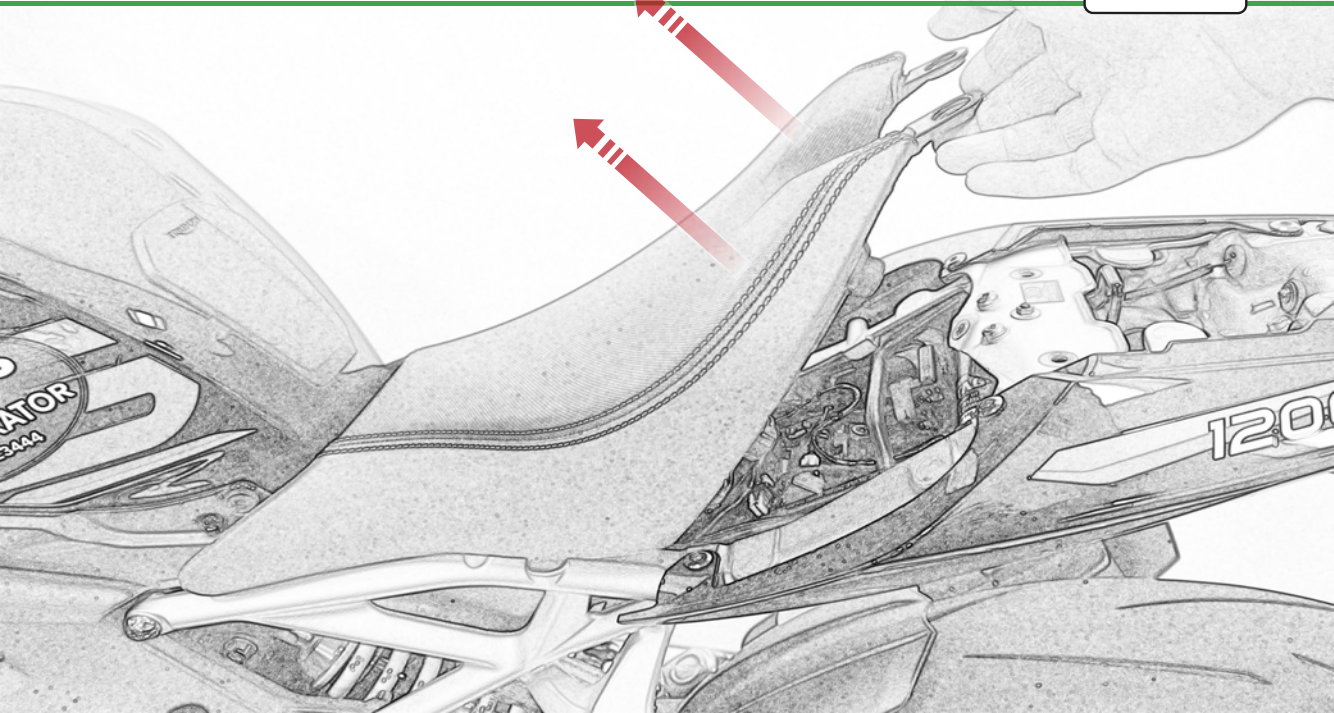


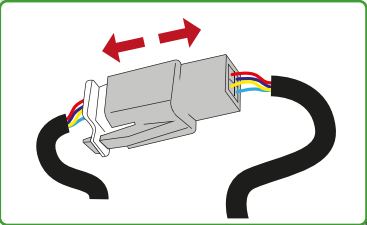


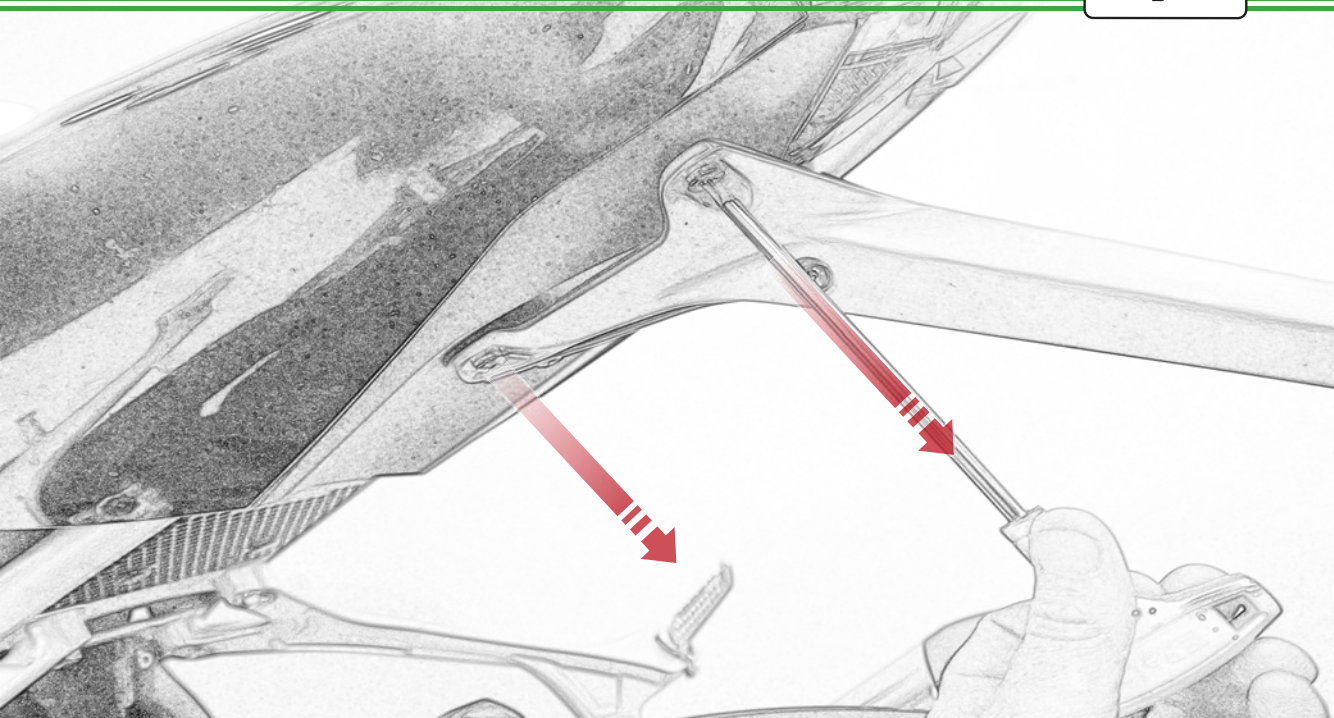


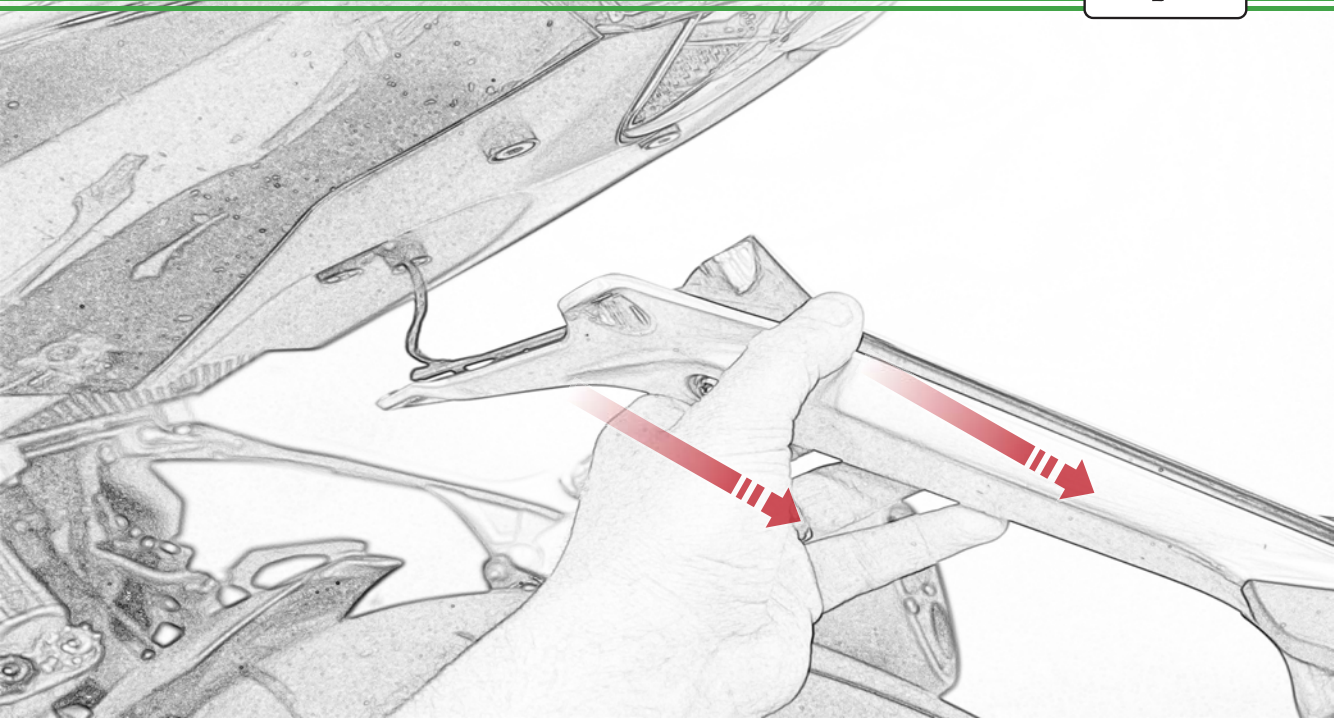

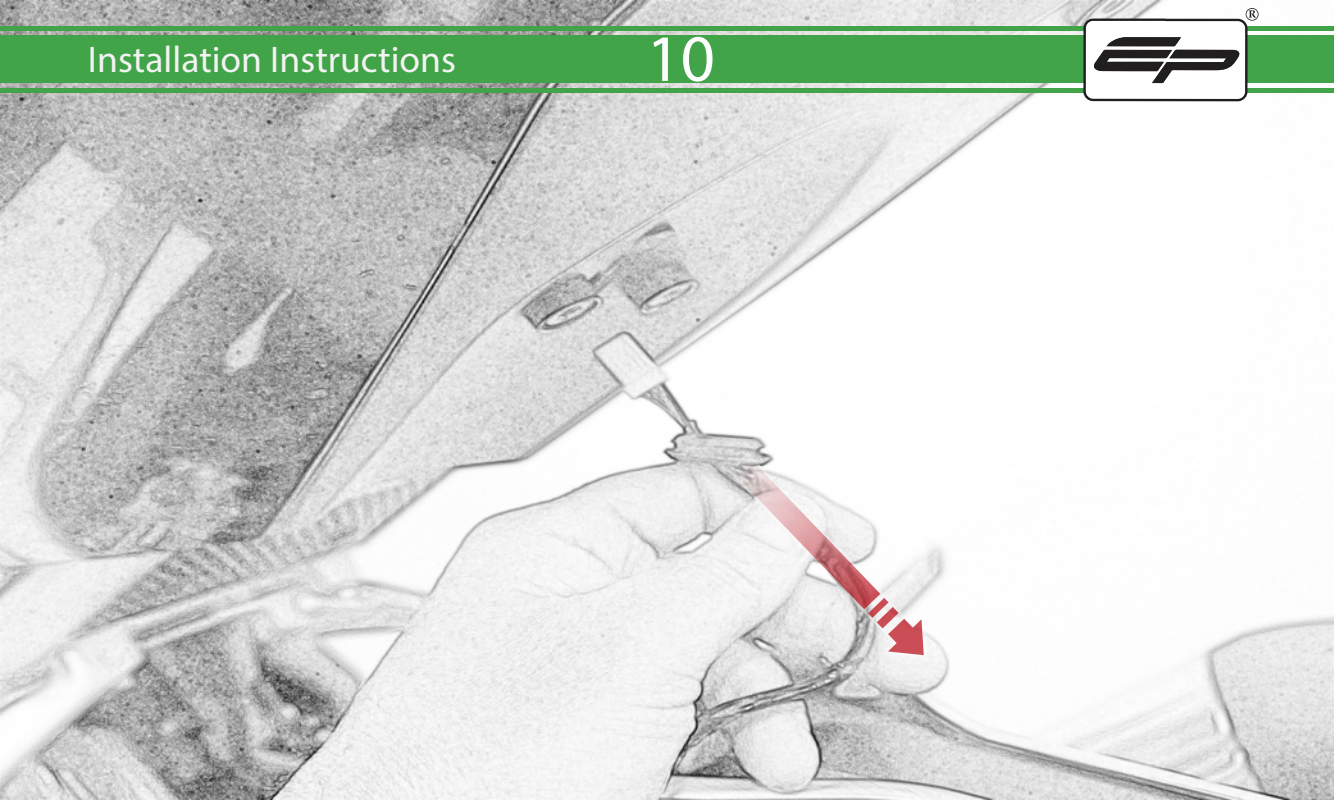


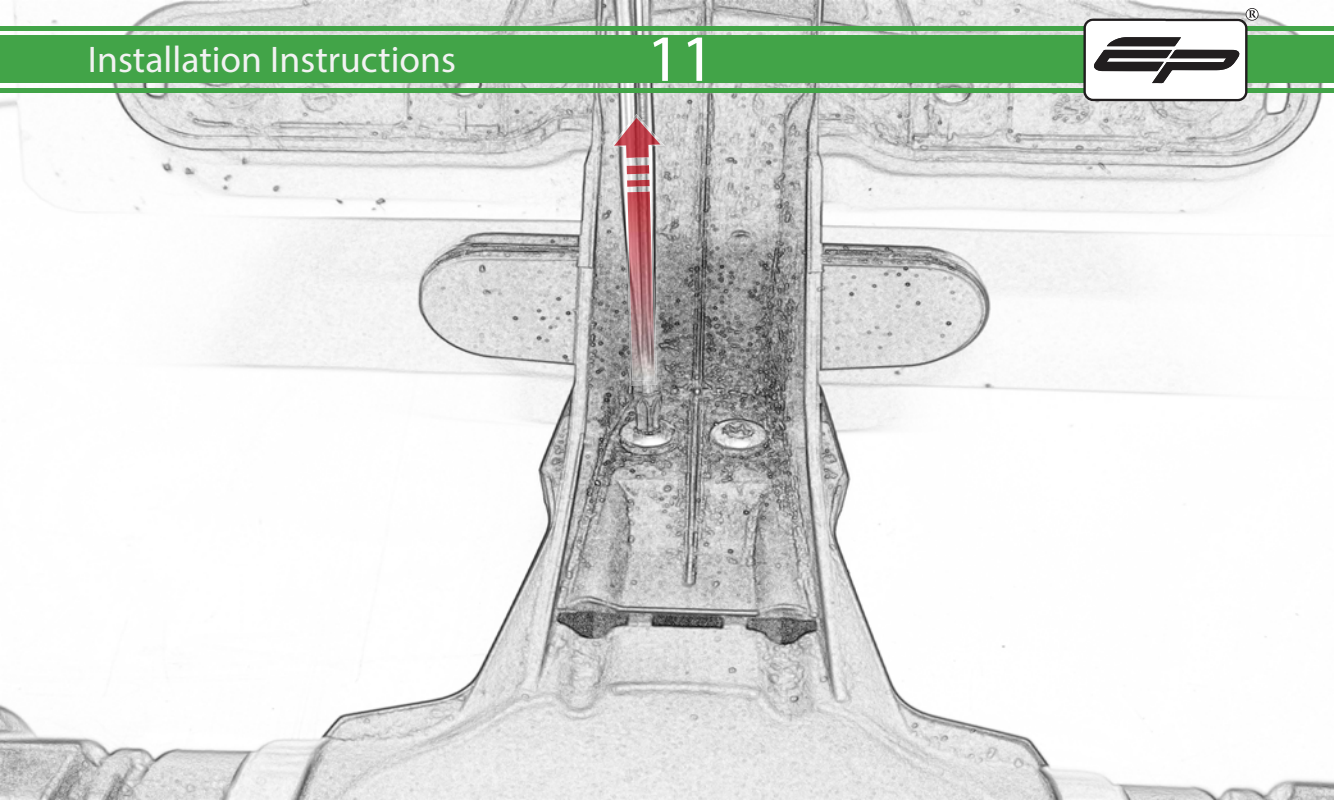


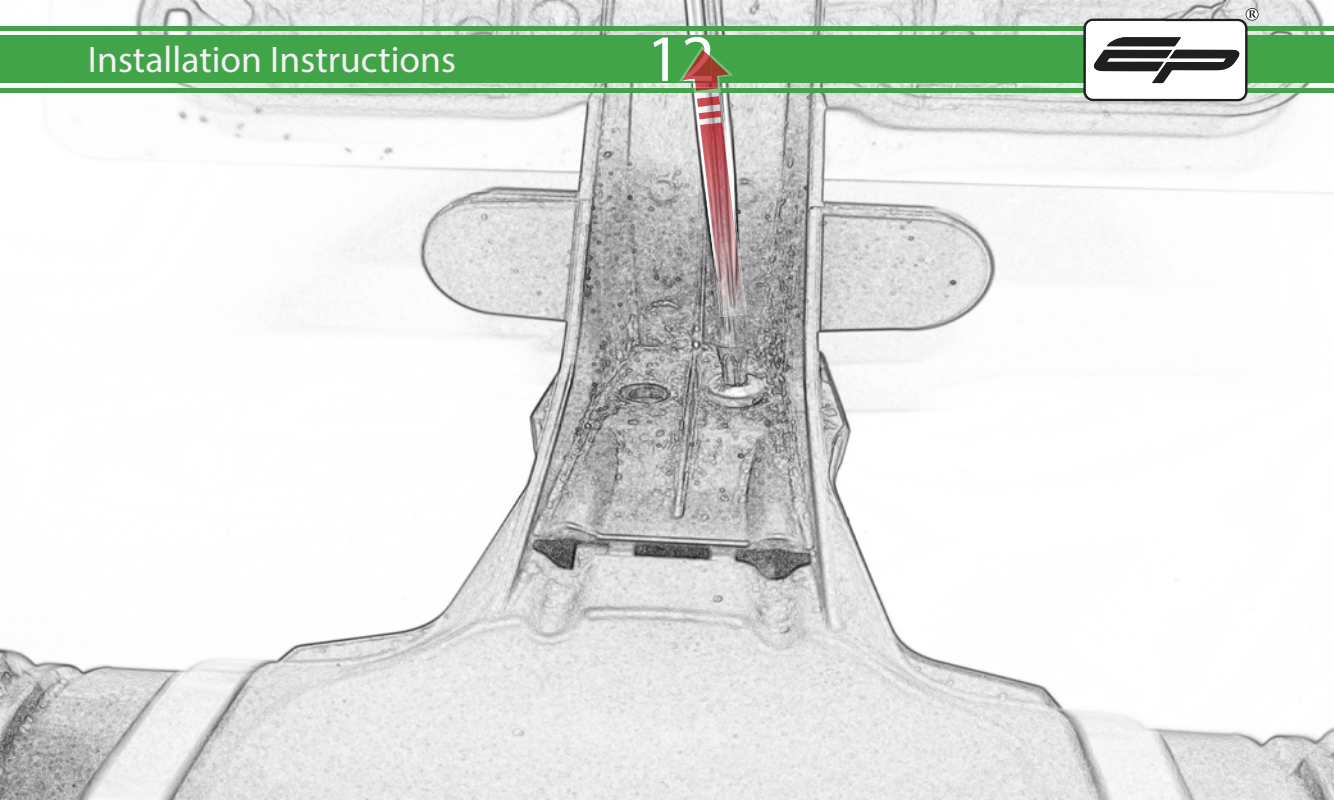


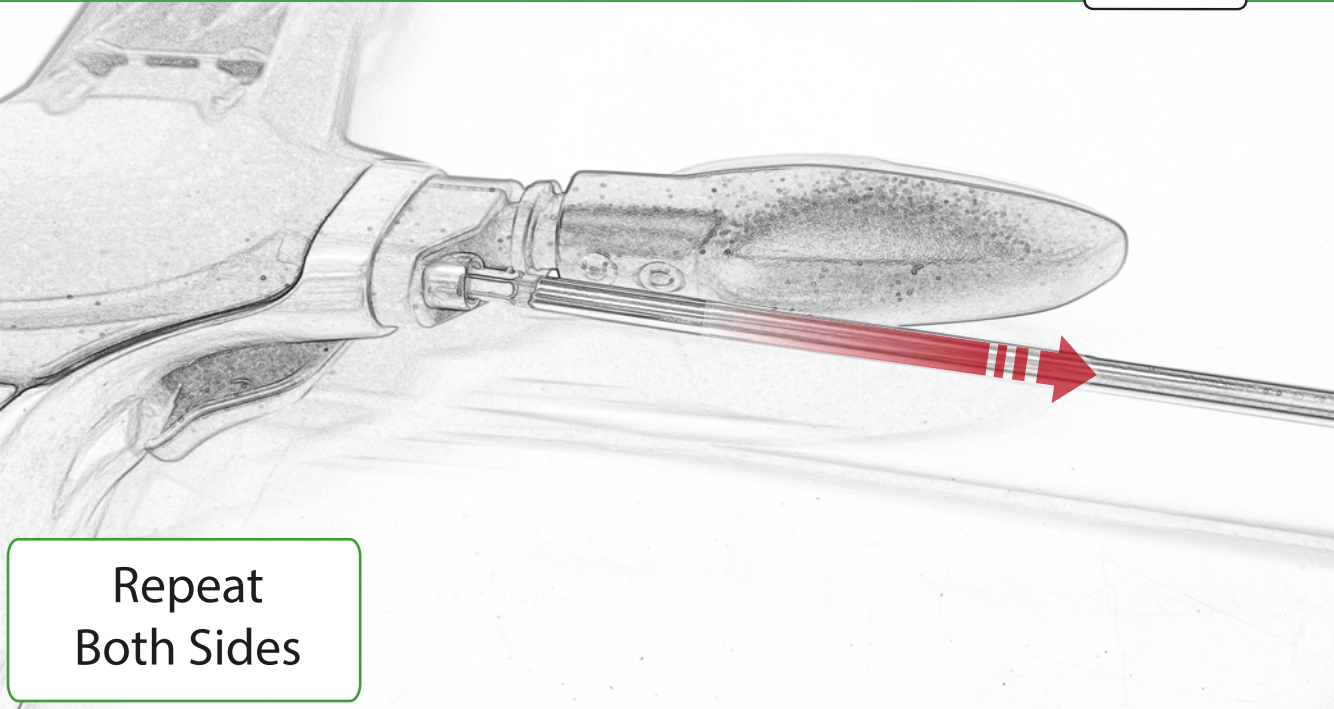



Repeat
Both Sides

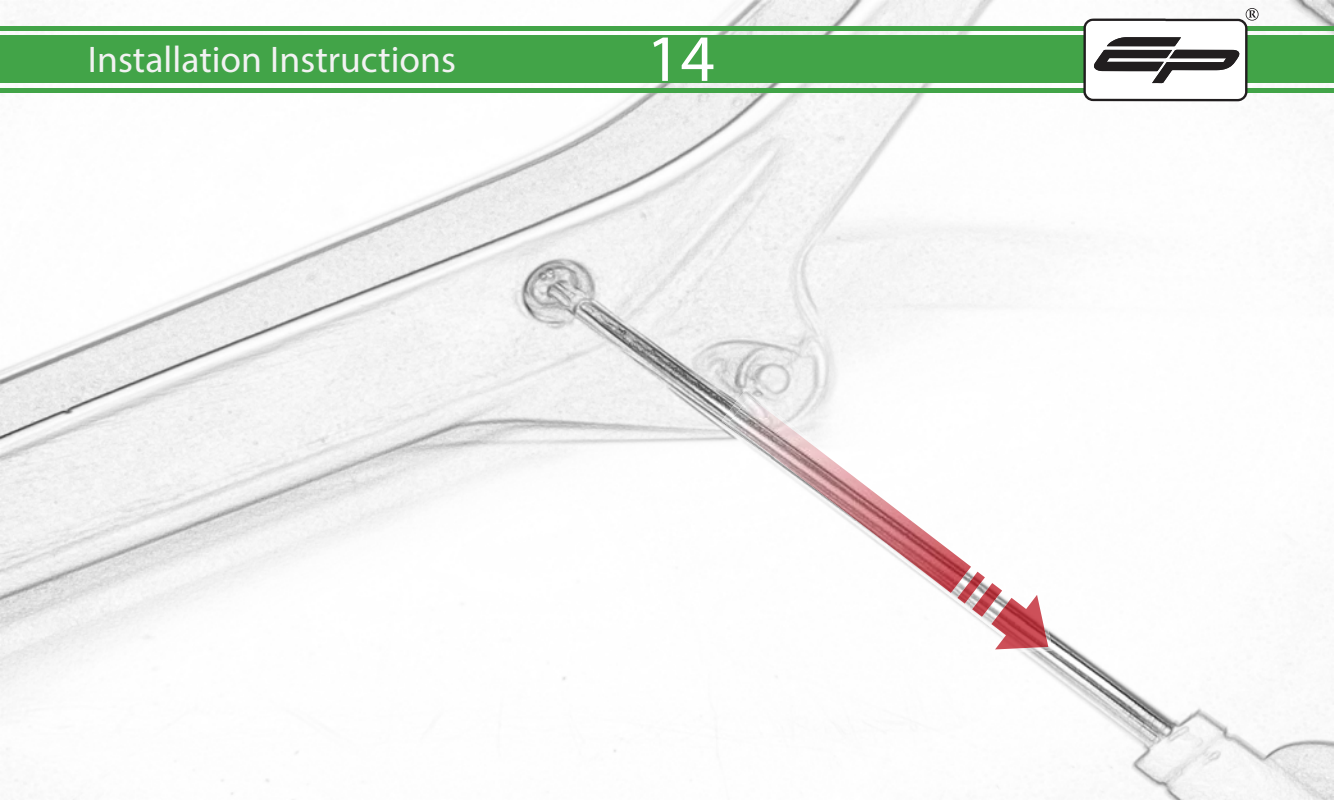


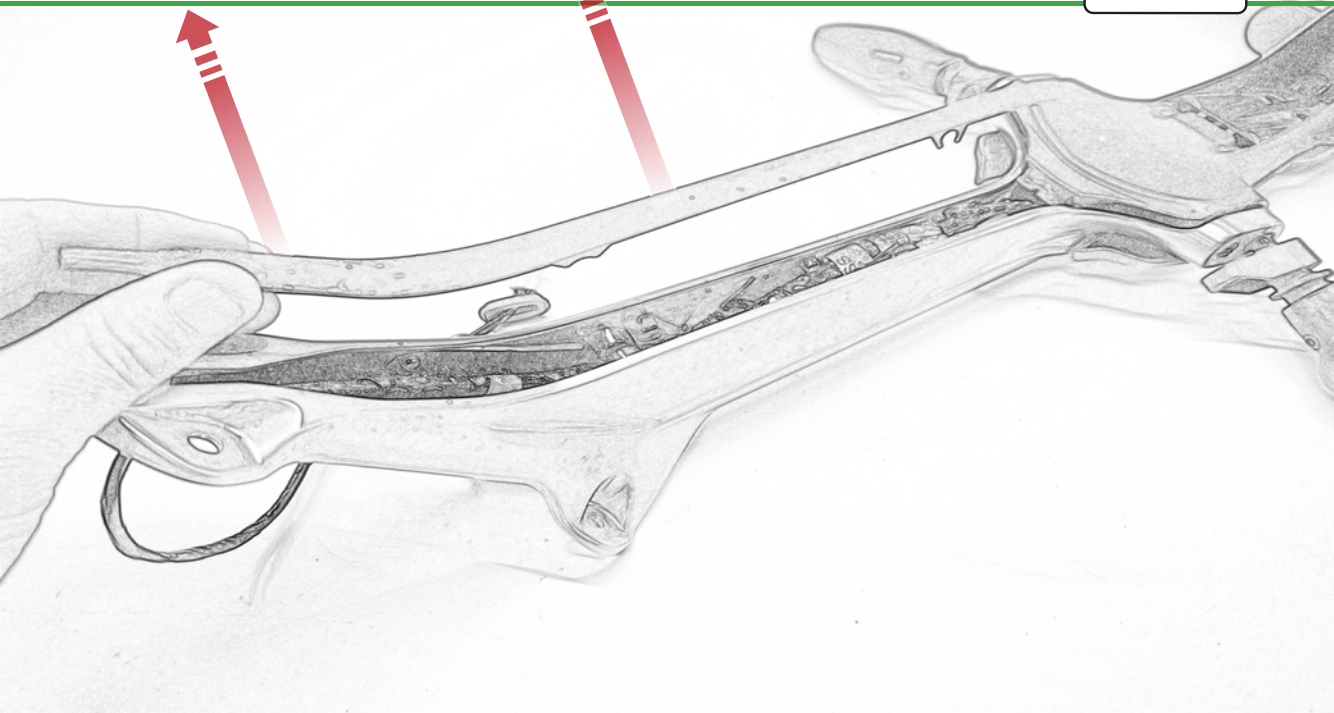



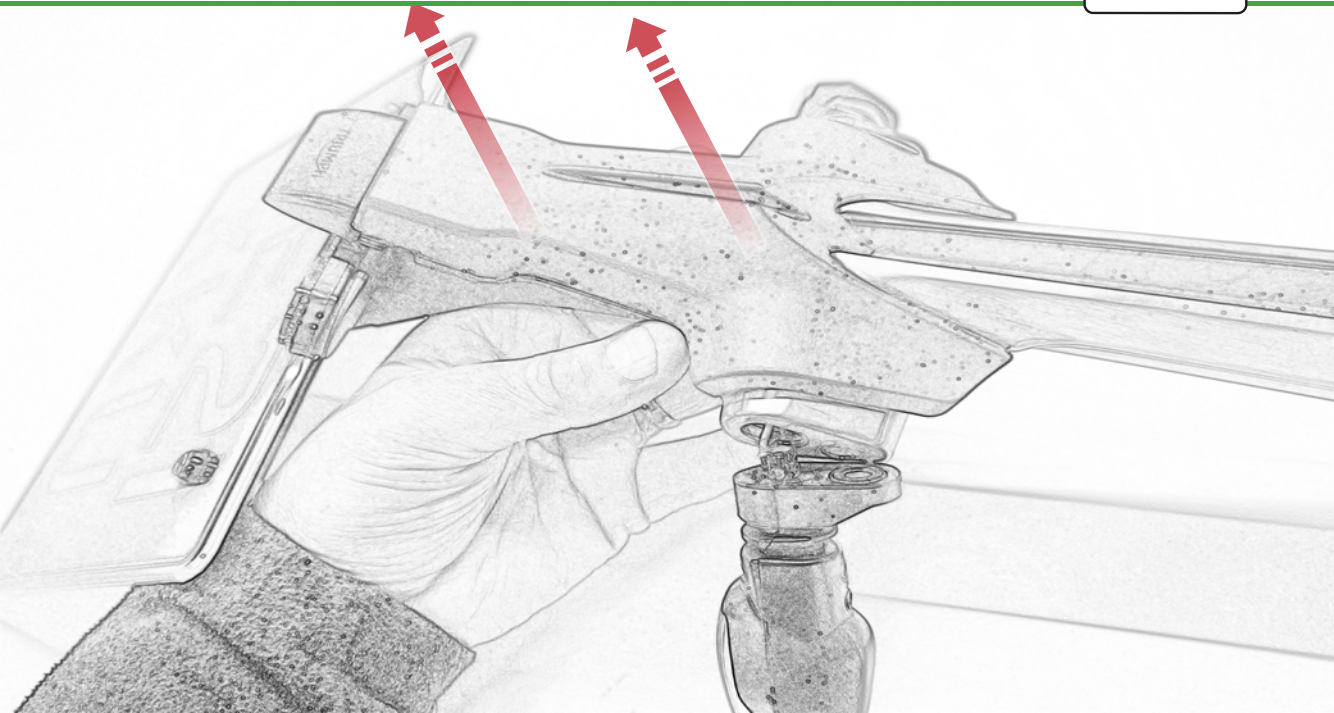


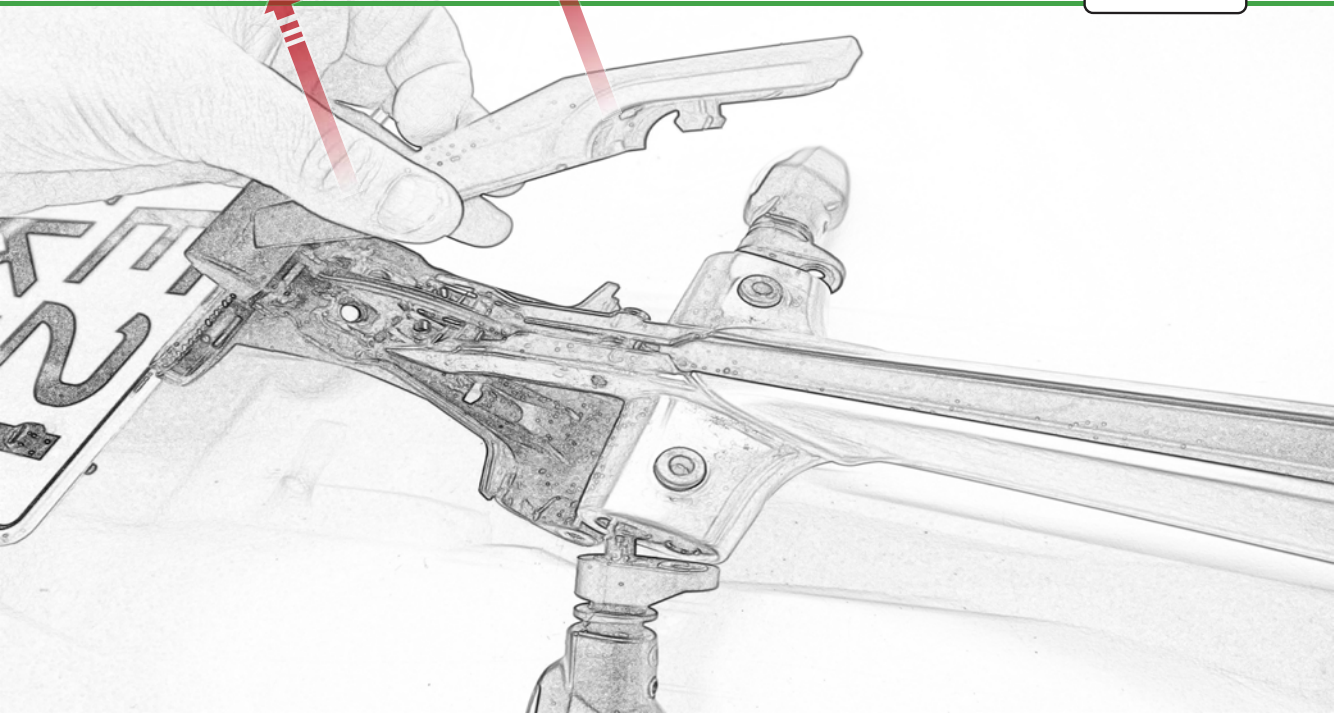


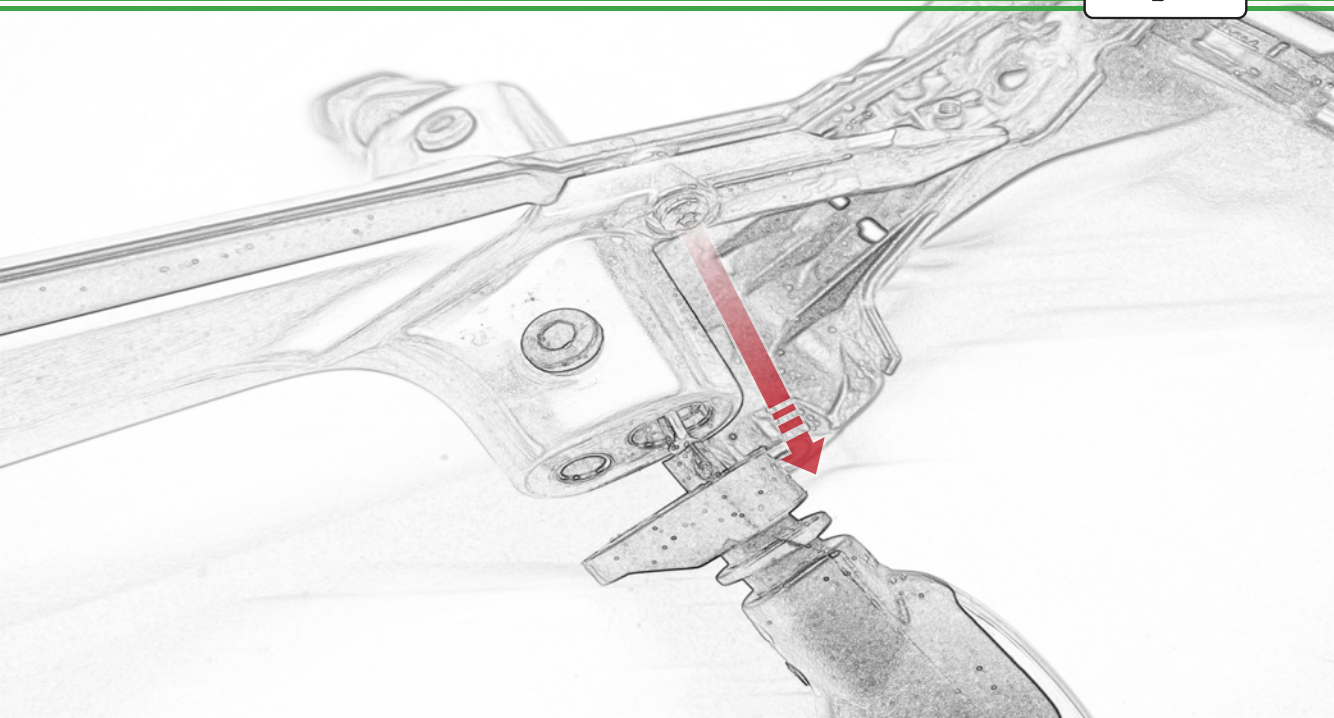


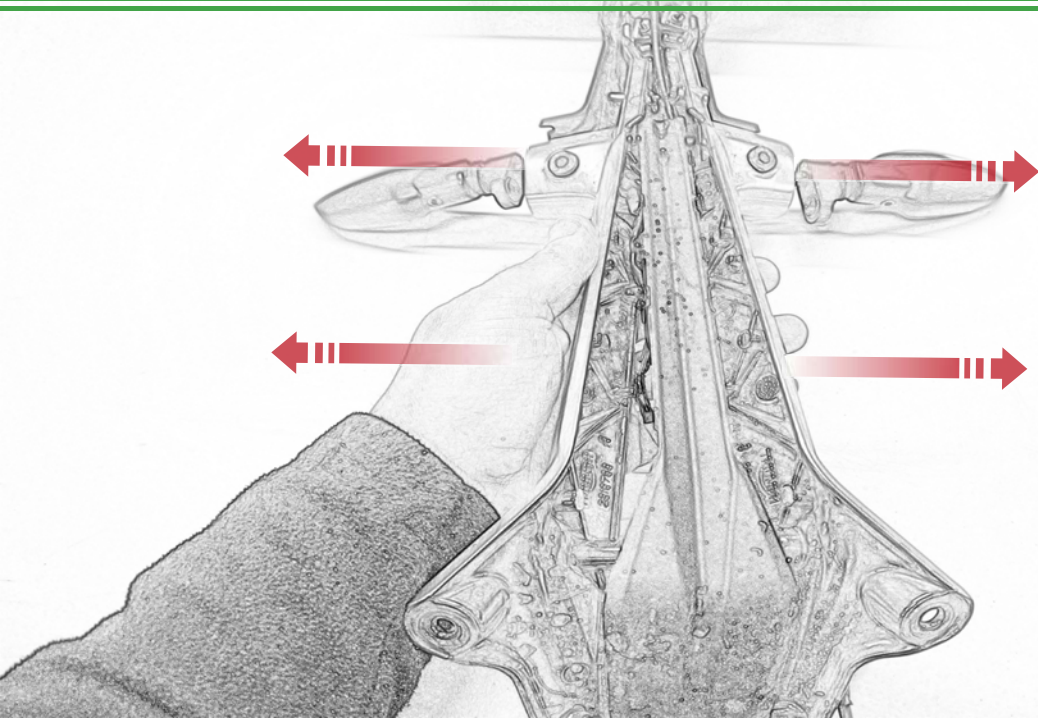


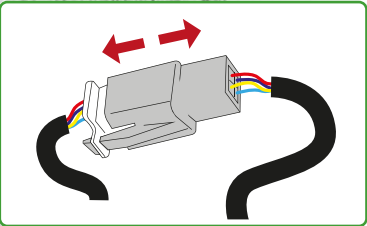

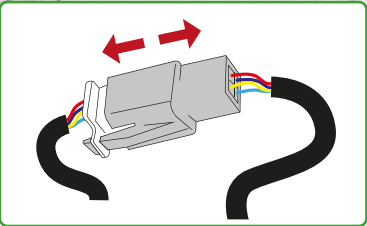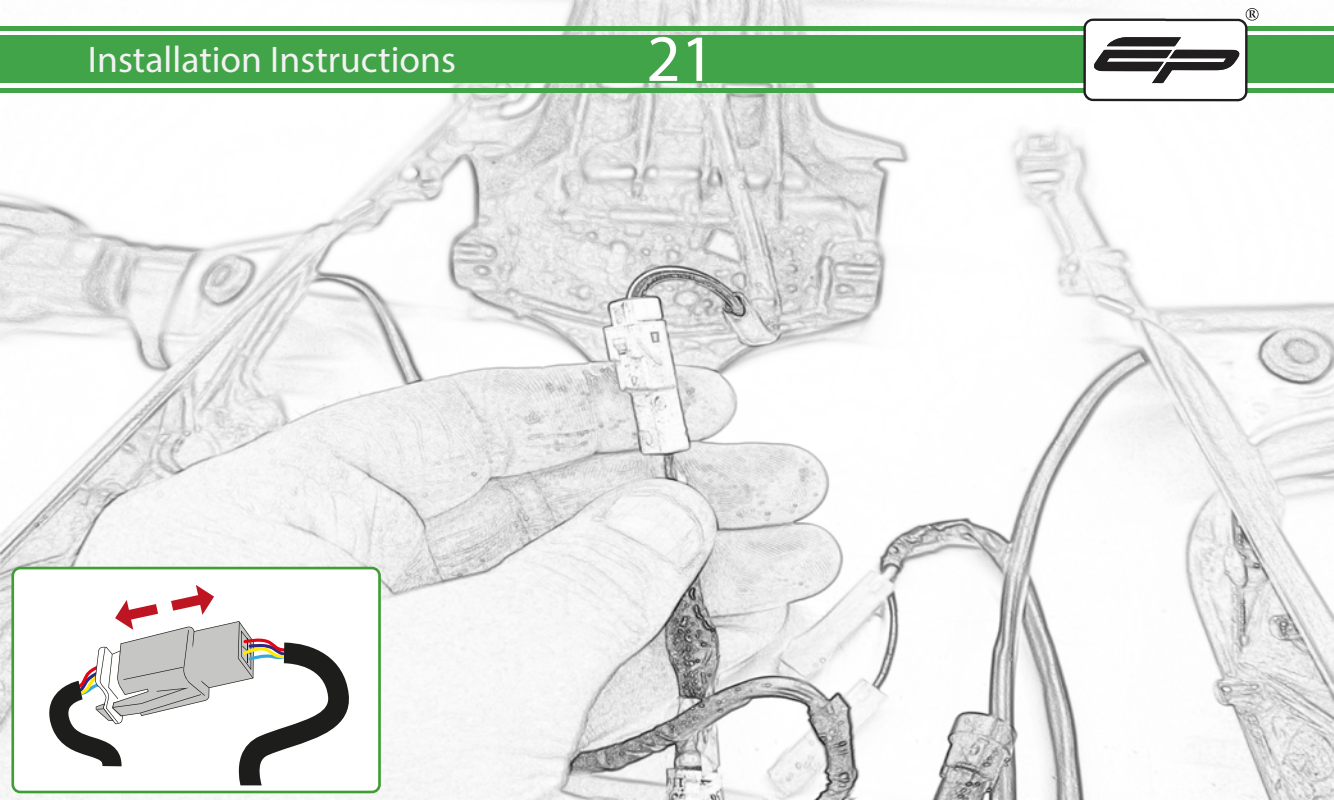


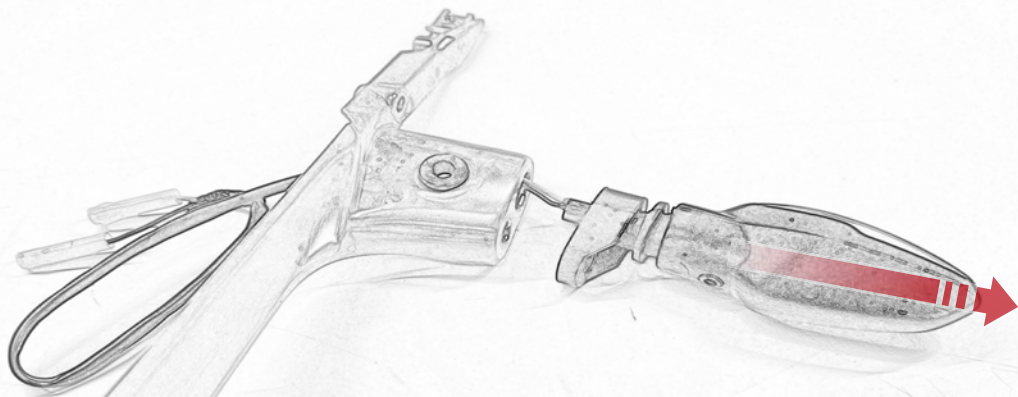

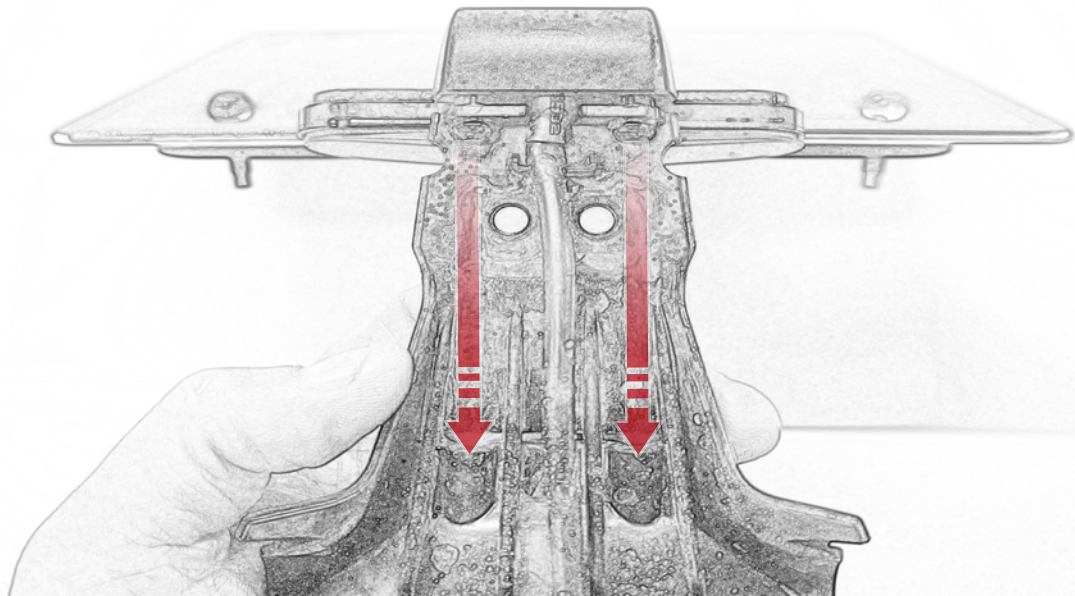


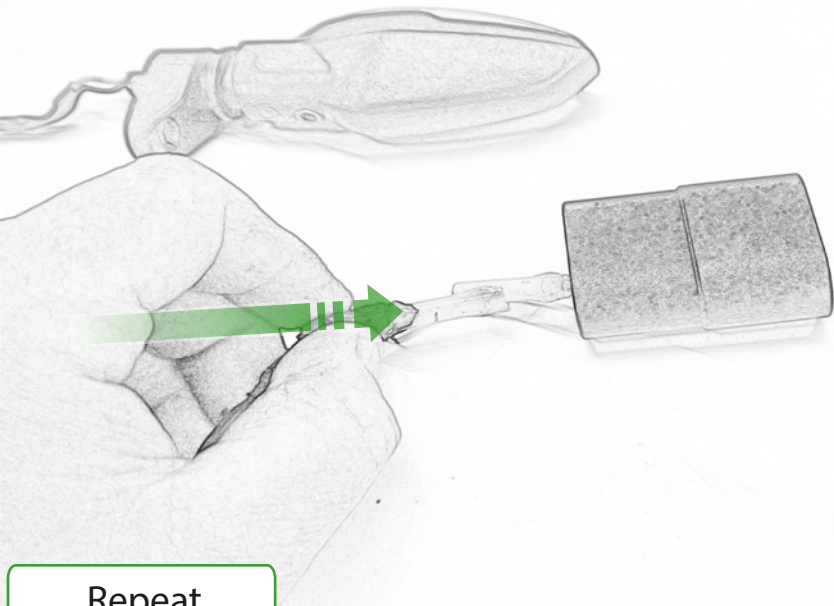

Repeat
Both Sides

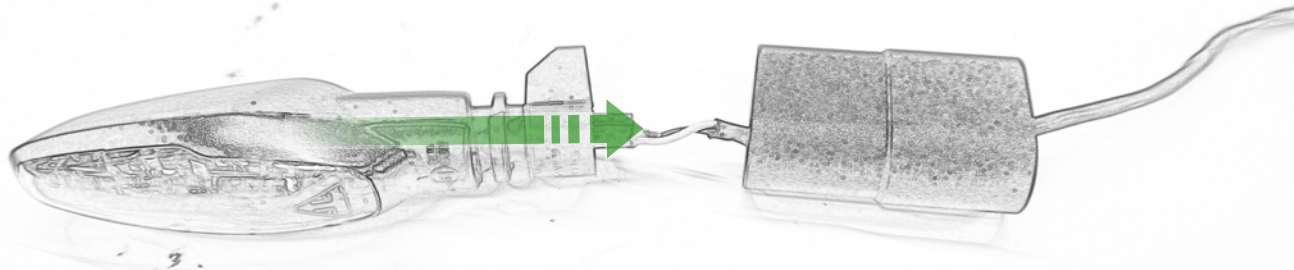


Repeat
Both Sides

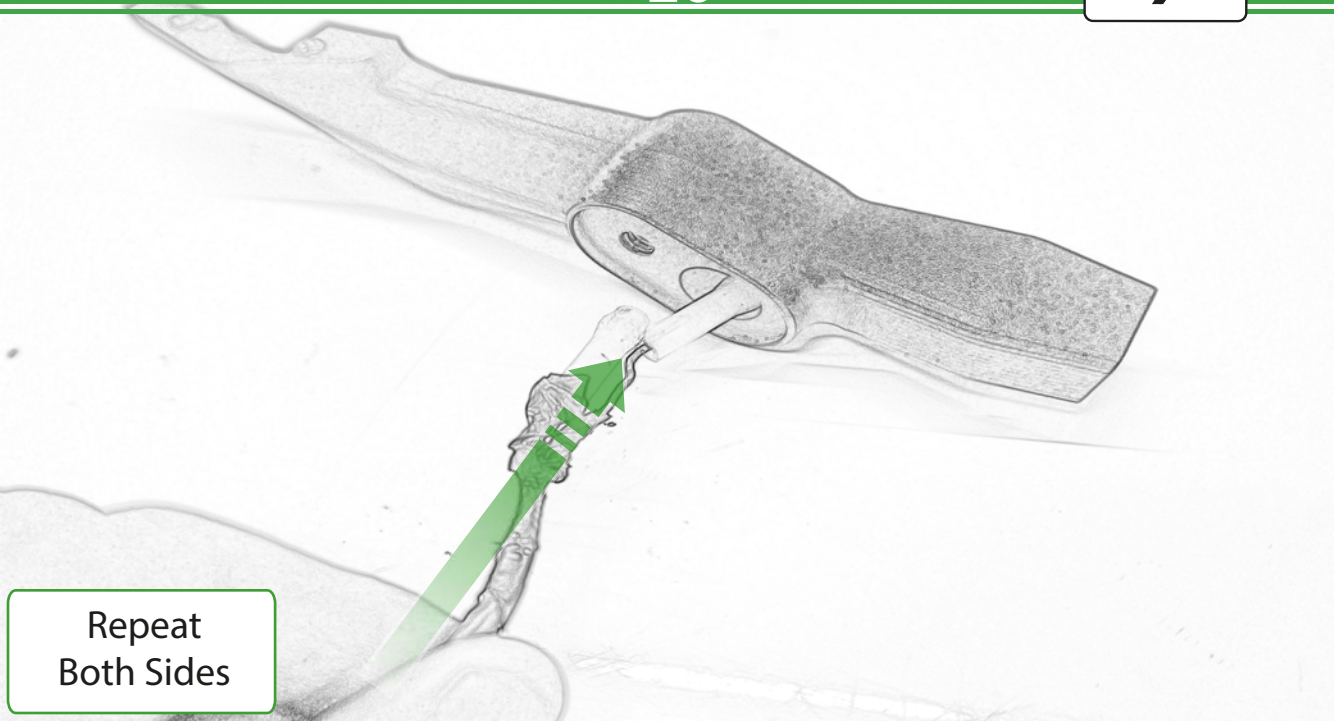


Repeat
Both Sides




Repeat
Both Sides

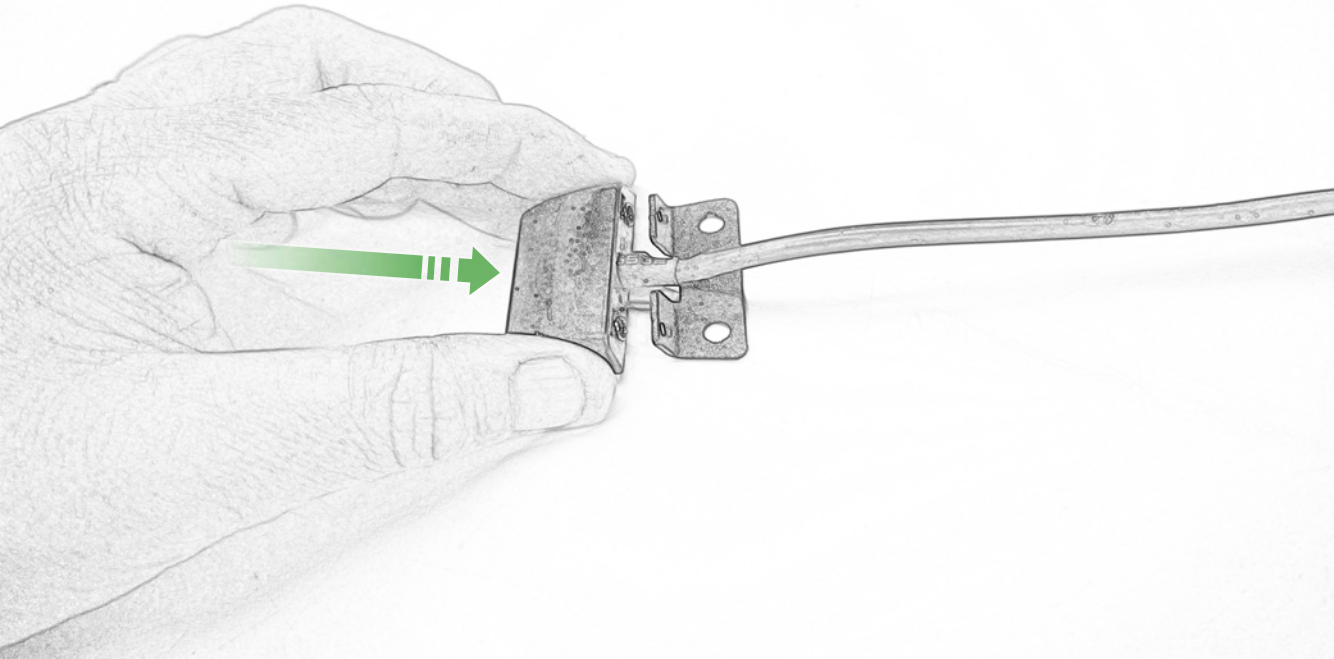


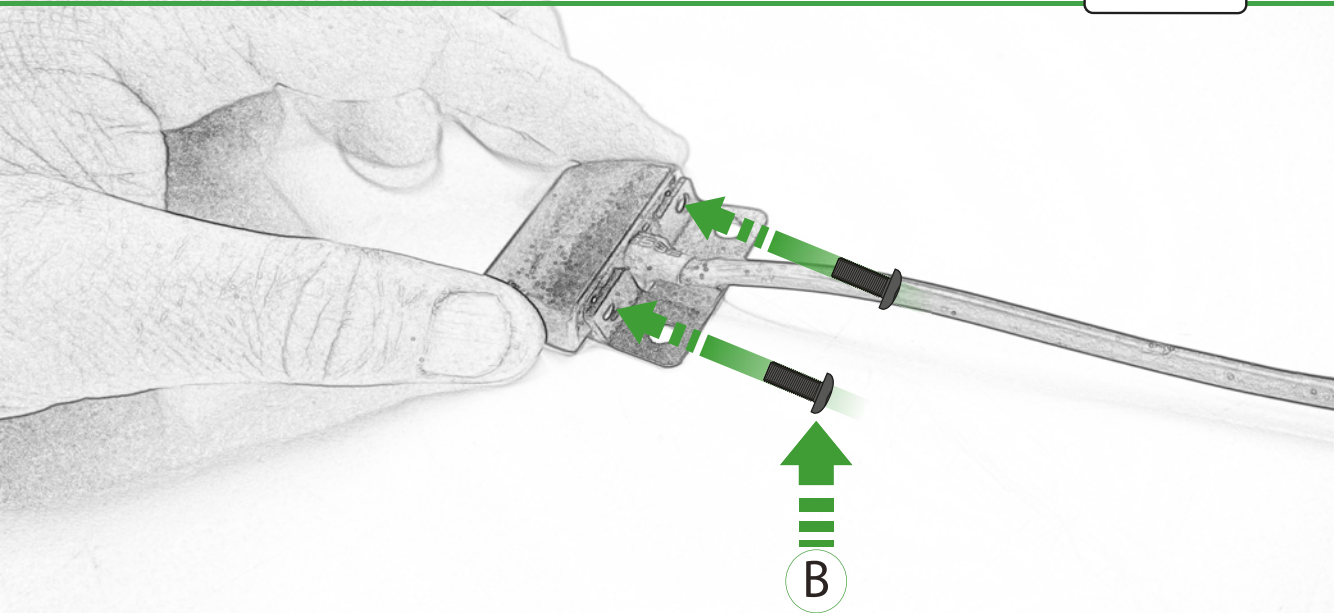

B


30

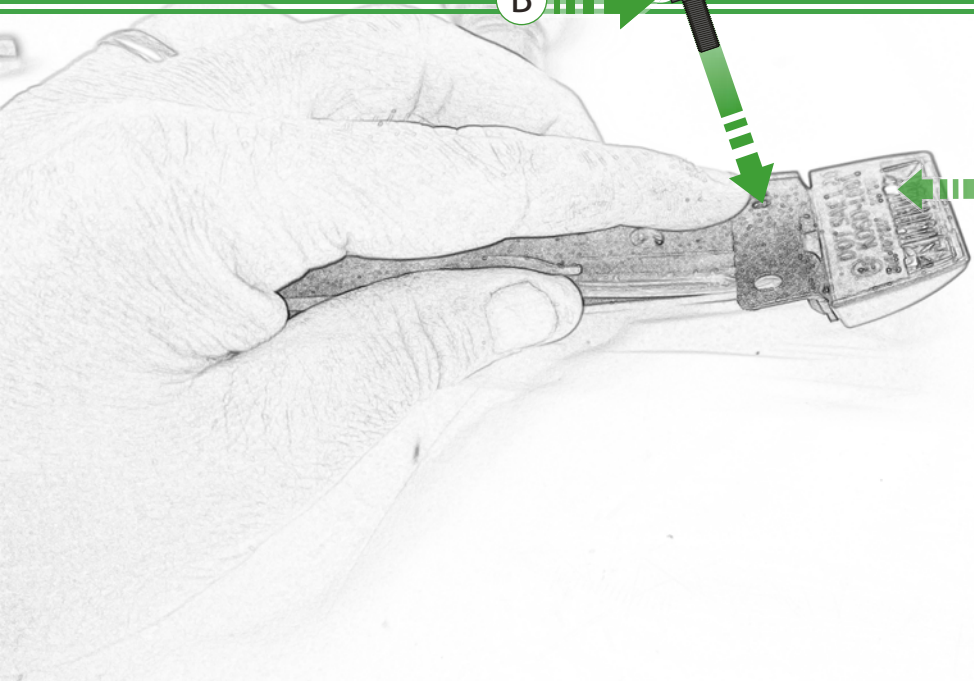


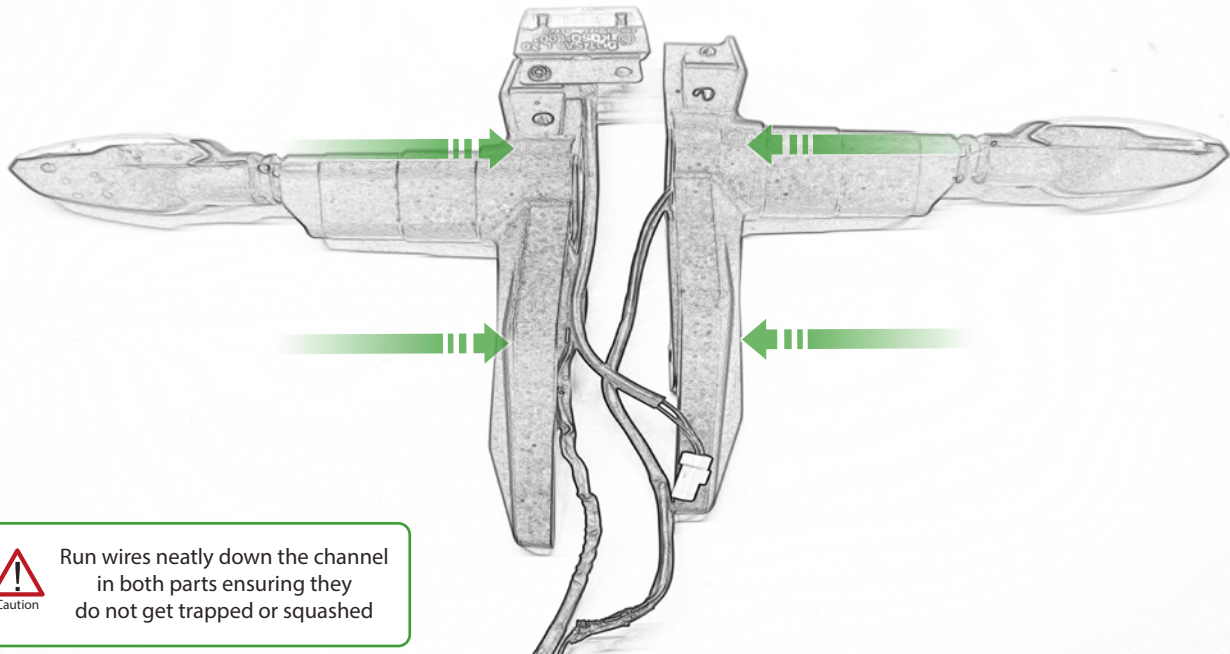



Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

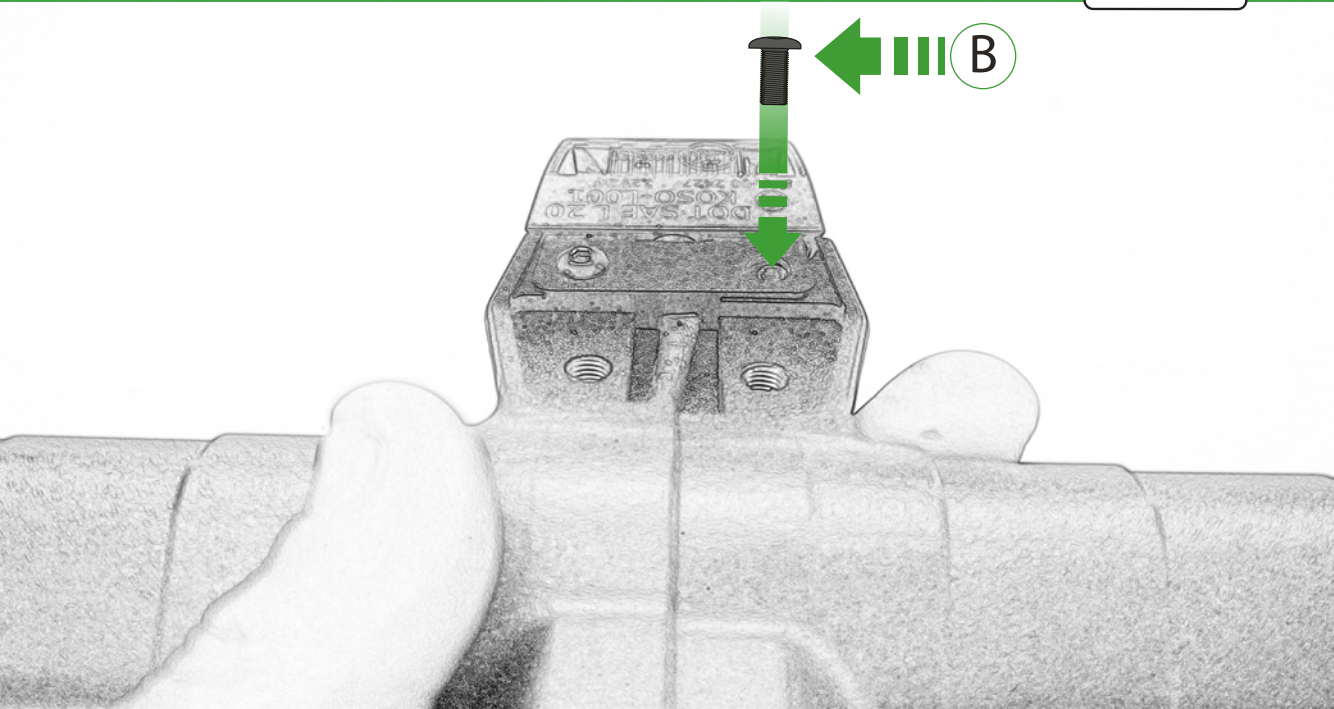



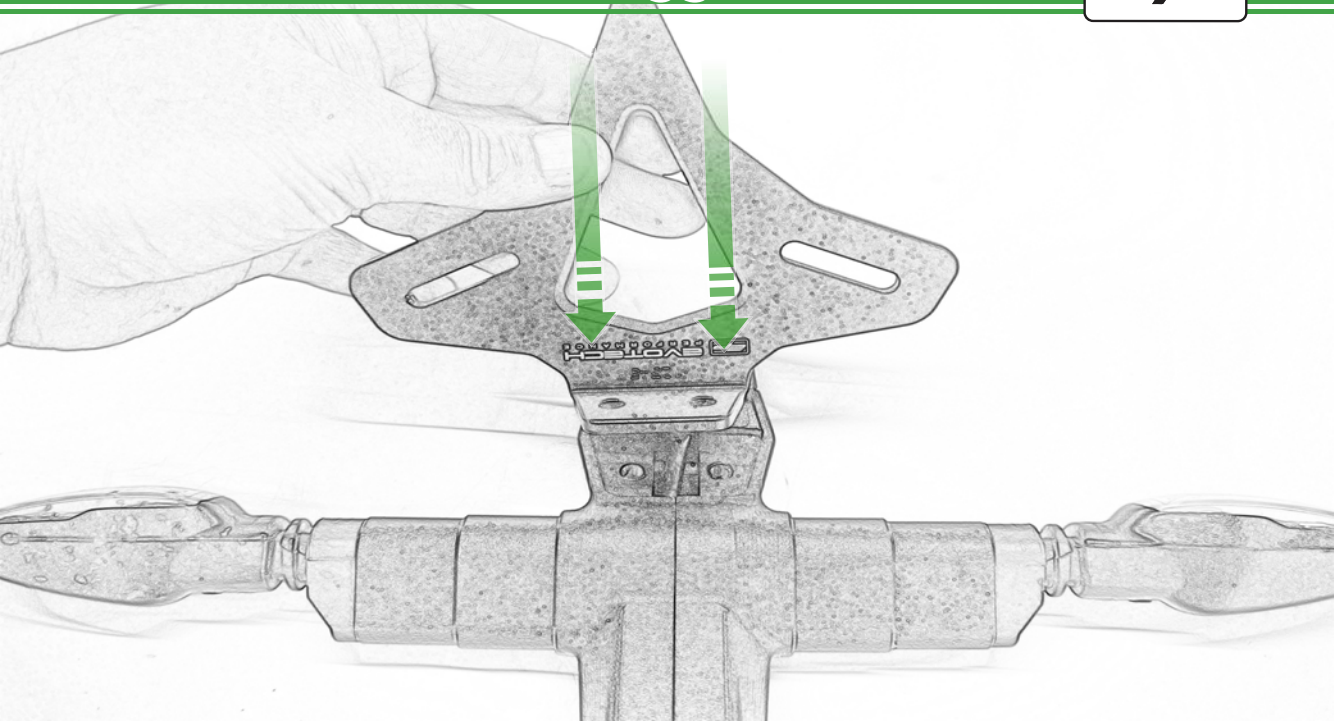


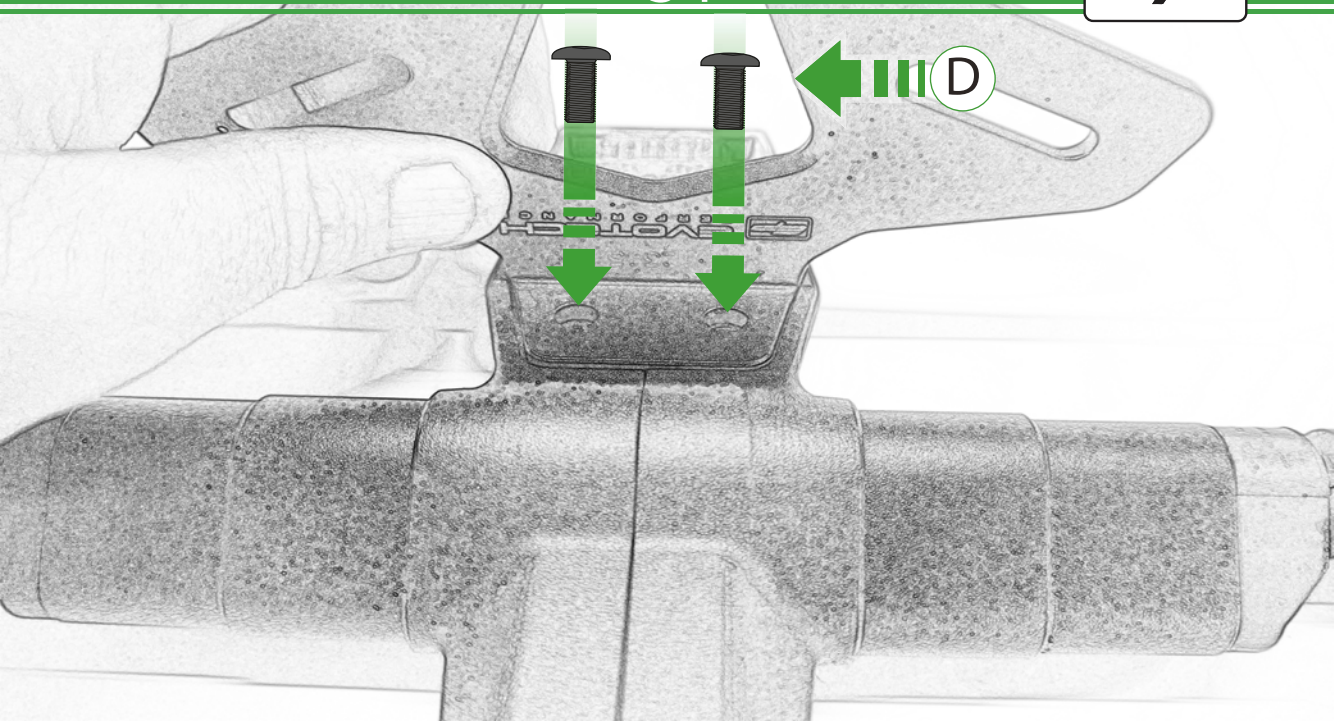


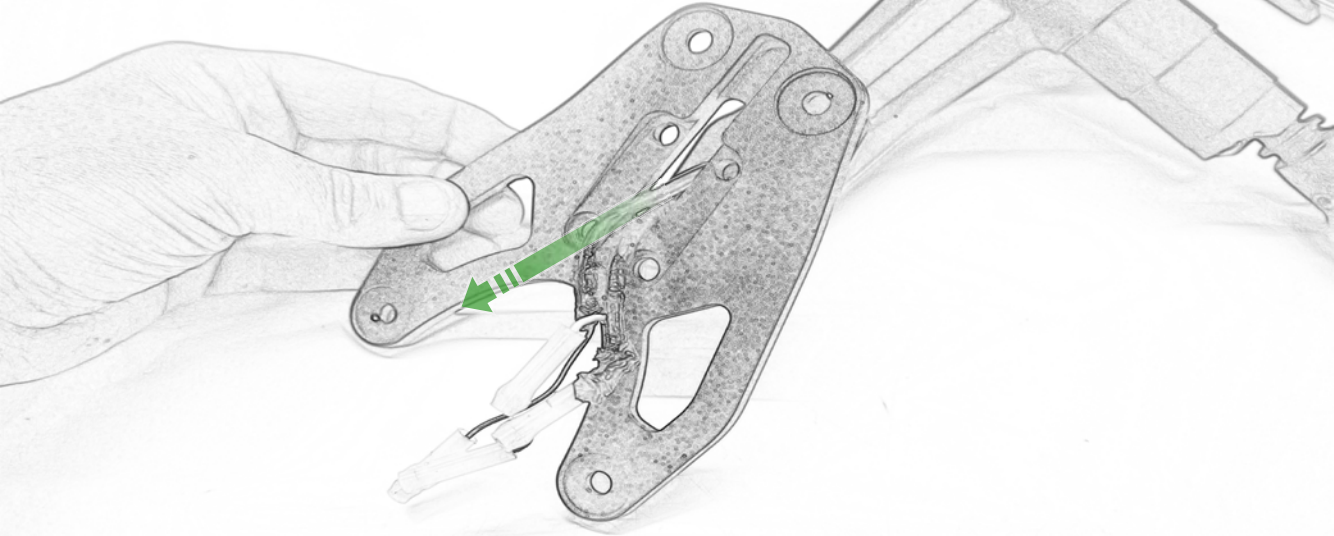


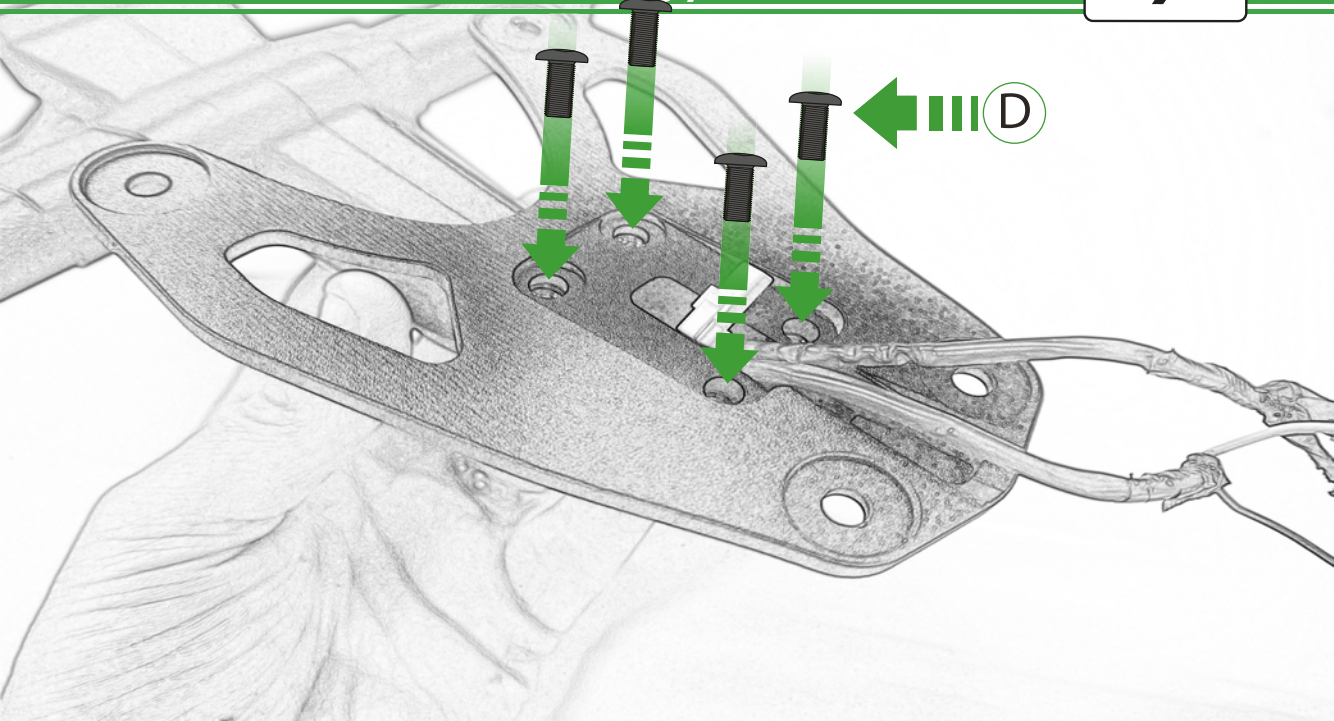


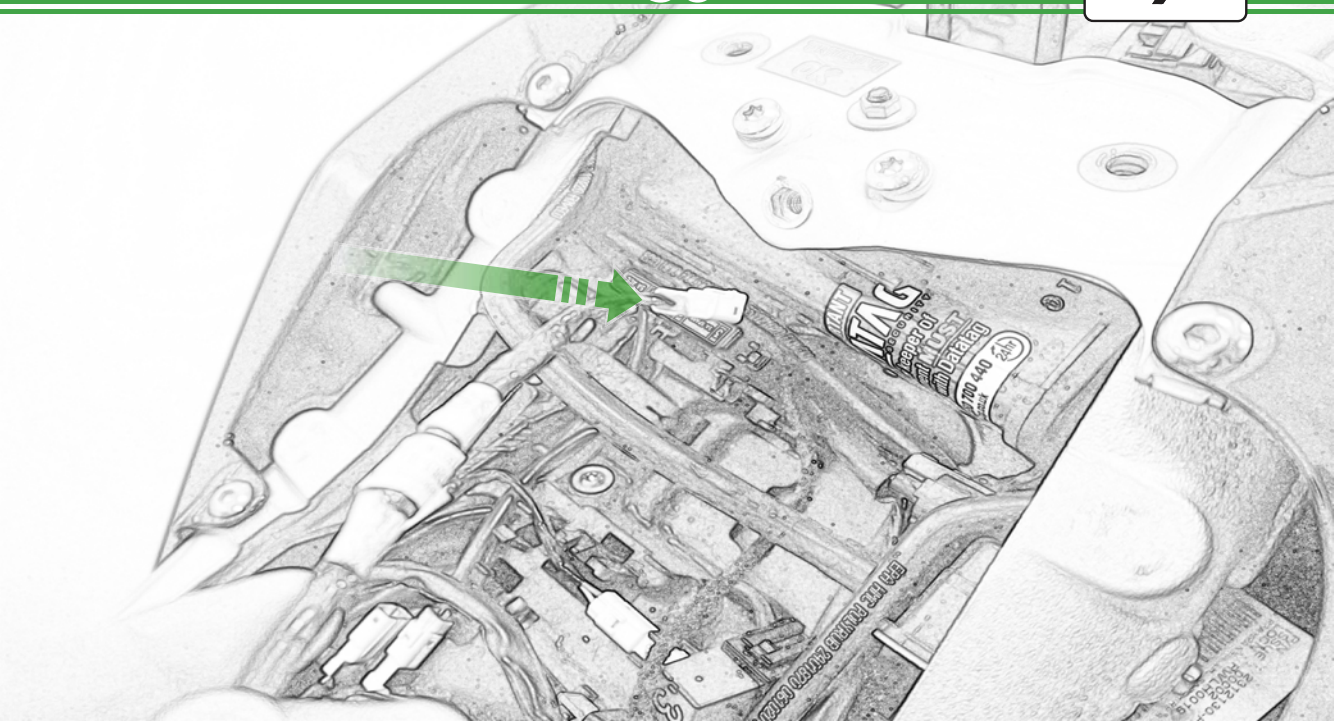

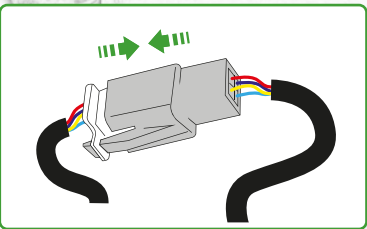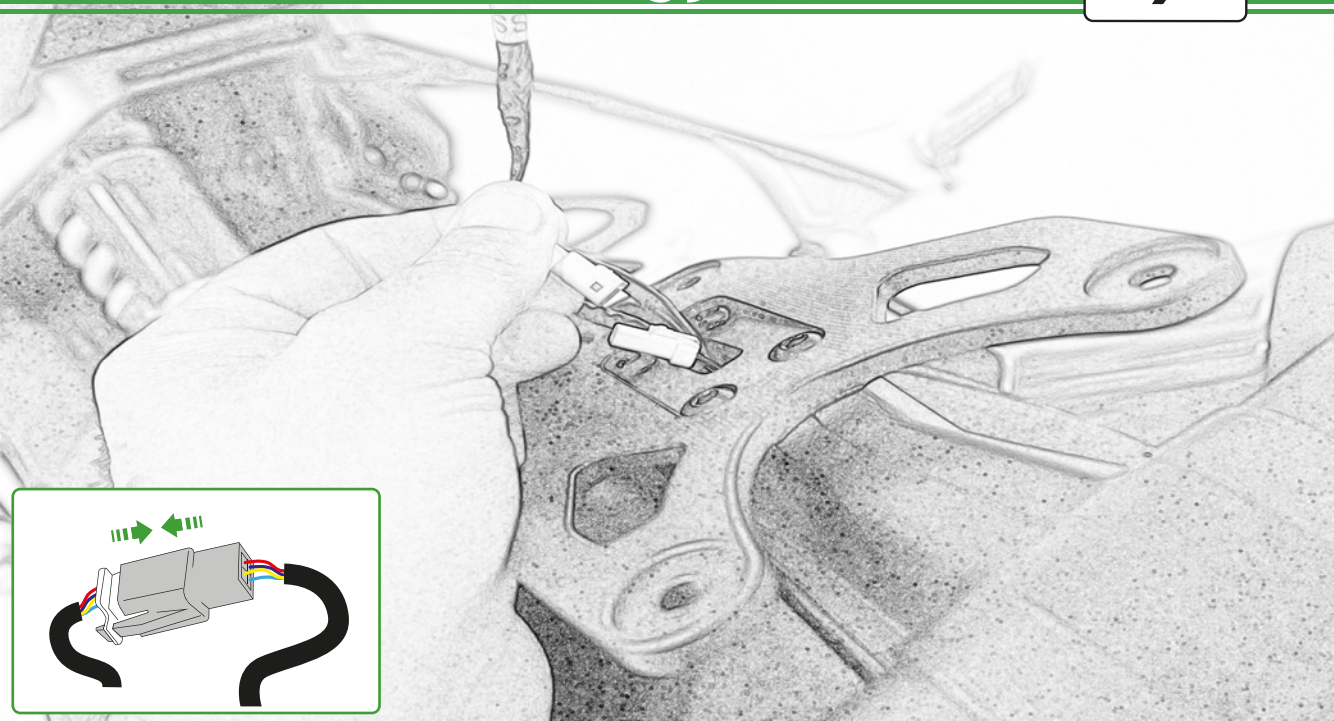


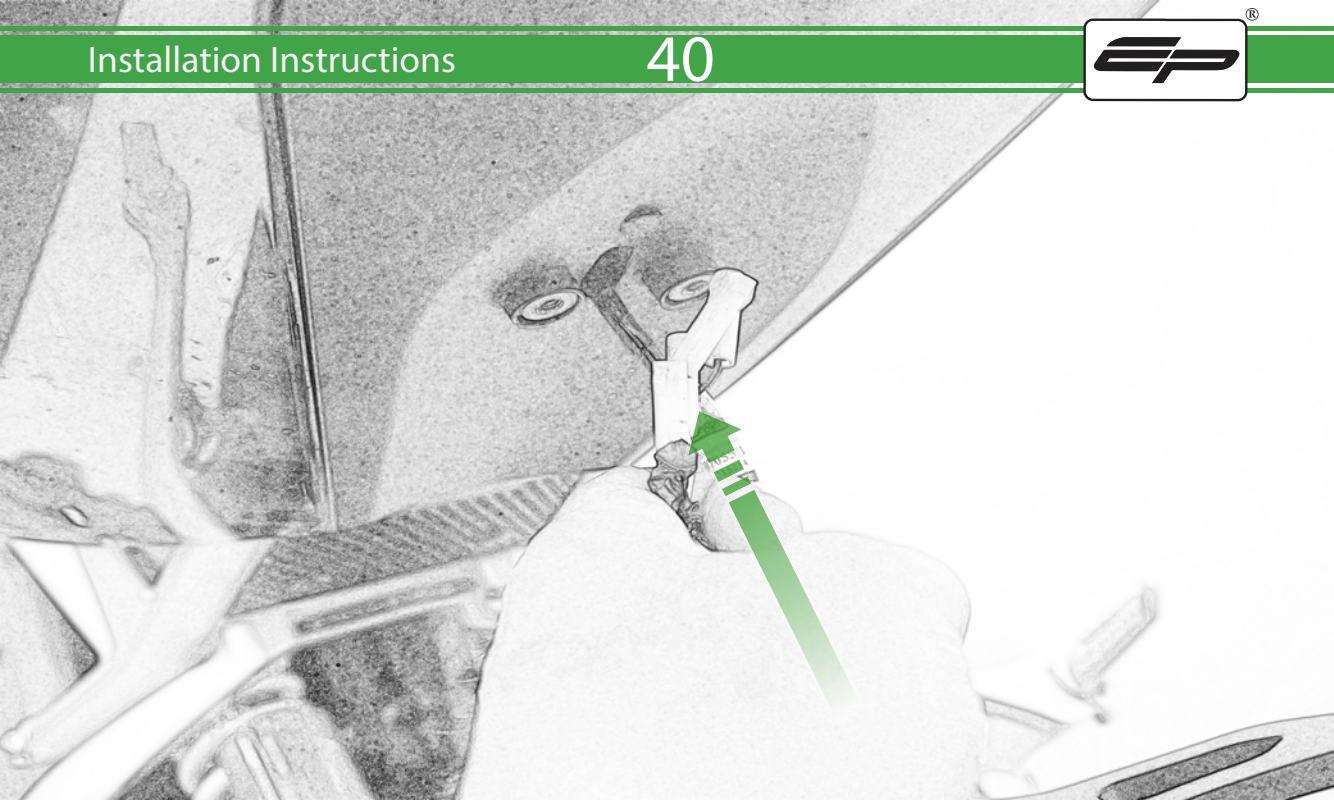



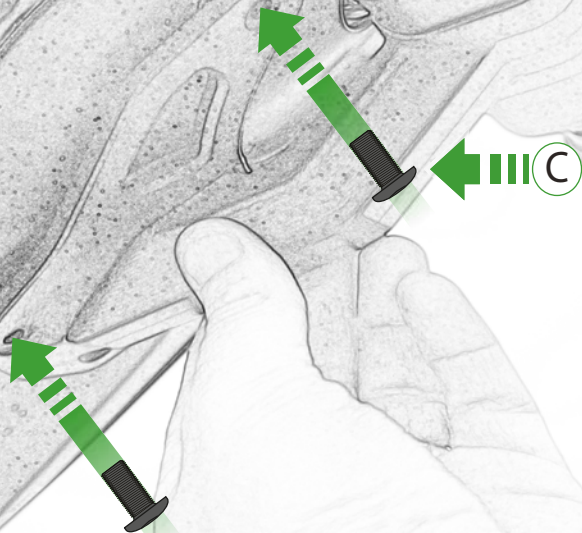
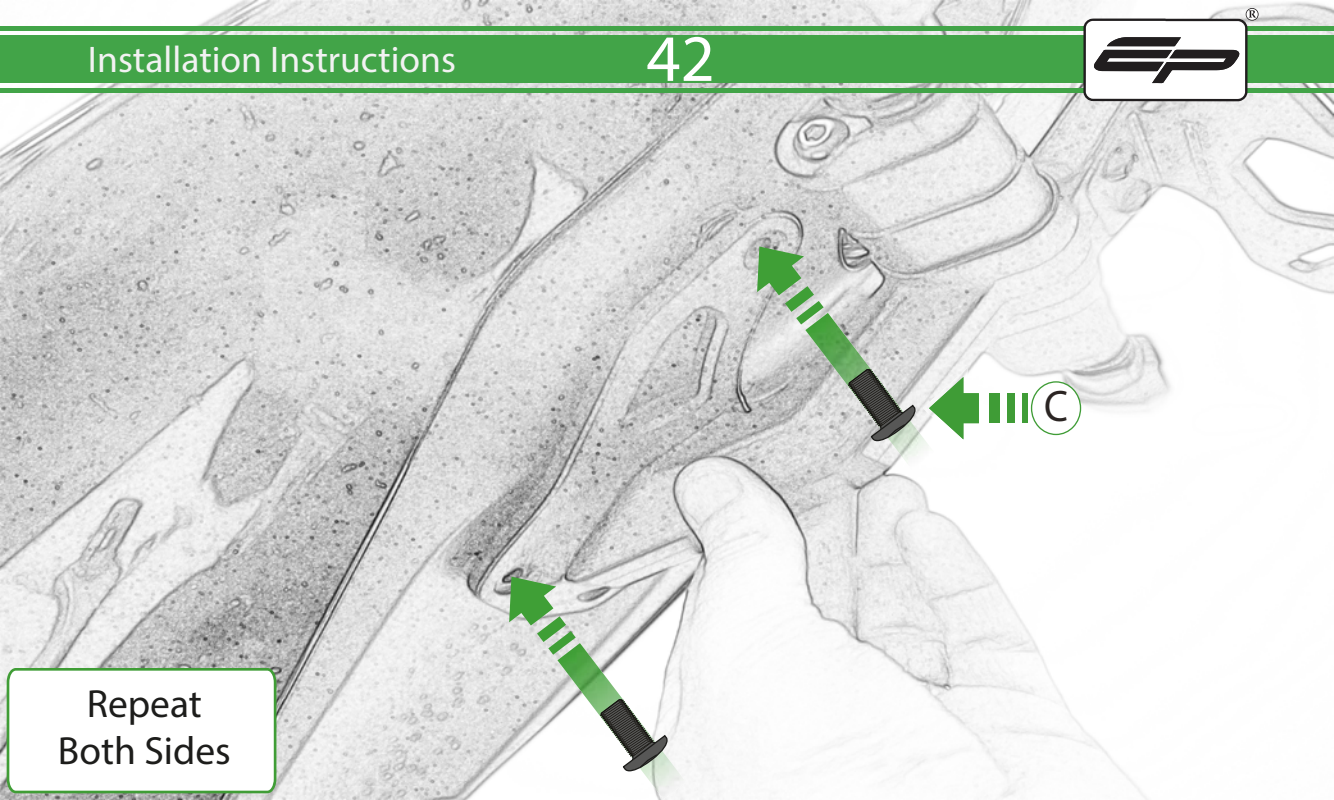



Repeat
Both Sides

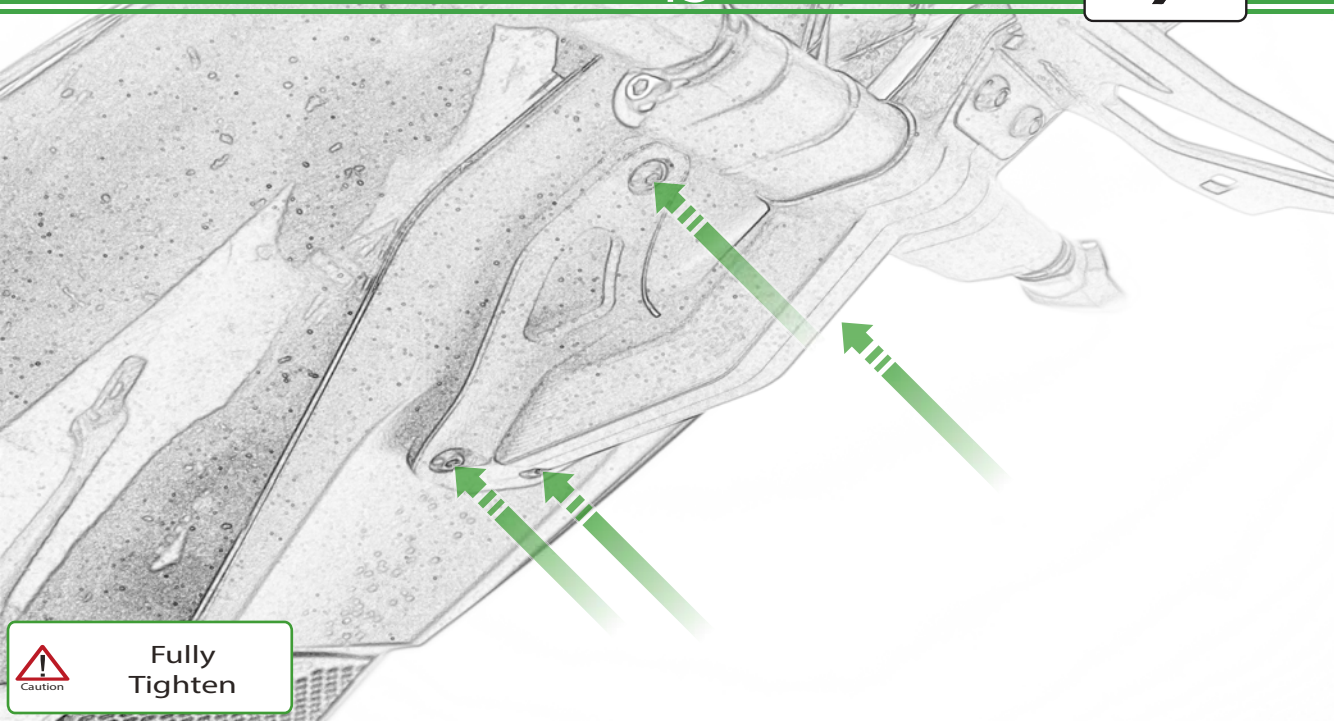

Caution

Fully
Tighten

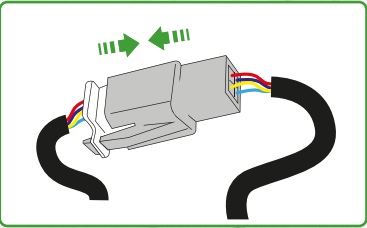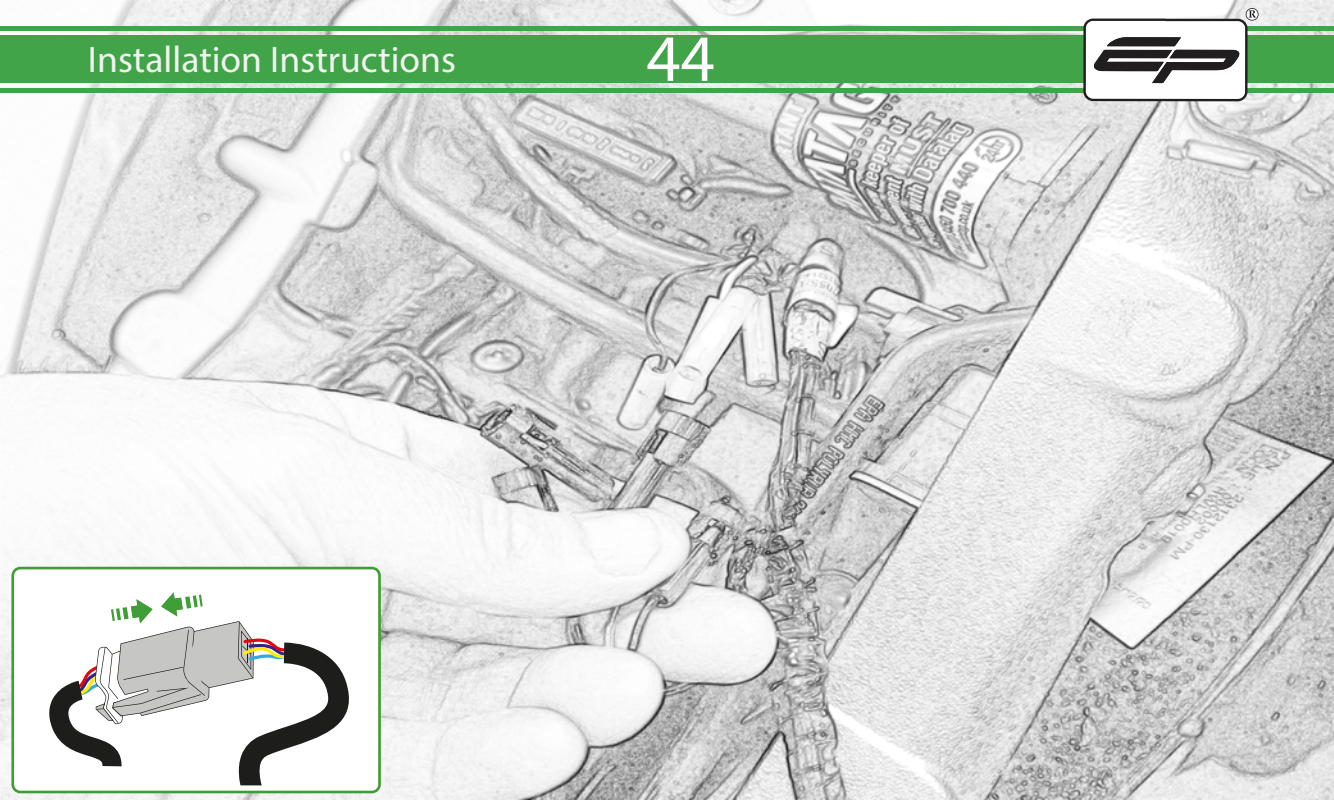

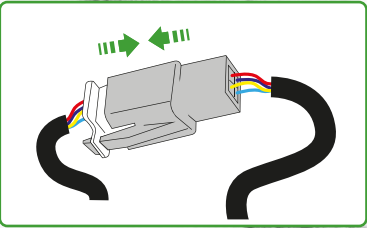





ESSENTIAL CHECKS

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

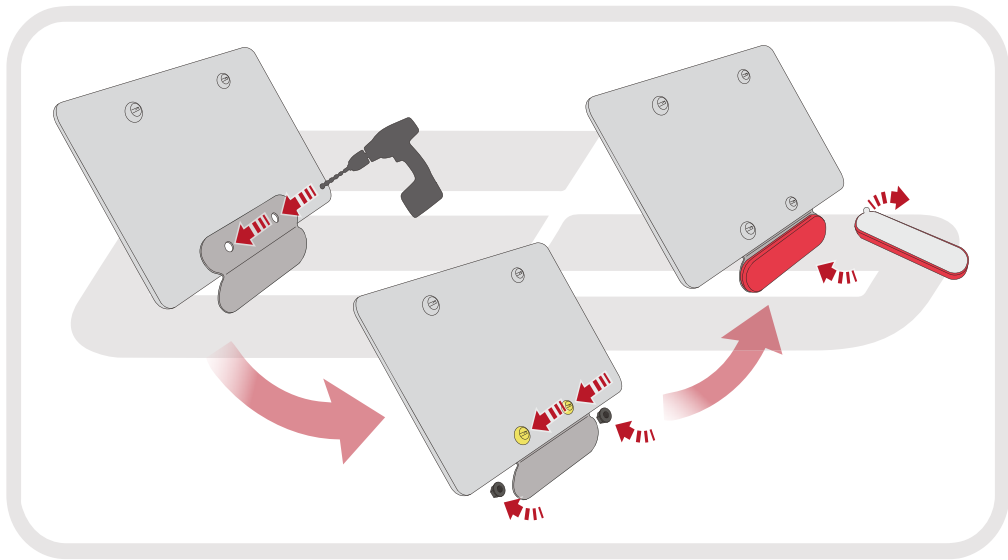

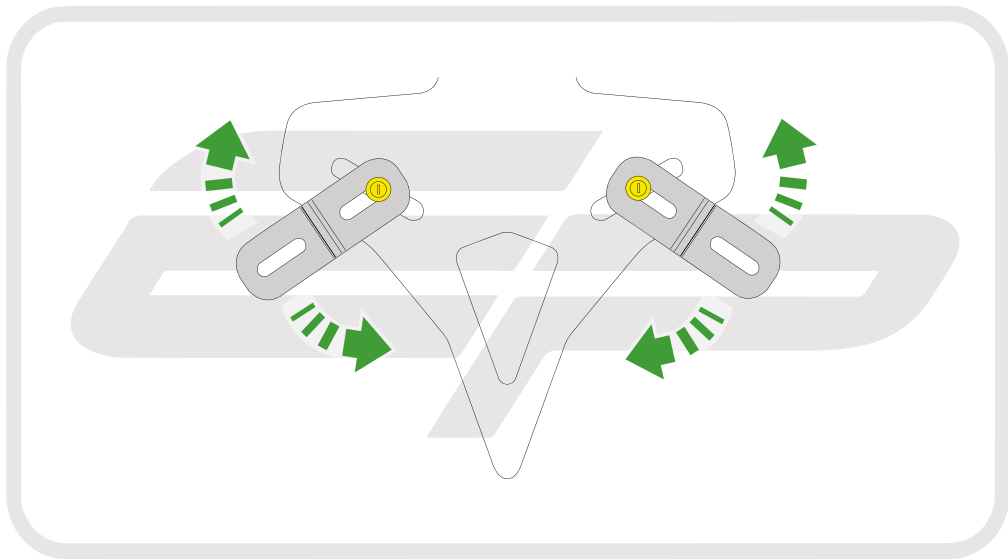



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com