



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


BMW F 900 R / R SE Crash Protection

Installation Instructions



## Kit Contents PRN015001


- Ⓐ 1 x M12 x 165 x 1.75 x Caphead (L/Hand)
- Ⓑ 1 x M12 x 160 x 1.75 x Caphead (R/Hand)
- Ⓒ 1 x L/H Bobbin Spacer (Long)
- Ⓓ 1 x R/H Bobbin Spacer (Short)
- Ⓔ 2 x Poly Washer
- Ⓕ 2 x M12 Washer
- Ⓖ 2 x Bobbin Head

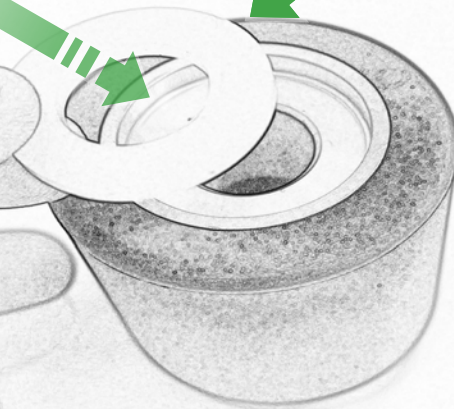



E


G




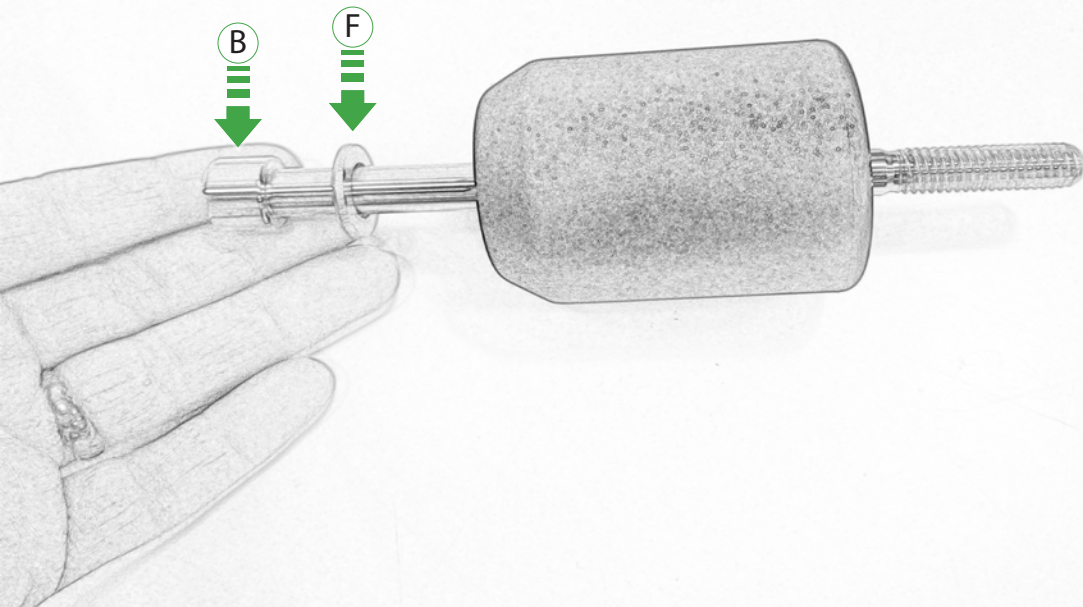

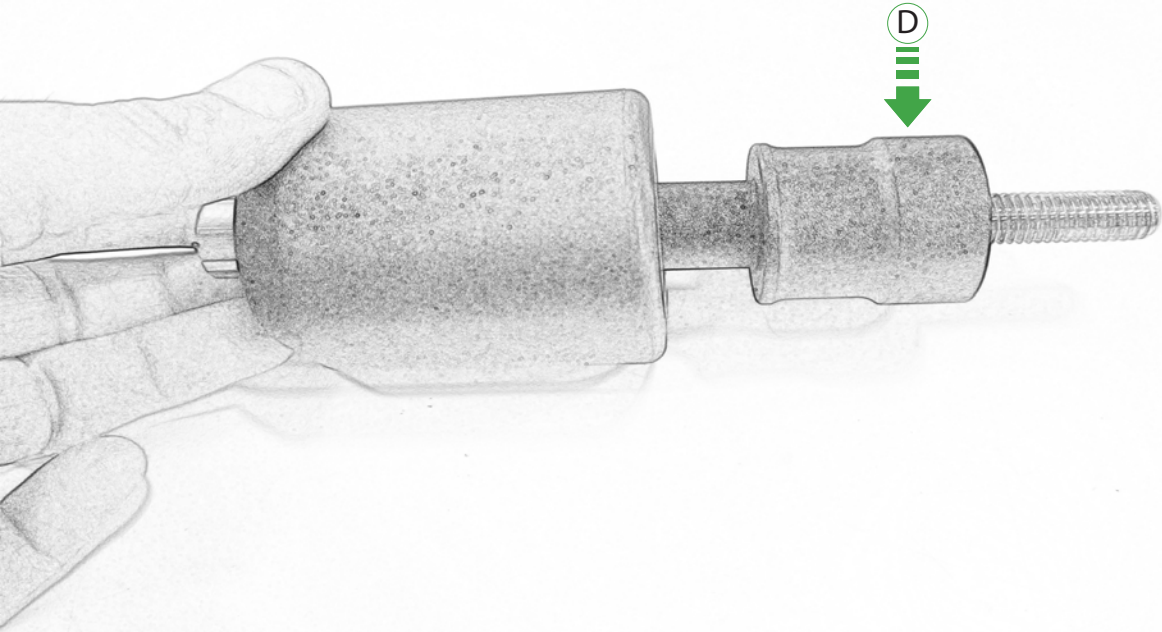

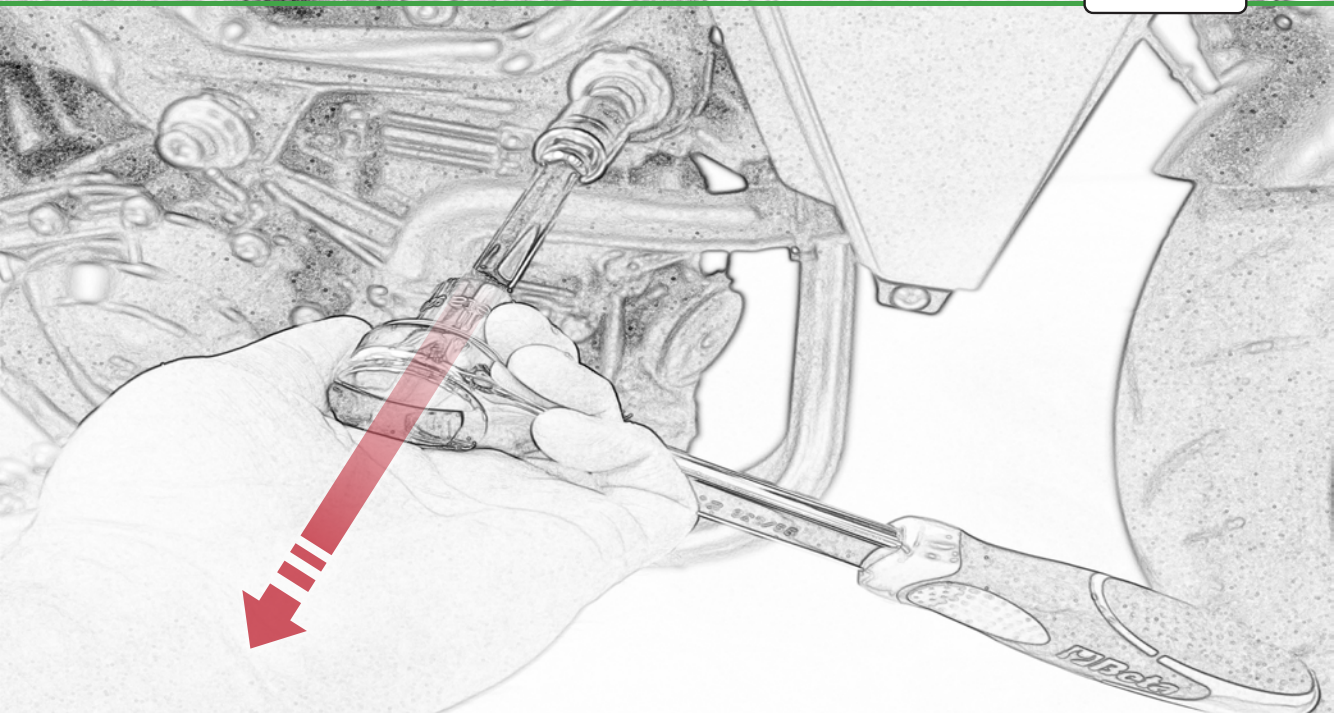

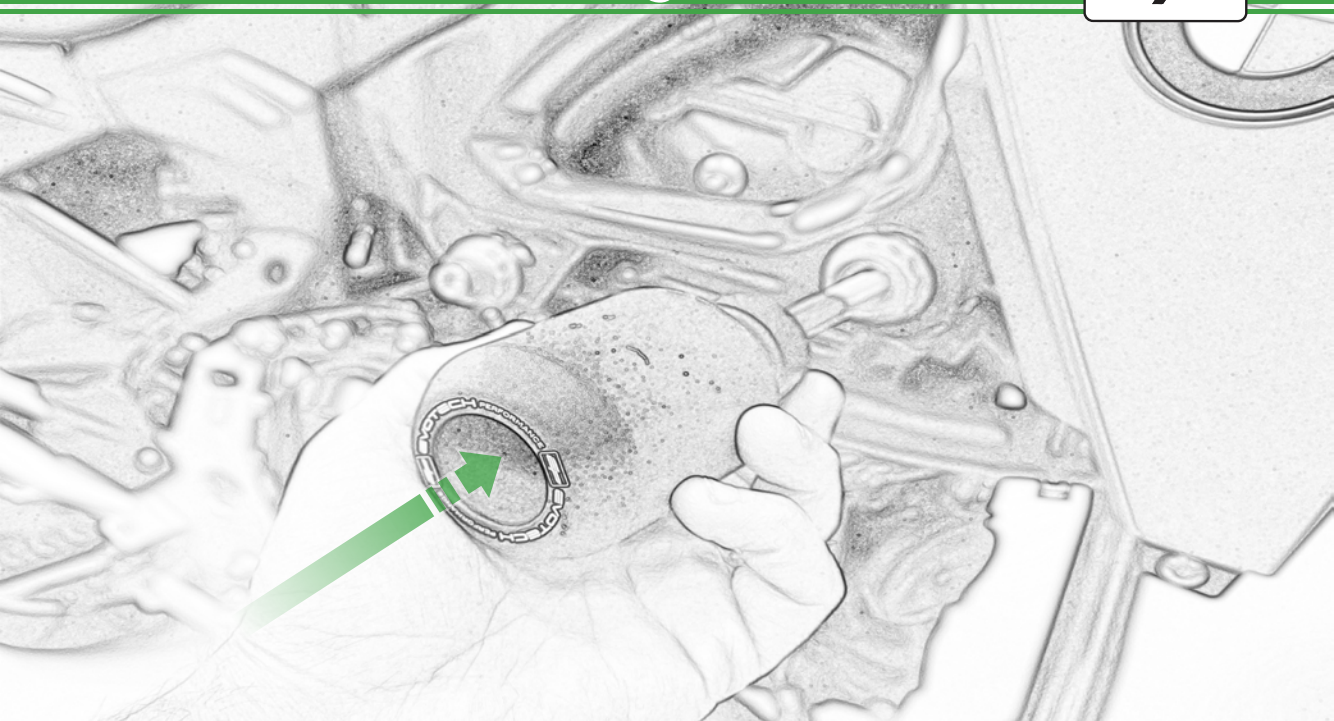

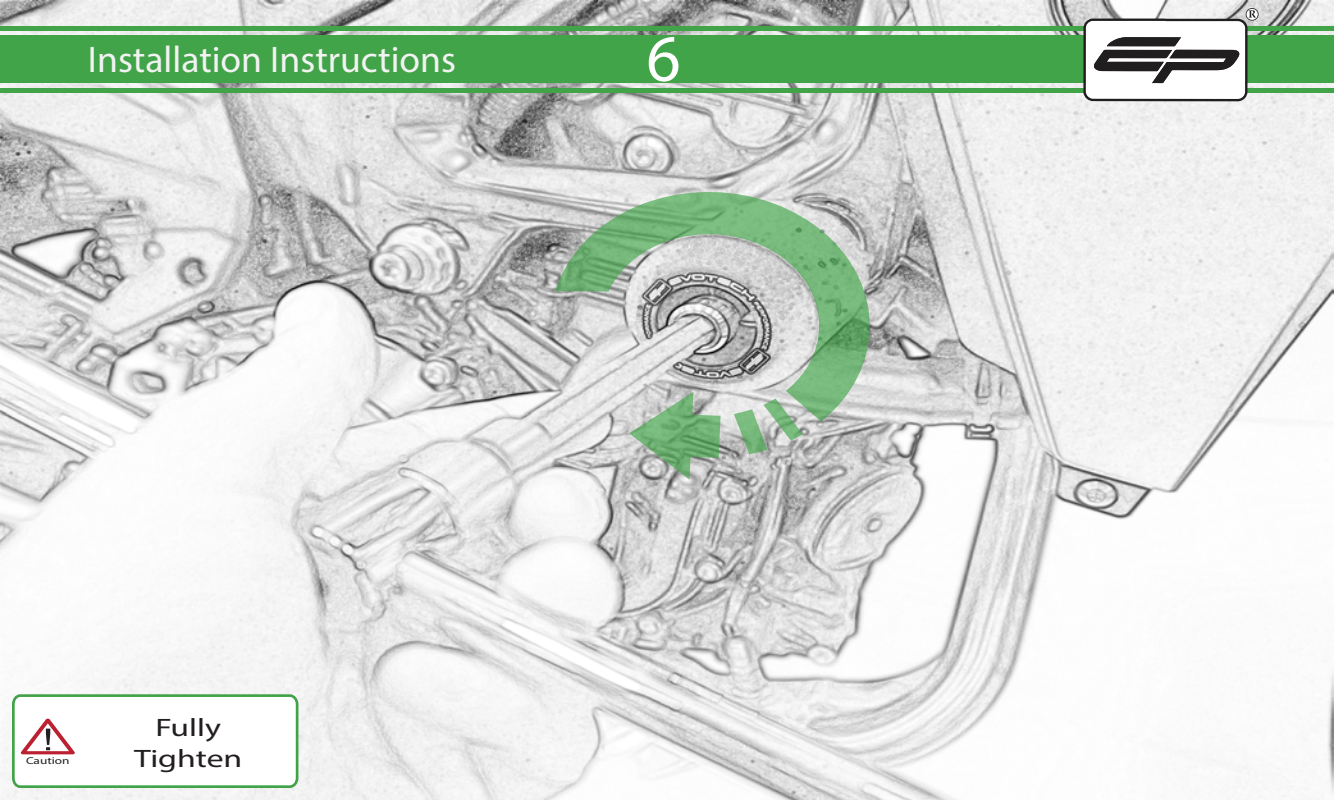

Caution


Fully  
Tighten








E


G

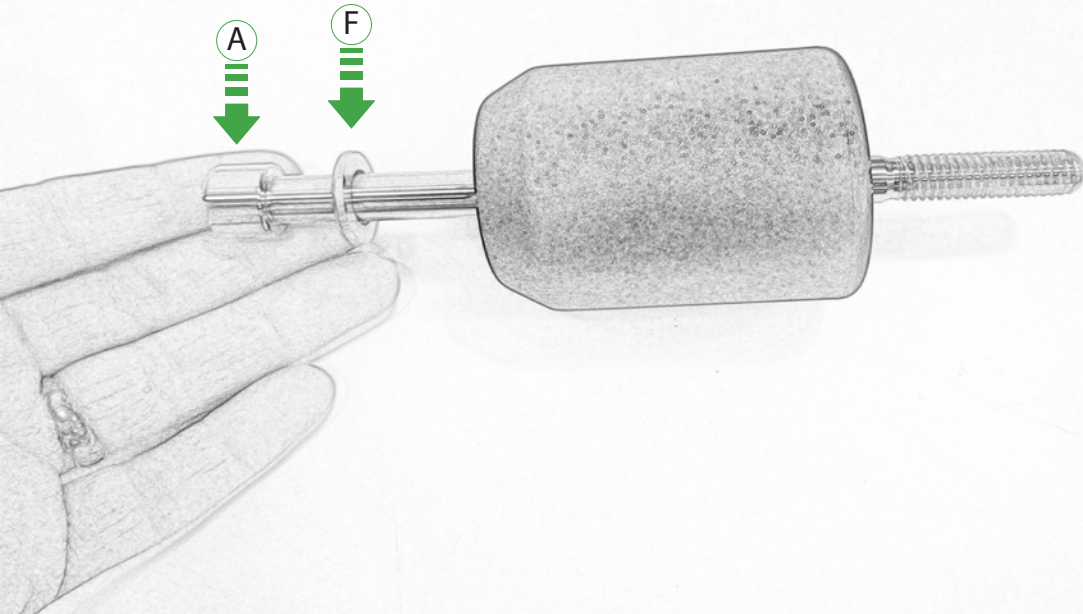


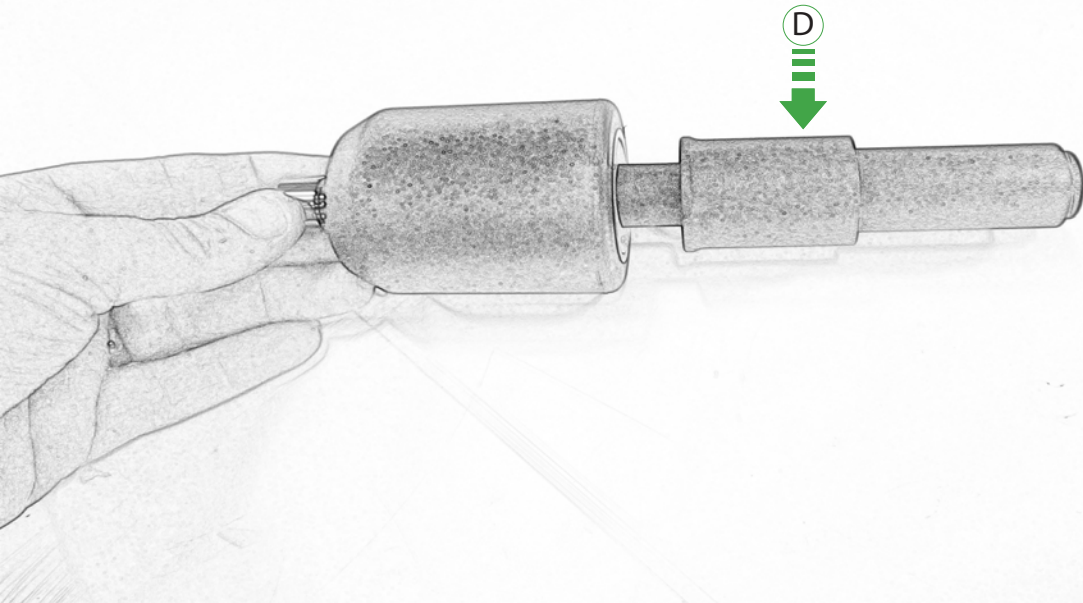

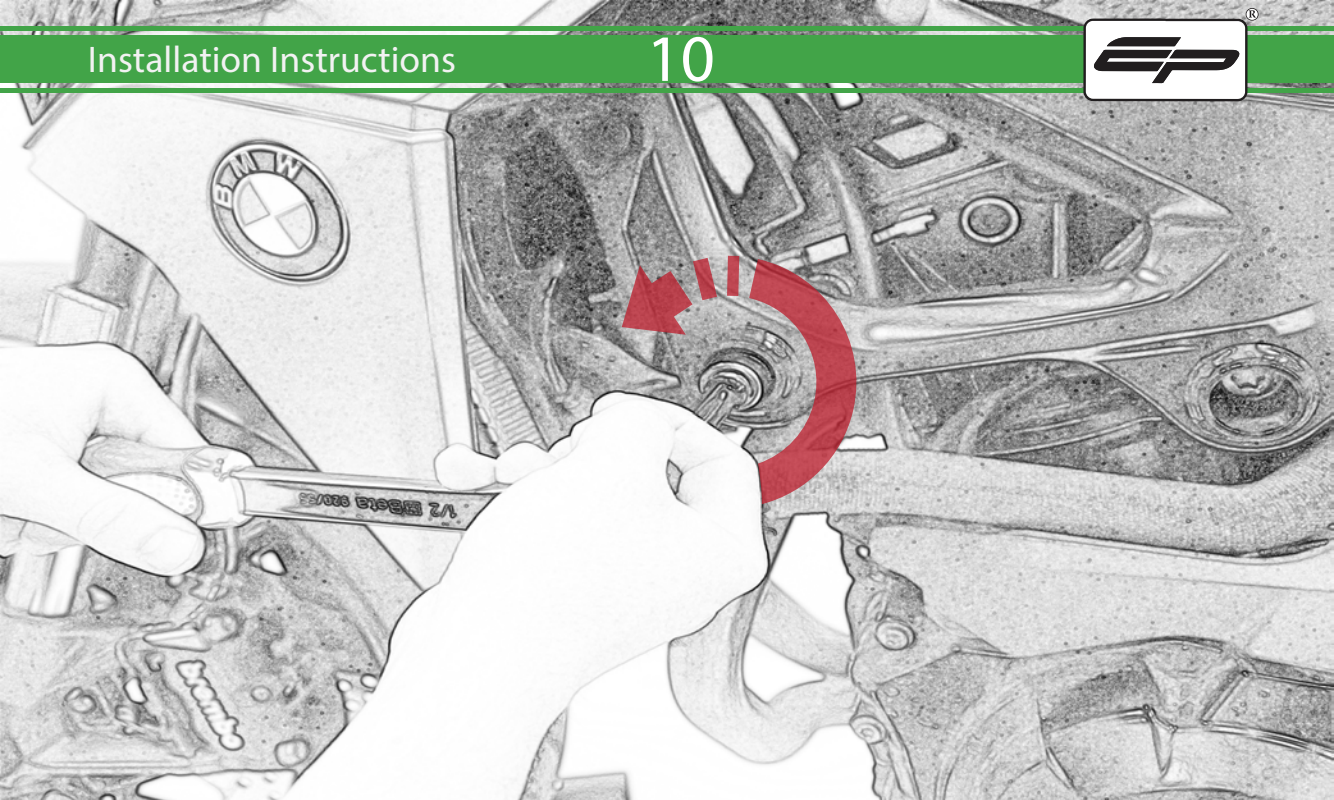

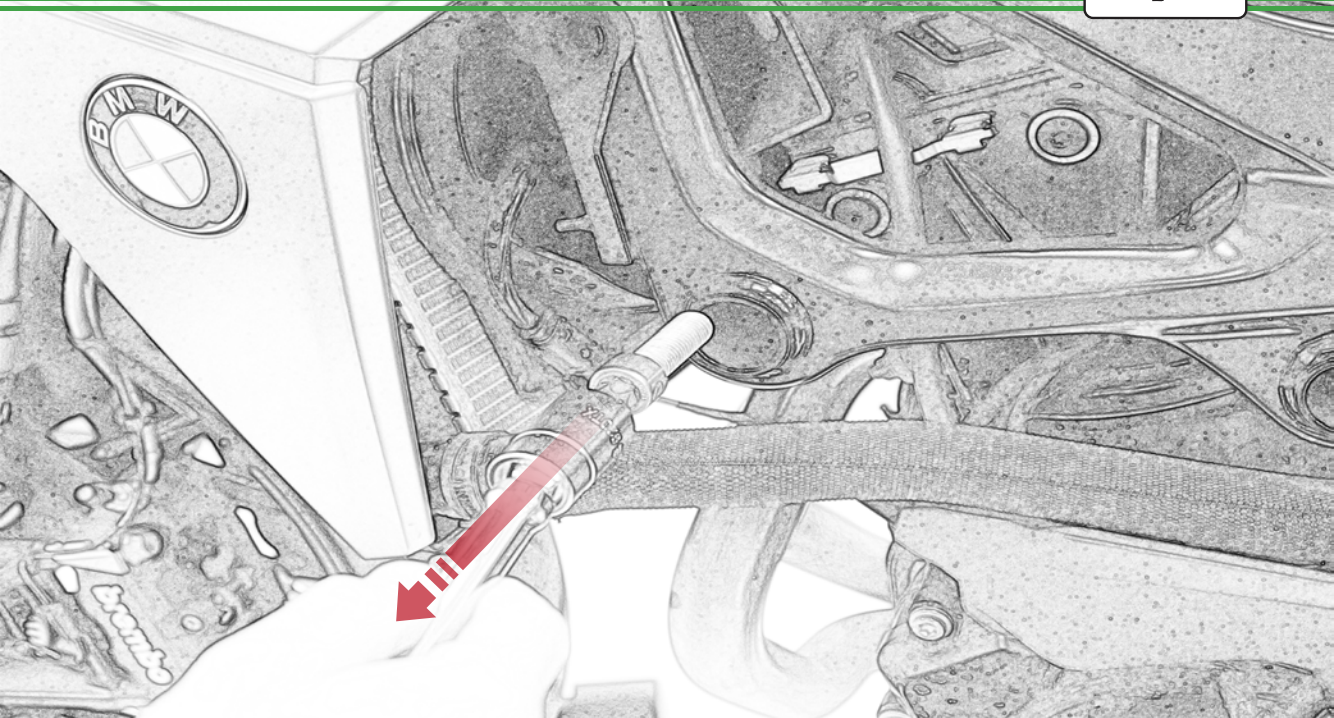

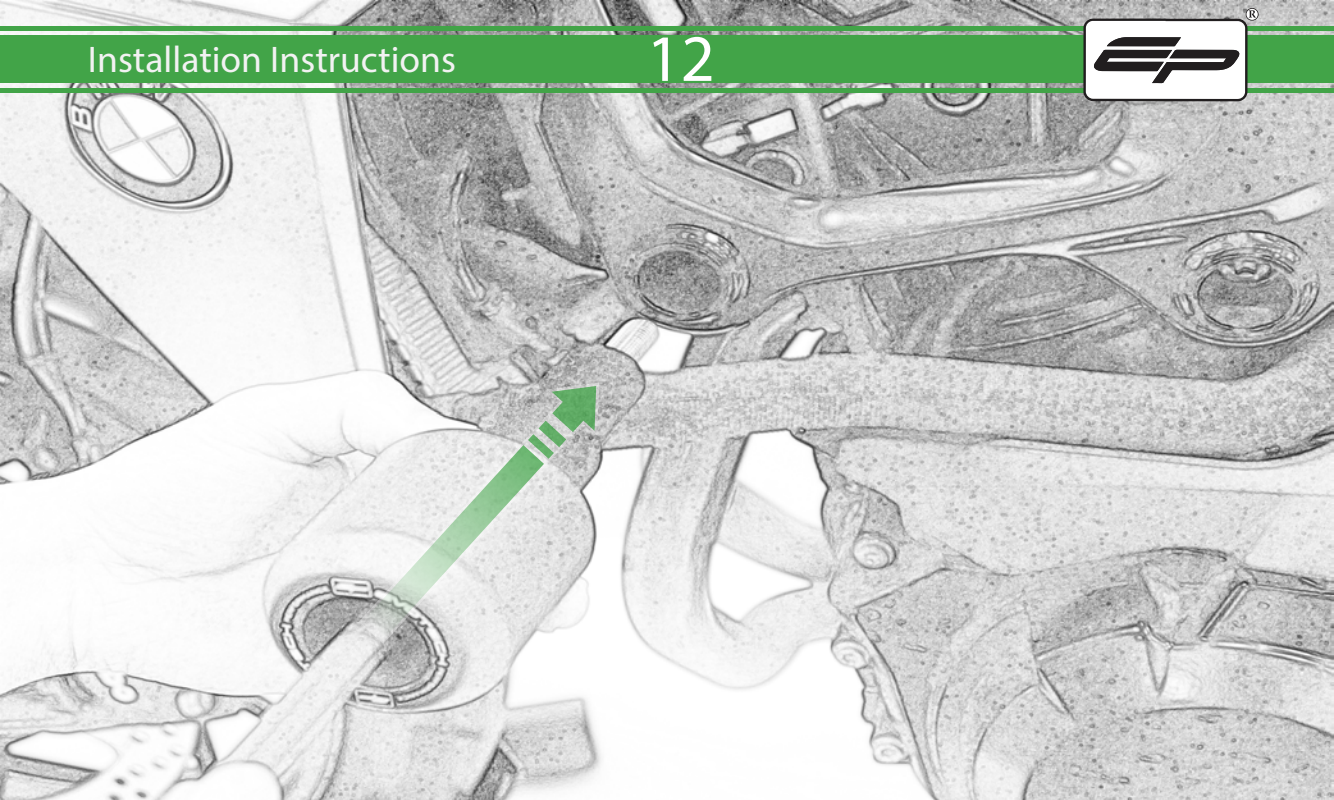

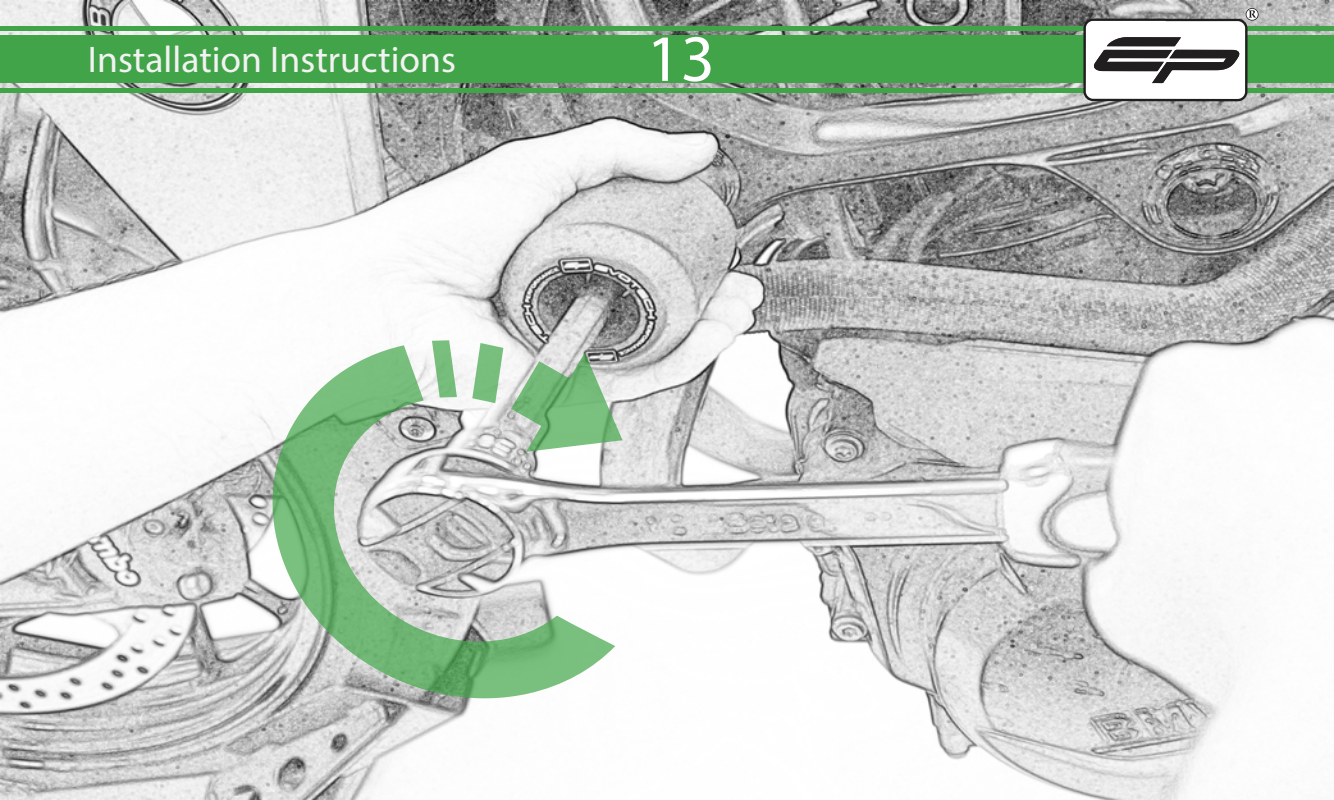



## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)