



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Ducati Streetfighter V4 Sump Guard


Installation Instructions





Kit Contents PRN015596


- A 1 x Sump Guard
- B 3 x M6 x 20 Caphead

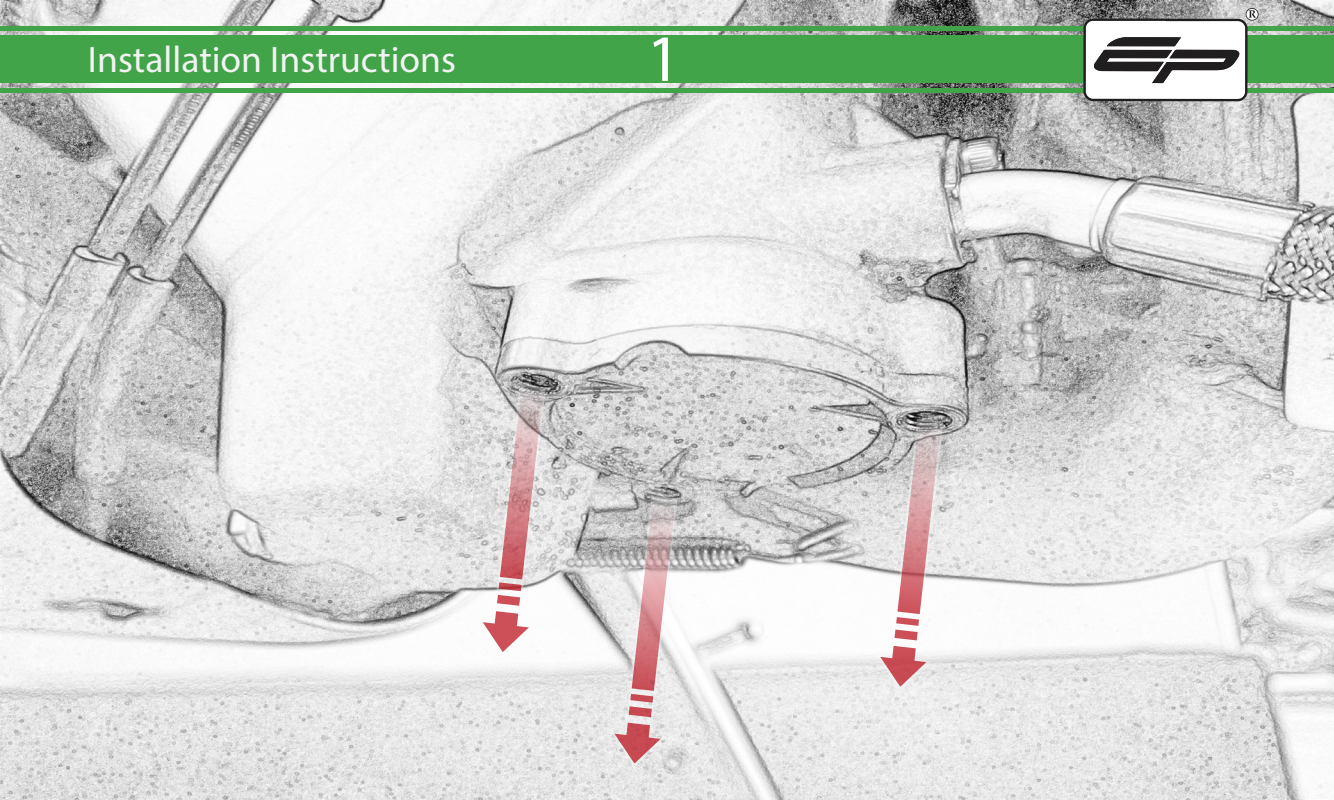

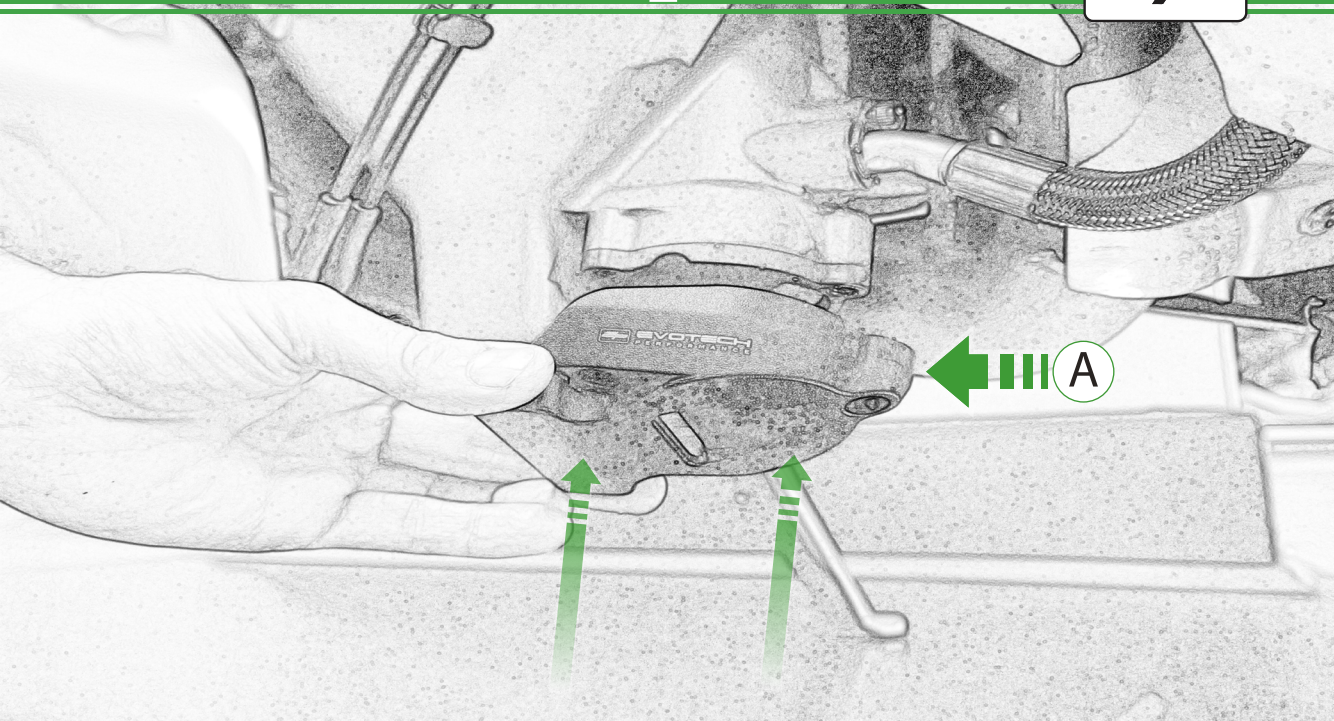

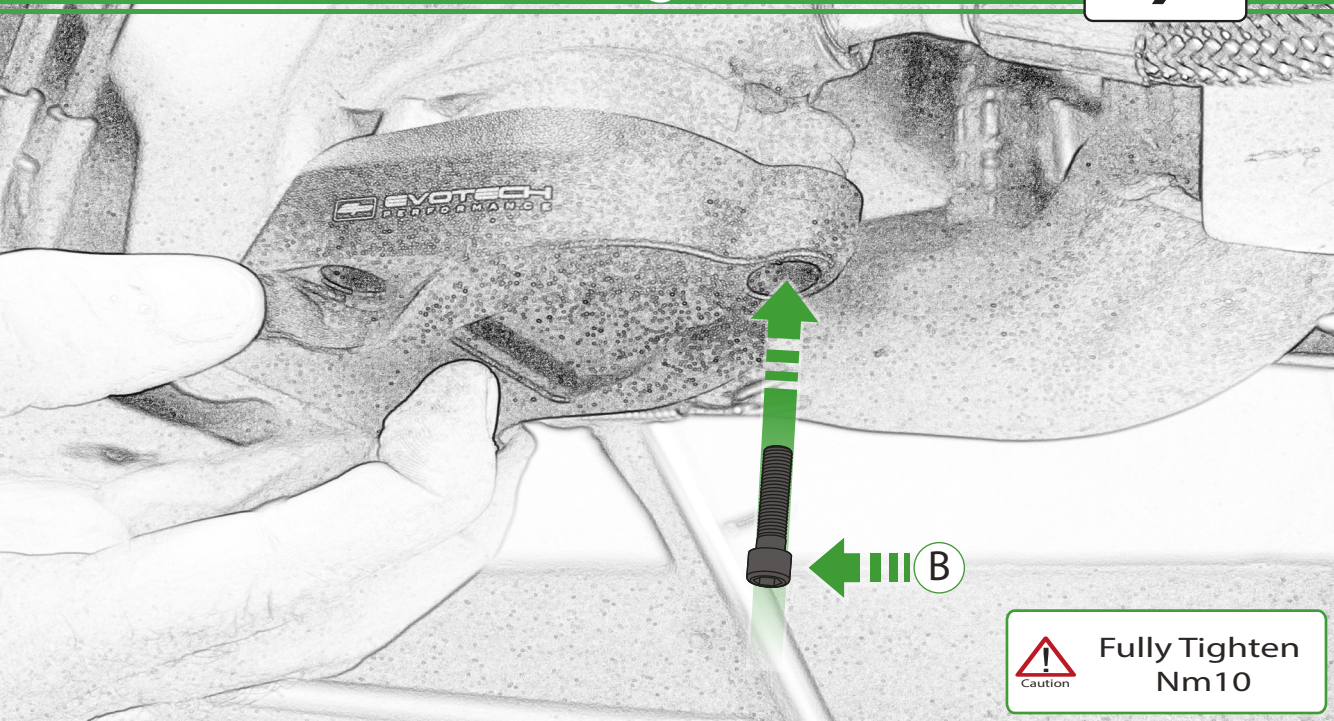

 Fully Tighten
Nm10

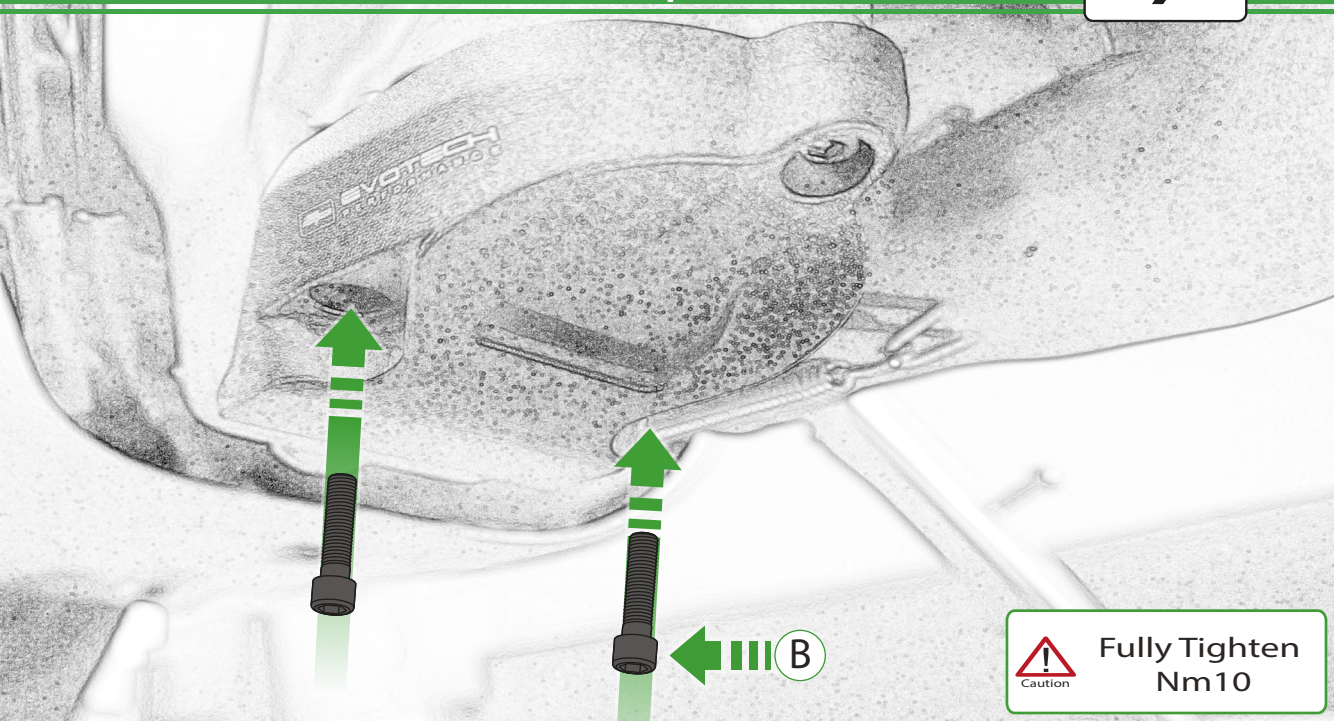

 Fully Tighten
Nm10



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com