



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com


Ducati Multistrada V4 Hand Guards


Installation Instructions





Kit Contents PRN015334


- Ⓐ 1 x Handguard Bracket - R/H & L/H
- Ⓑ 2 x Bar End Inner Collet - 14.4mm Dia
- Ⓒ 2 x Bar End Outer
- Ⓓ 2 x Bar End Outer (middle fit)
- Ⓔ 2 x Bar End Inner
- Ⓕ 2 x Inner Cone
- Ⓖ 2 x Mounting Bracket
- Ⓗ 2 x O-Ring 9.5mm ID x 2.5mm
- Ⓘ 2 x M6 x 80mm Caphead
- Ⓙ 4 x M6 x 35mm Caphead
- Ⓚ 4 x M5 x 16mm Caphead

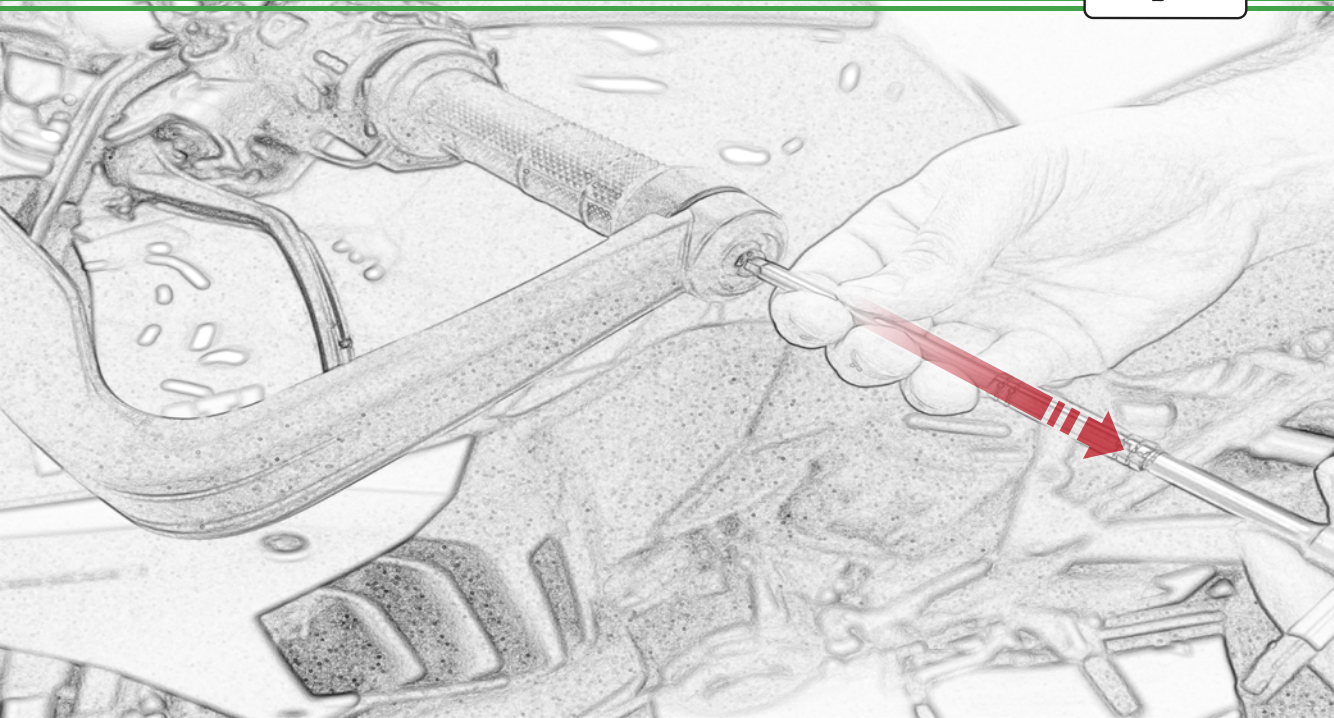


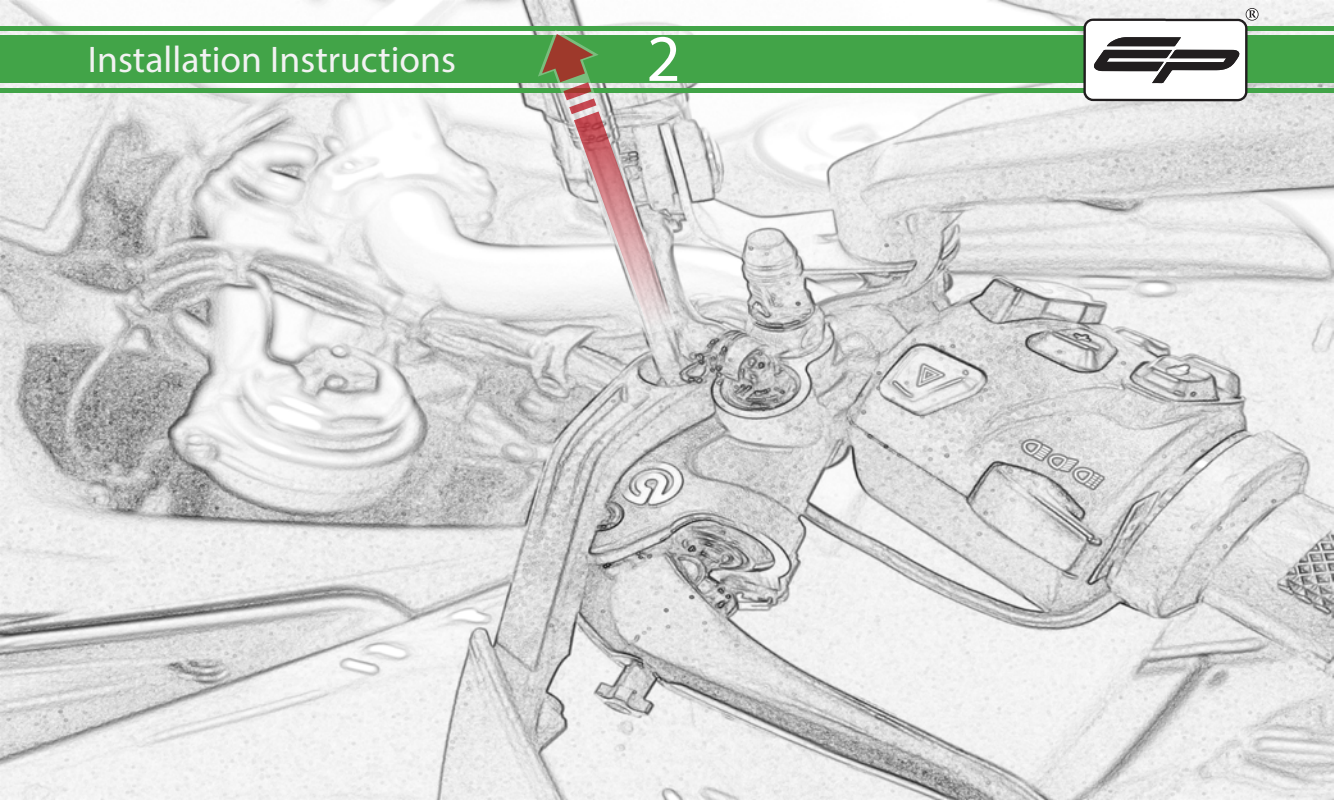


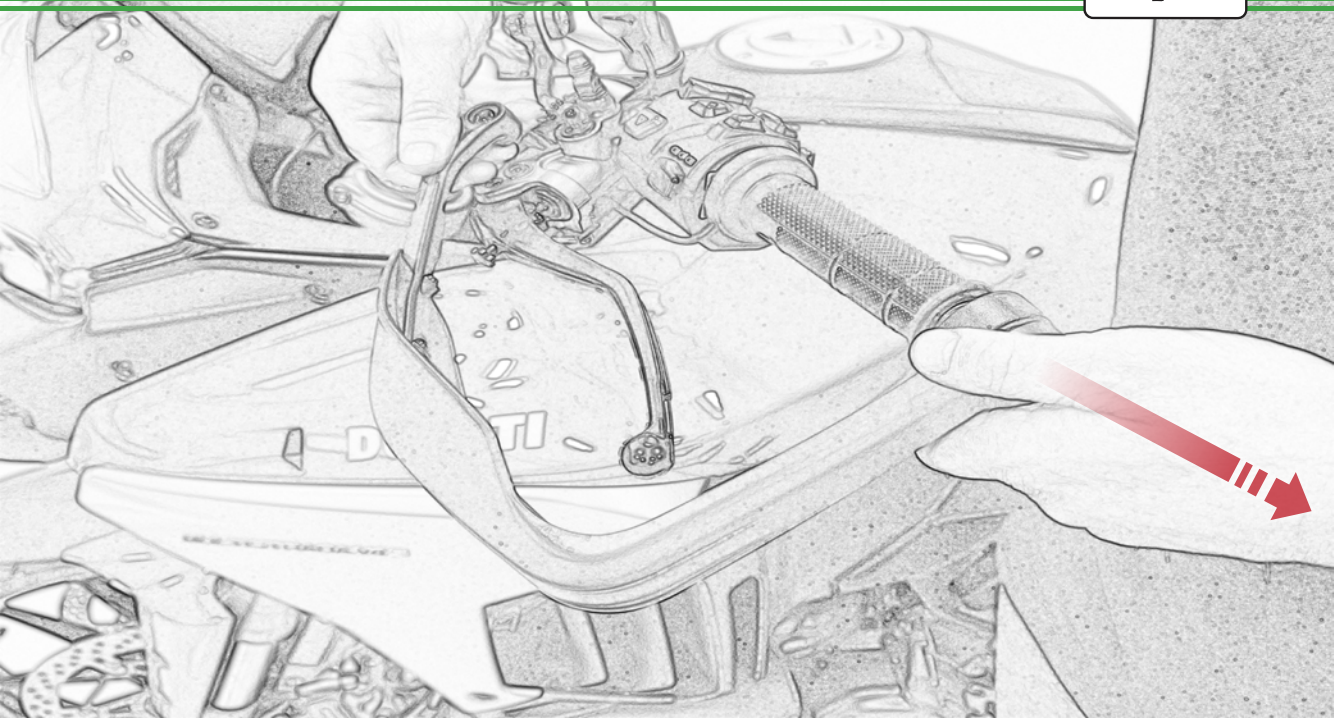


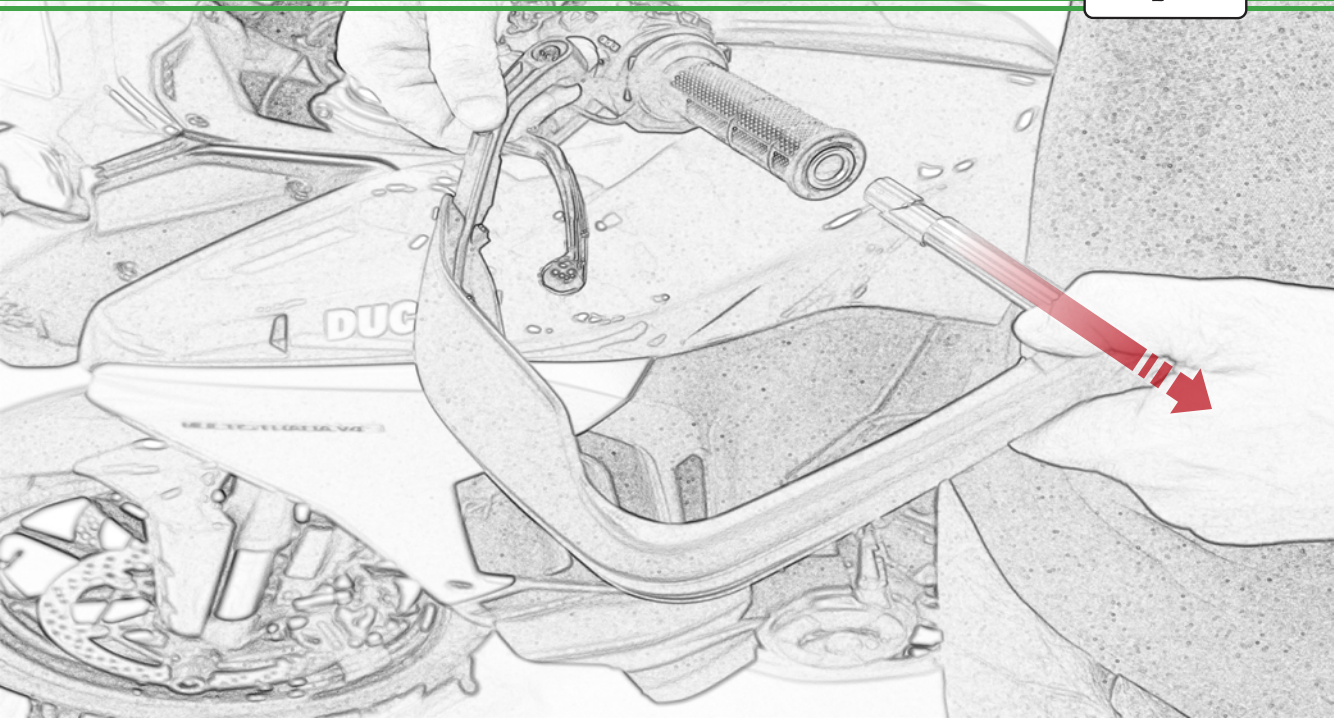


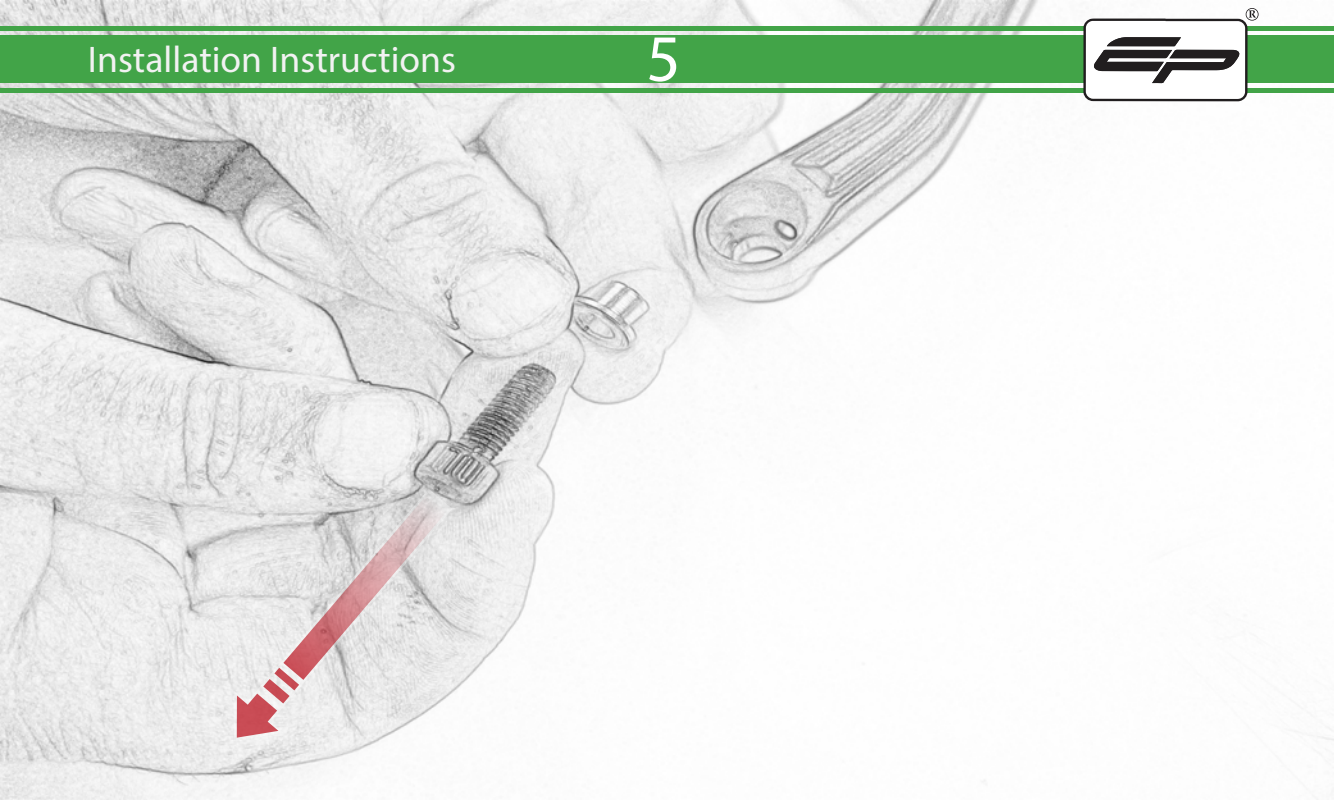

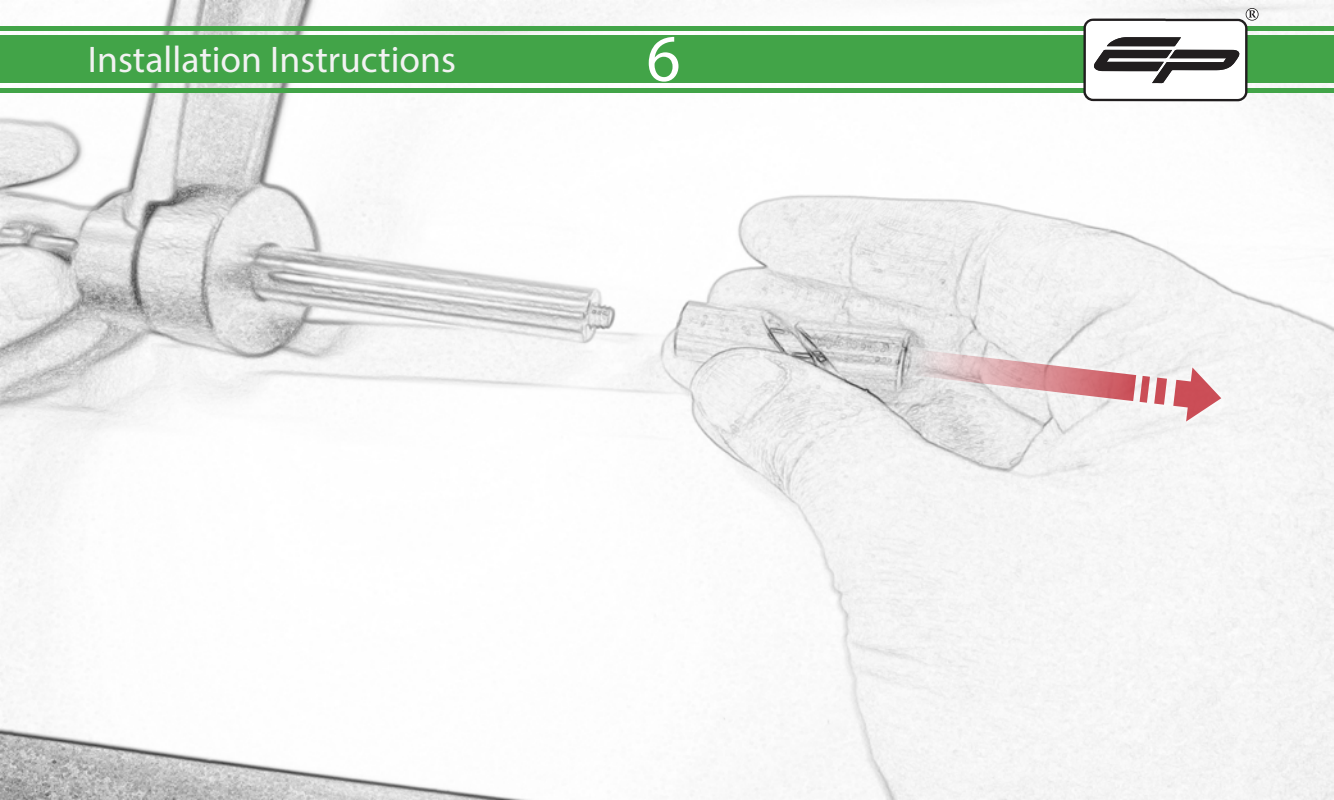


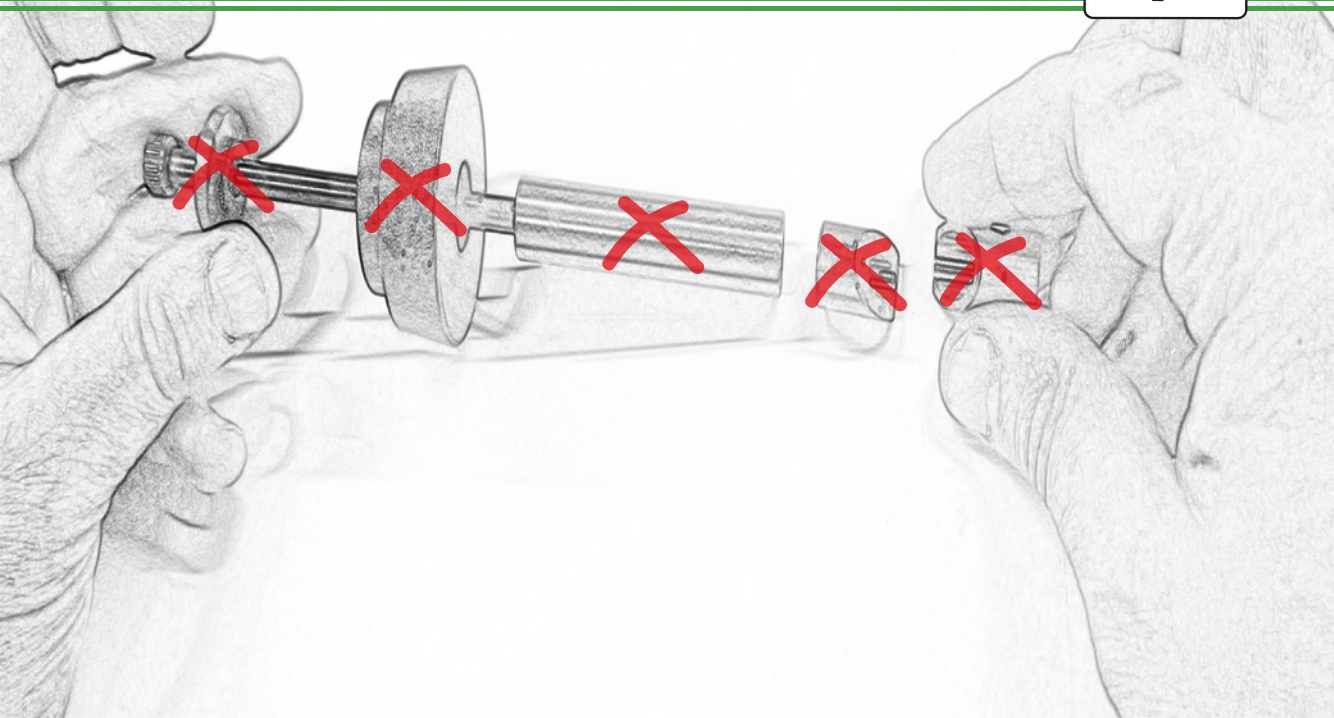

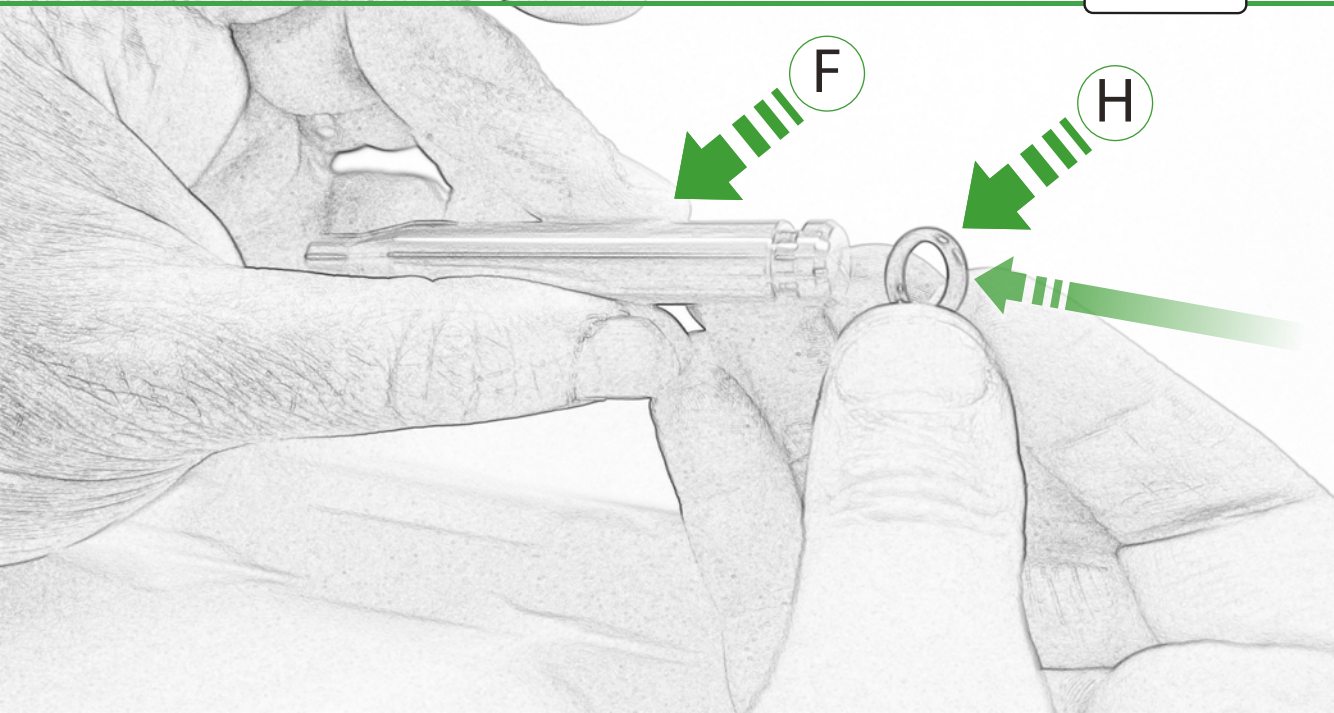


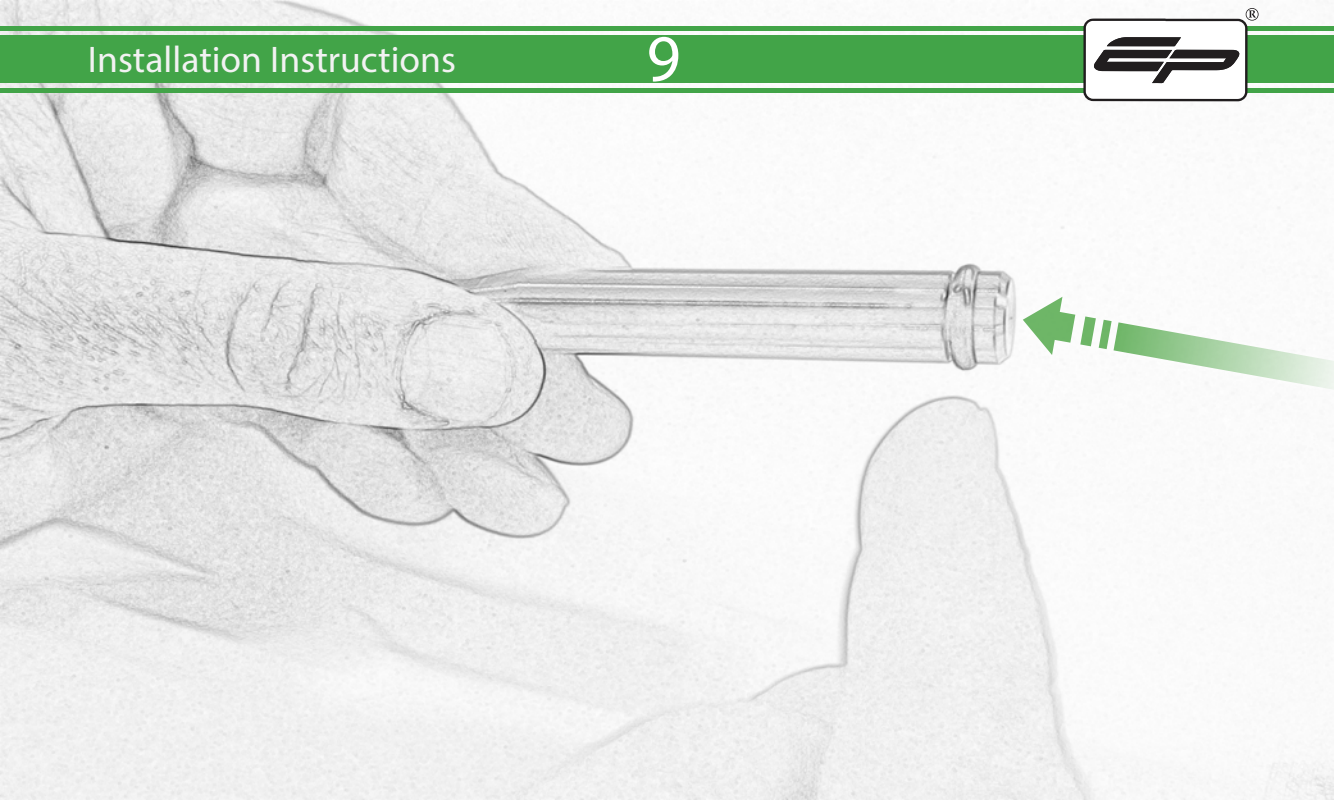




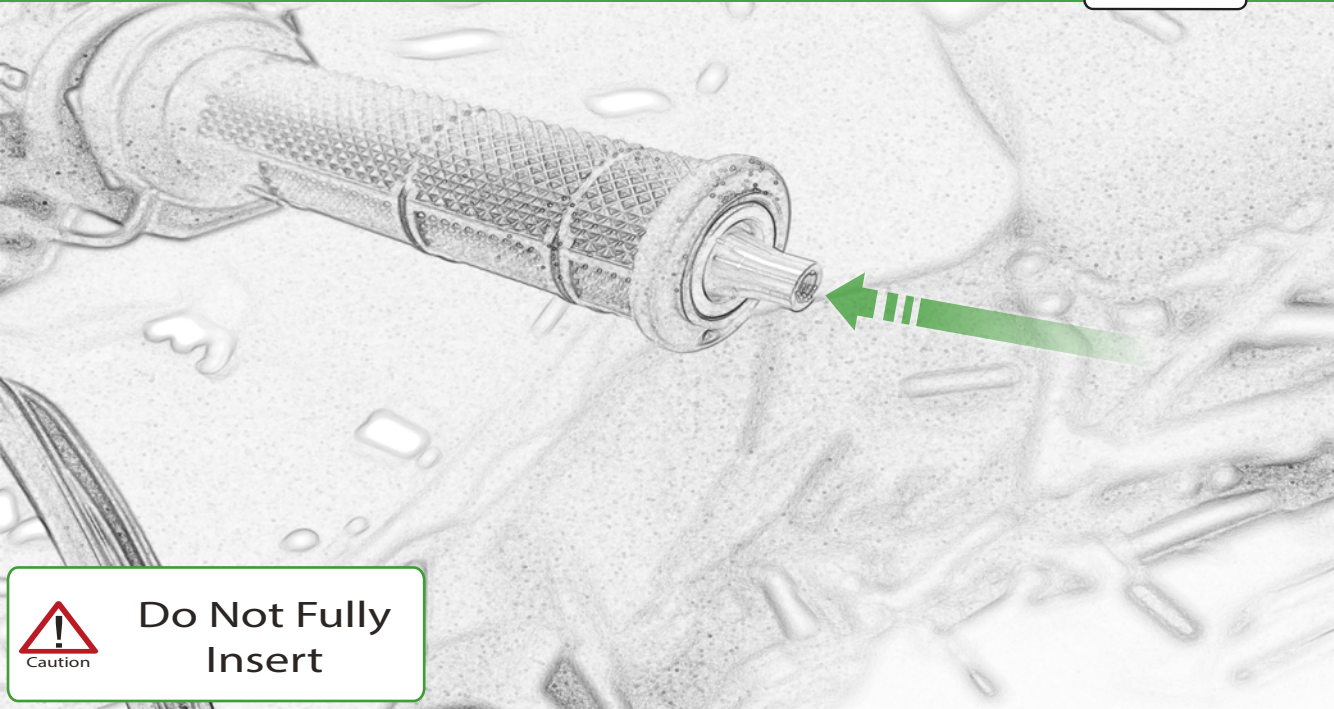



**Do Not Fully
Insert**

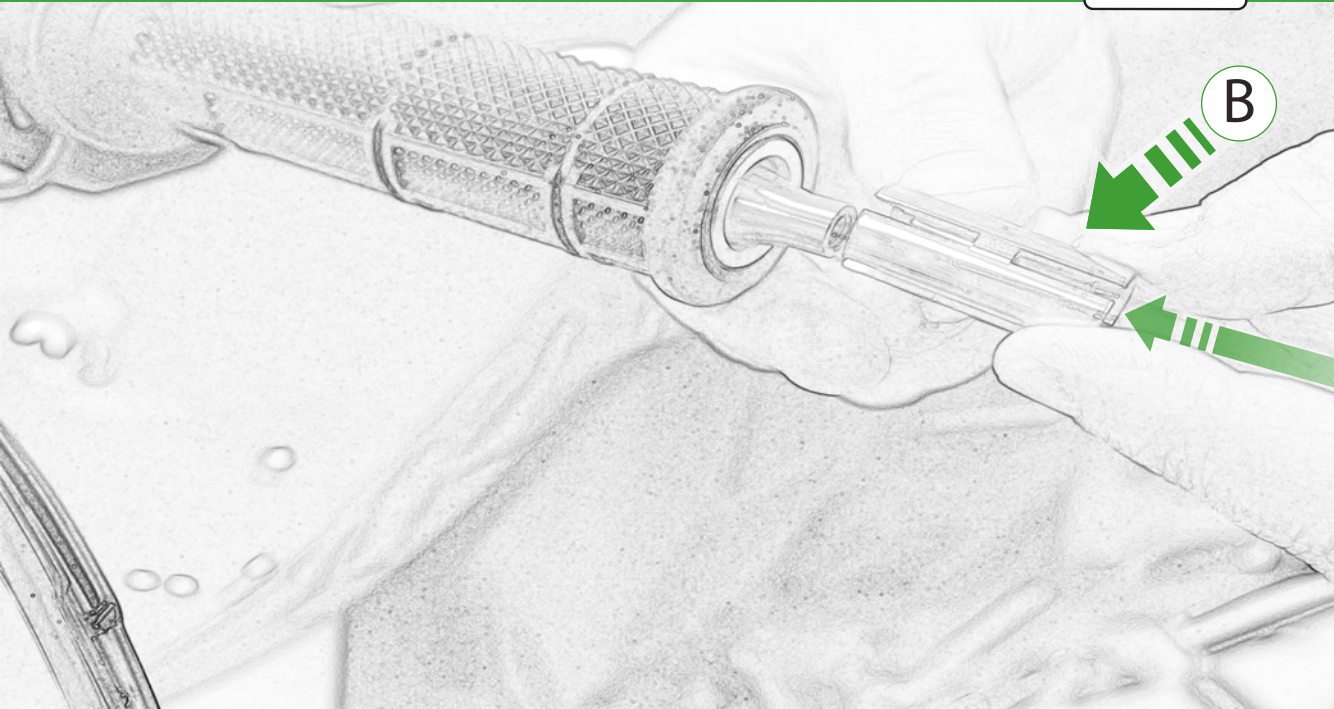

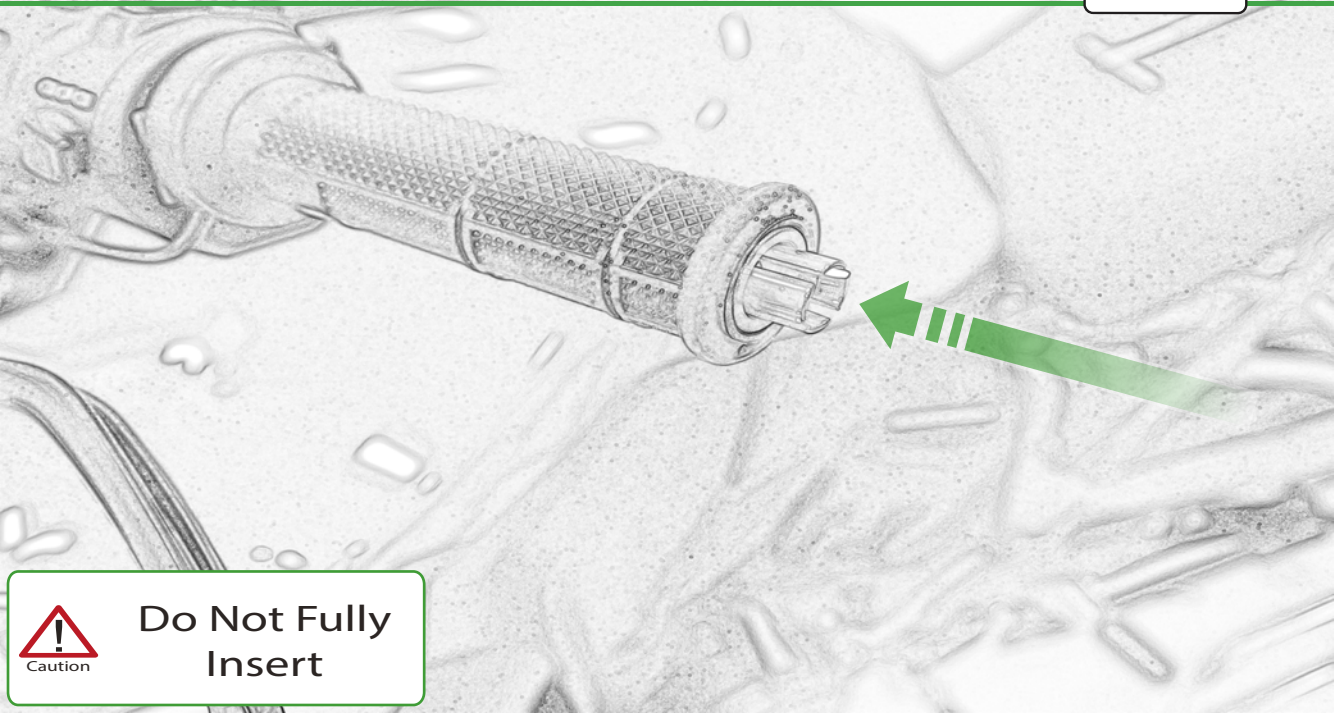


**Do Not Fully
Insert**

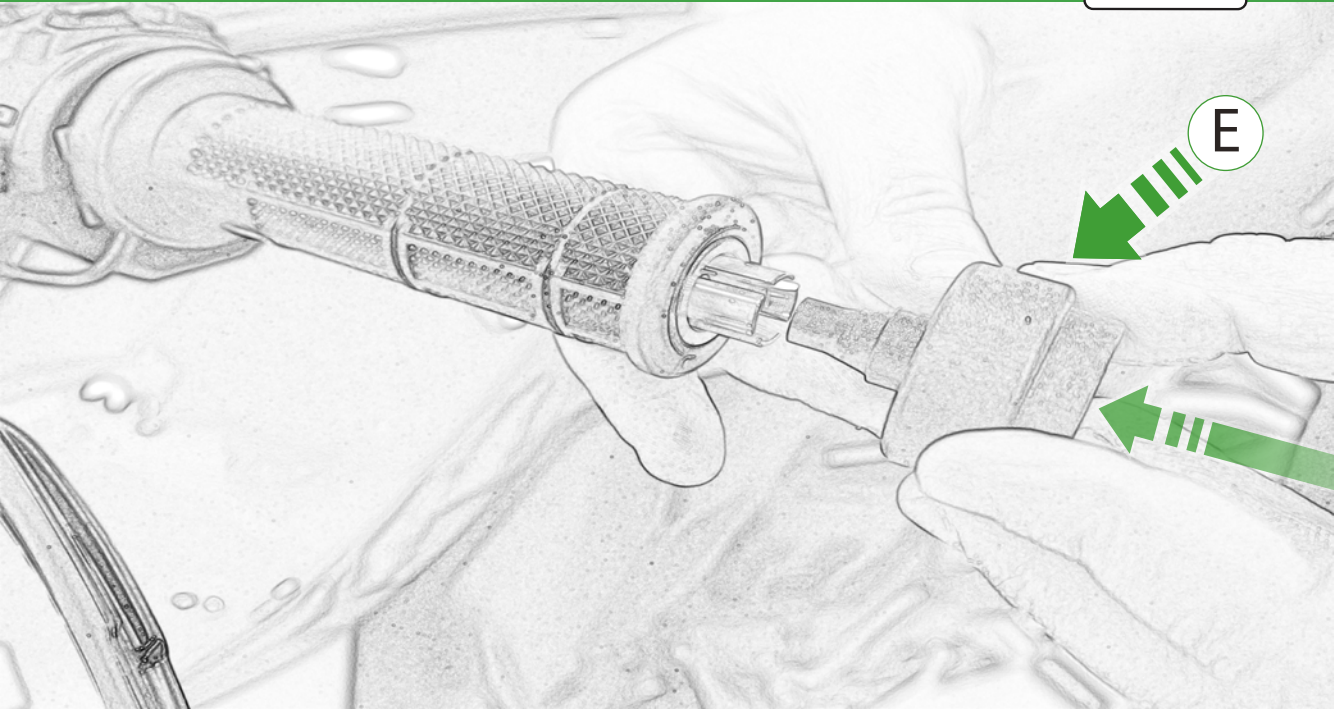

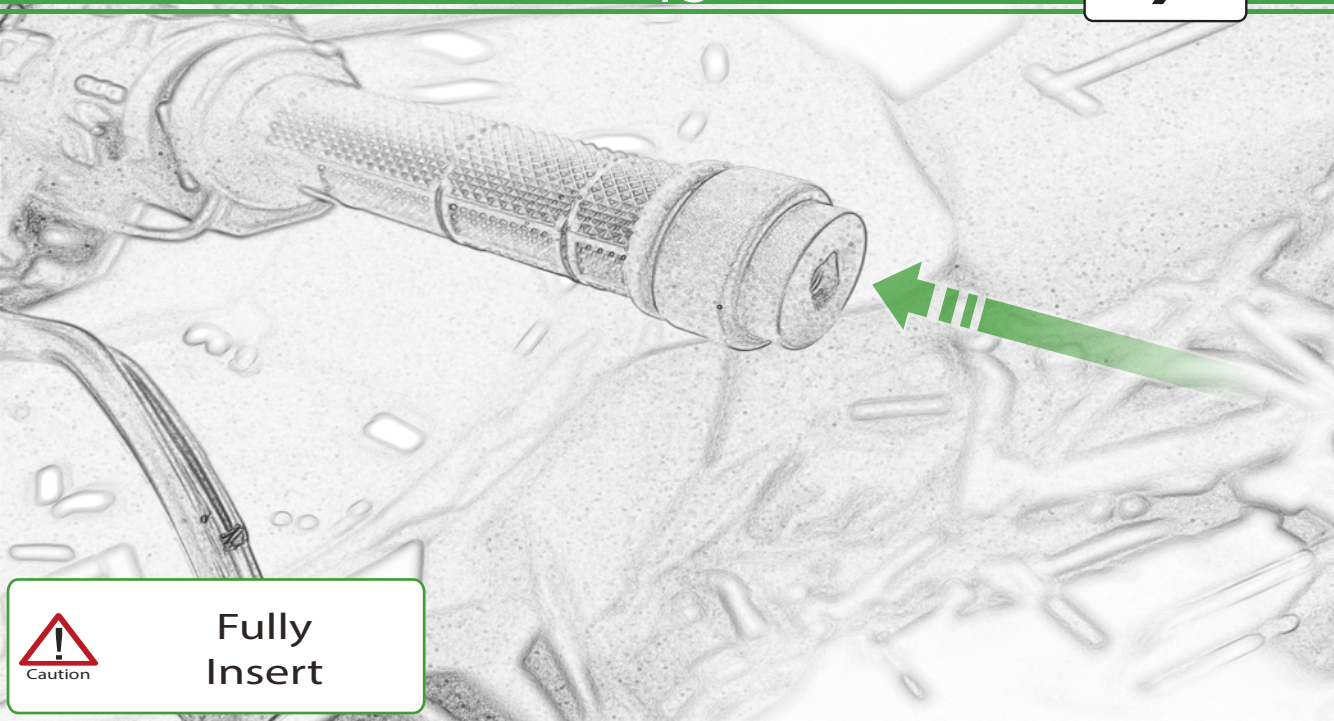


Fully
Insert




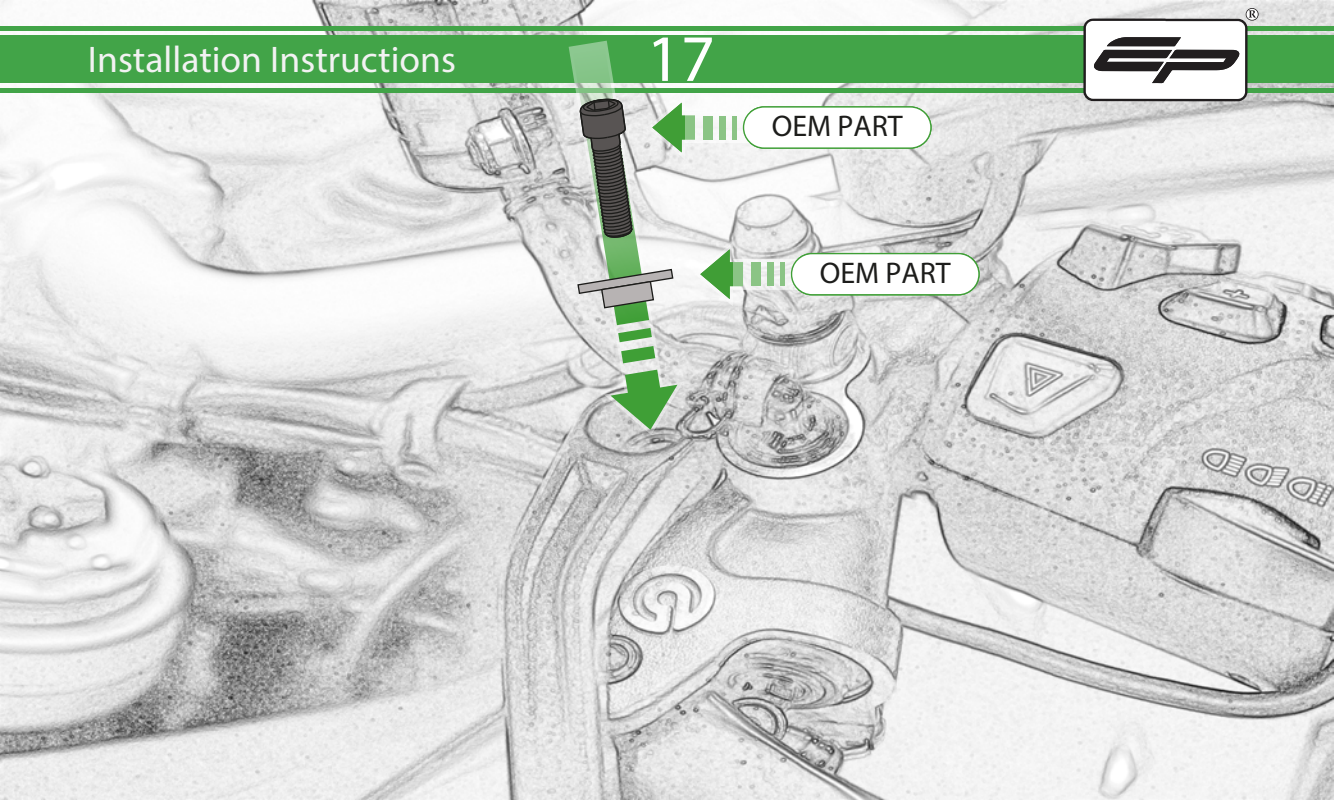


OEM PART


OEM PART

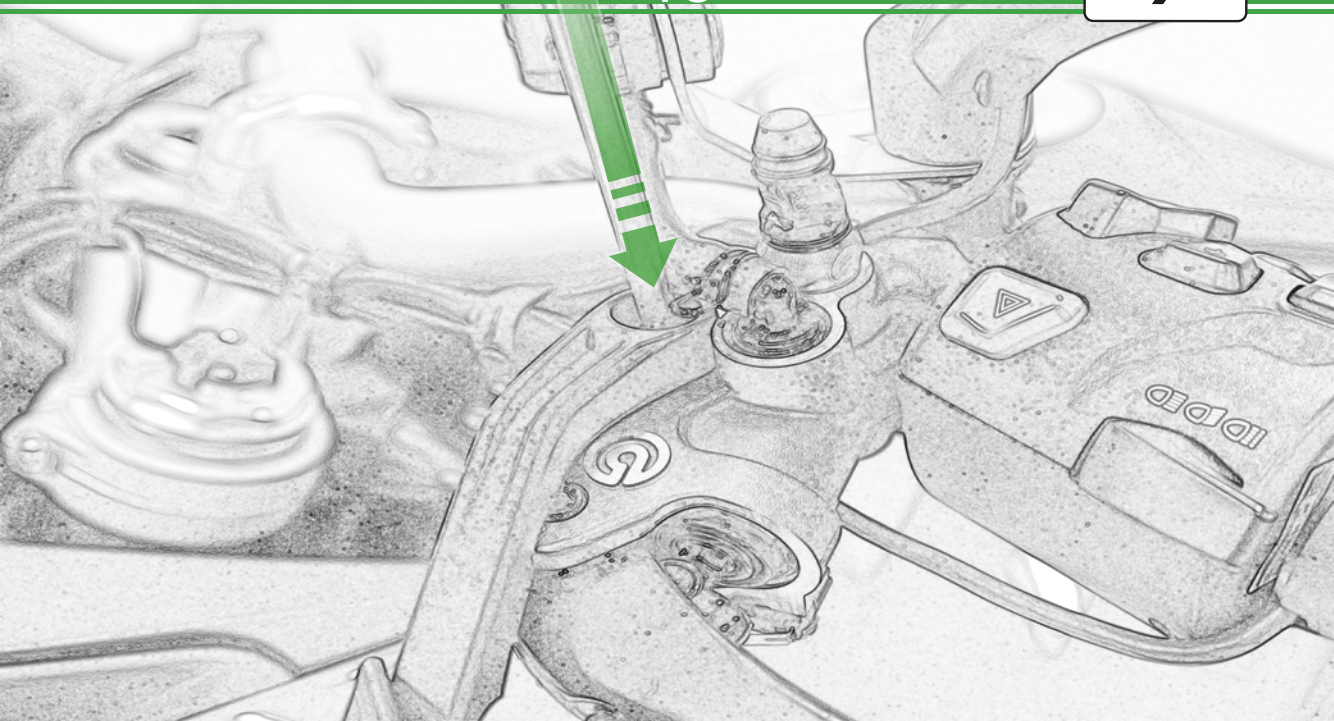


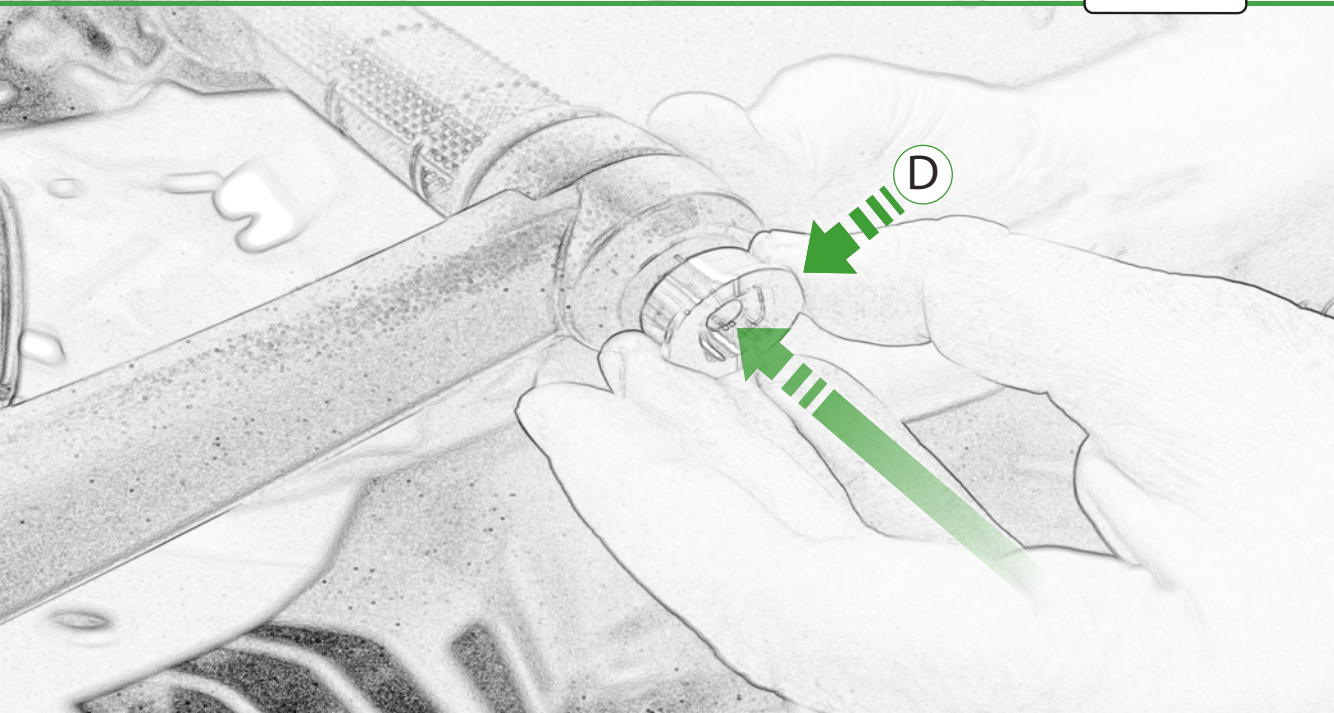


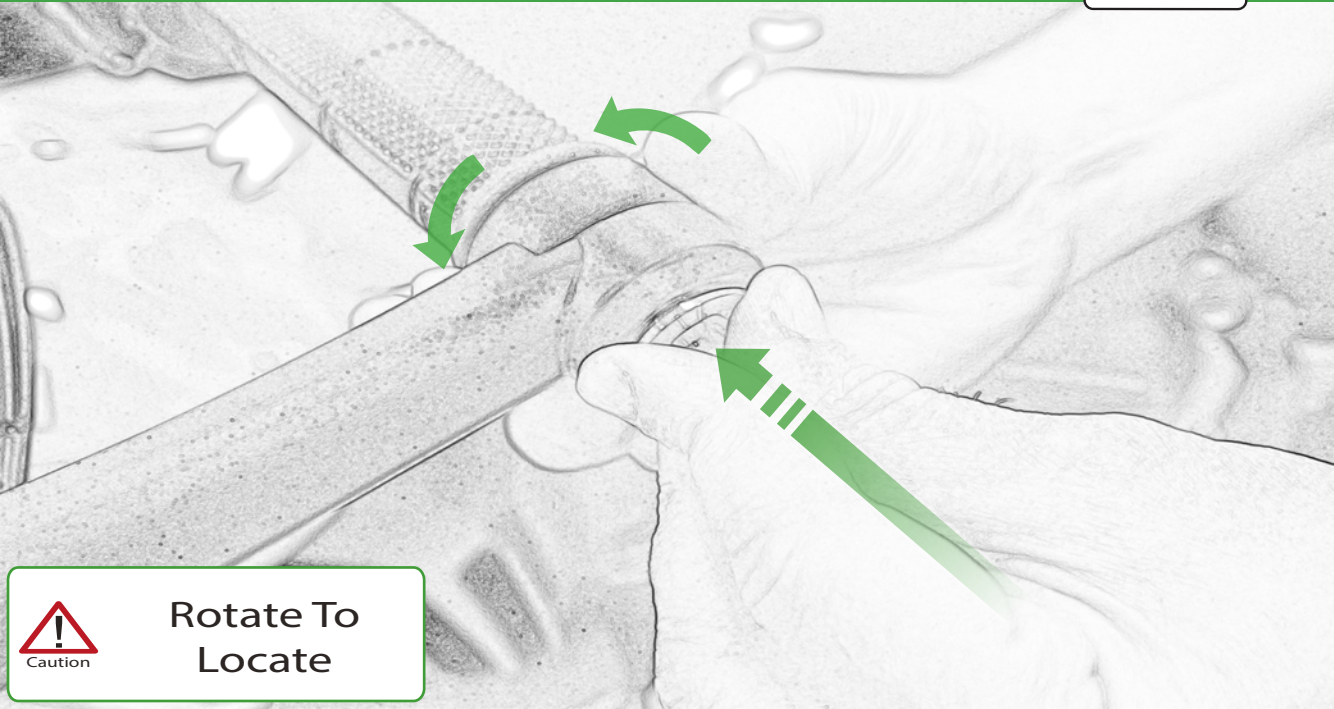


Rotate To
Locate

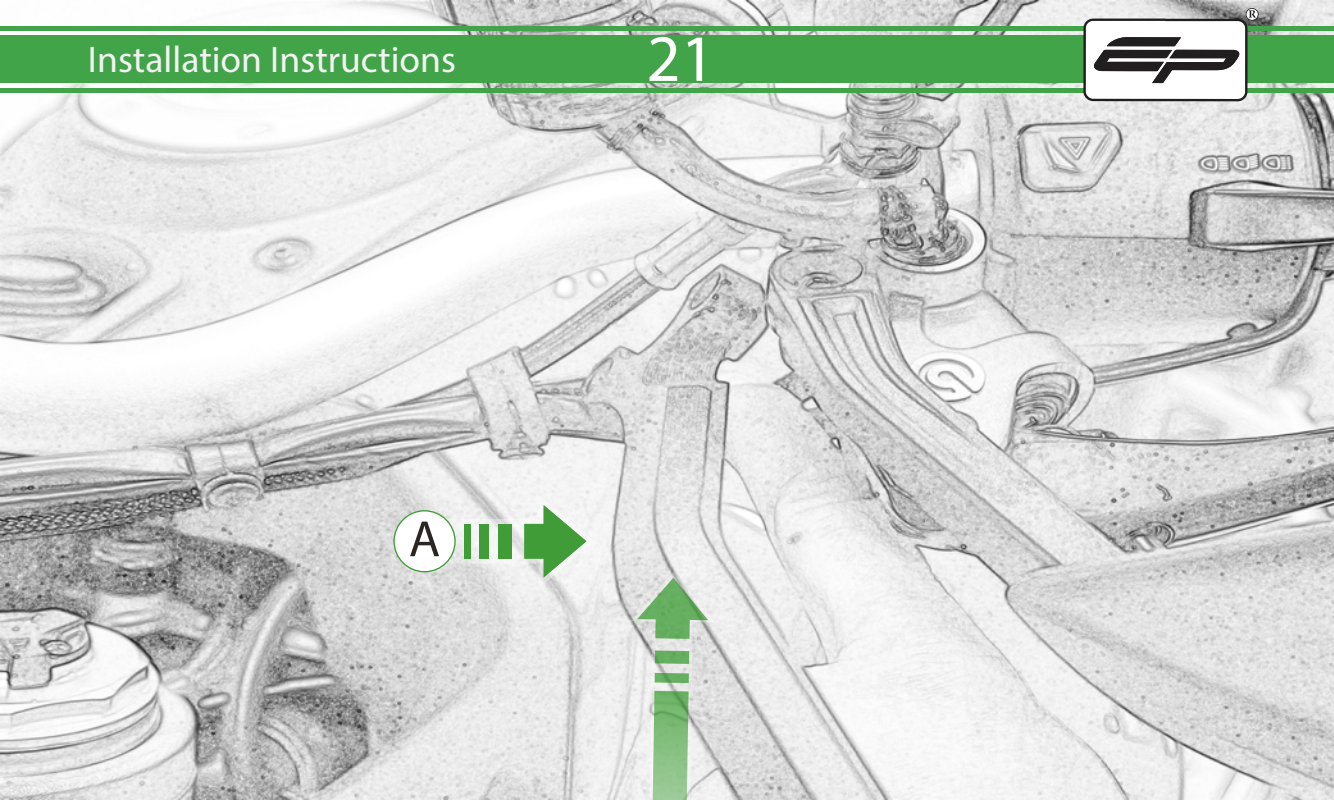

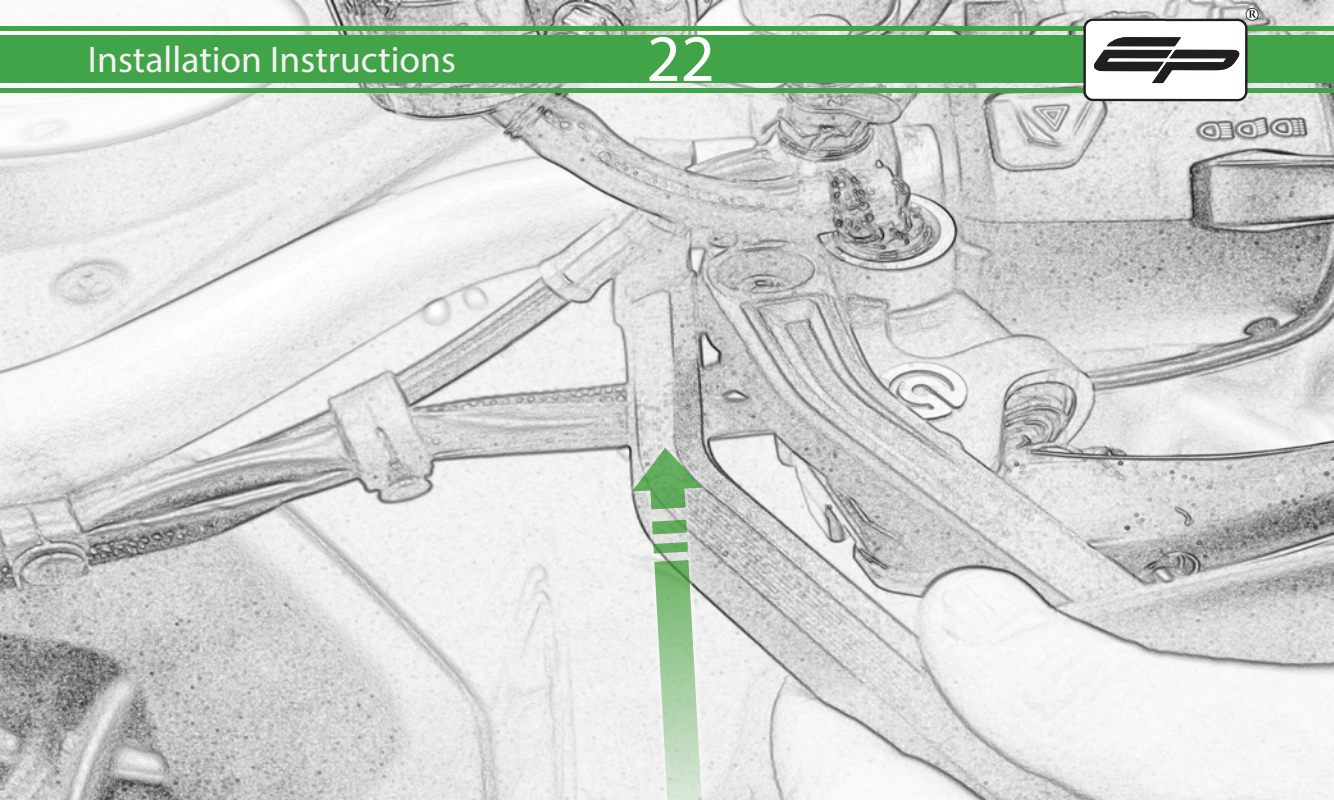

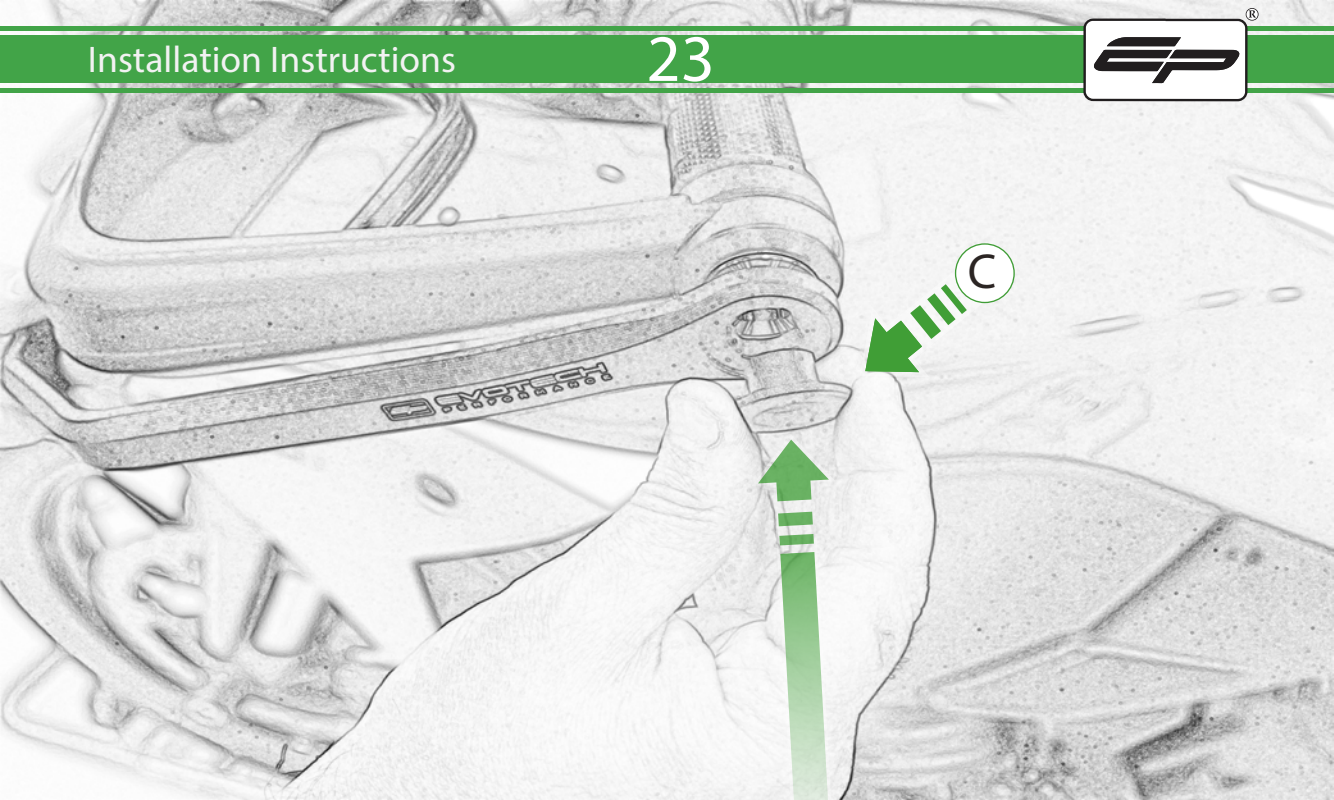


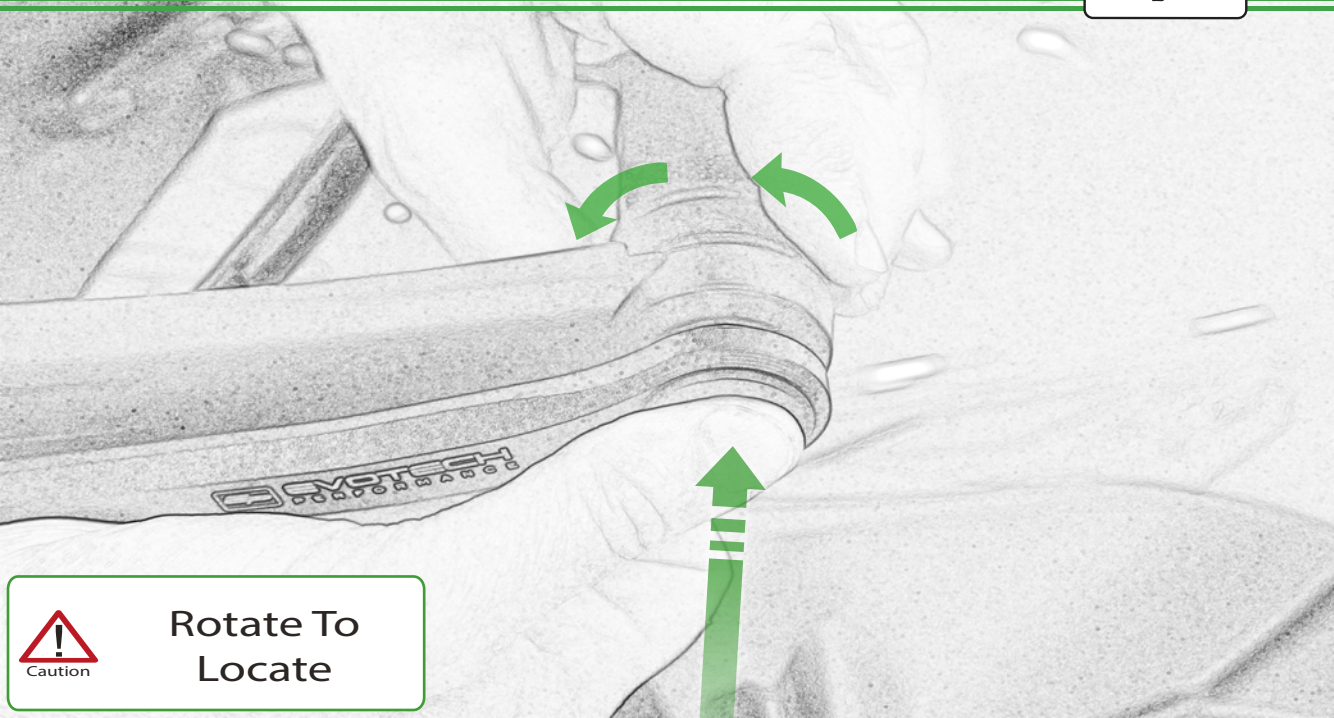

Caution


Rotate To
Locate




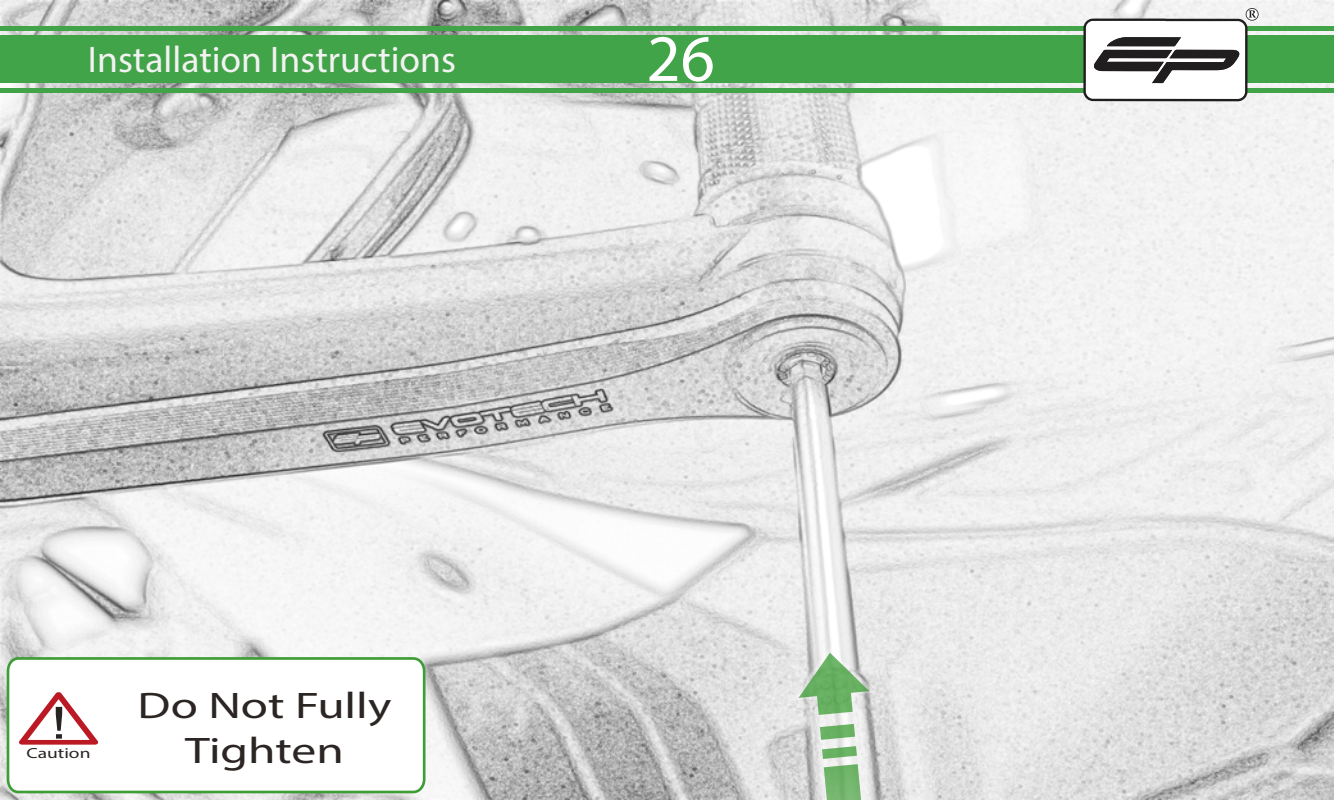



Caution

Do Not Fully Tighten

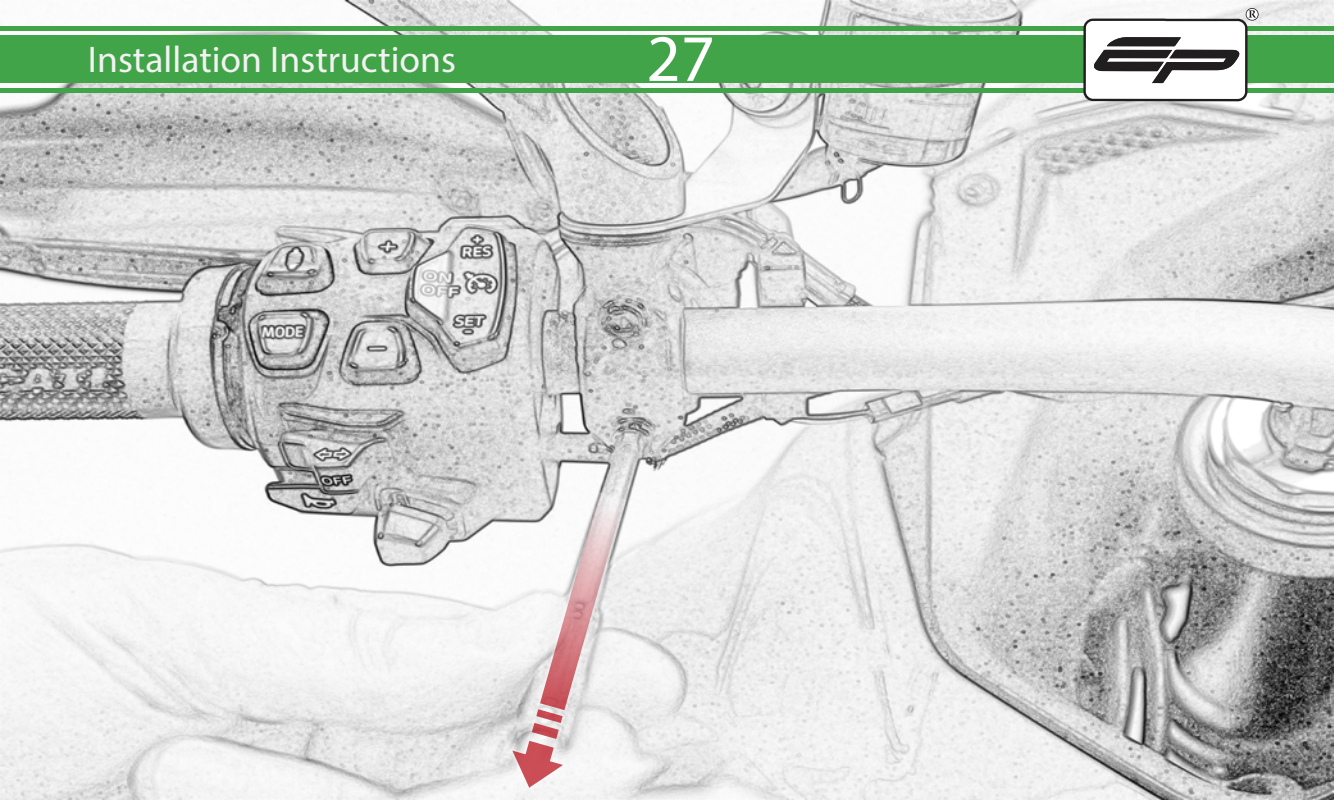


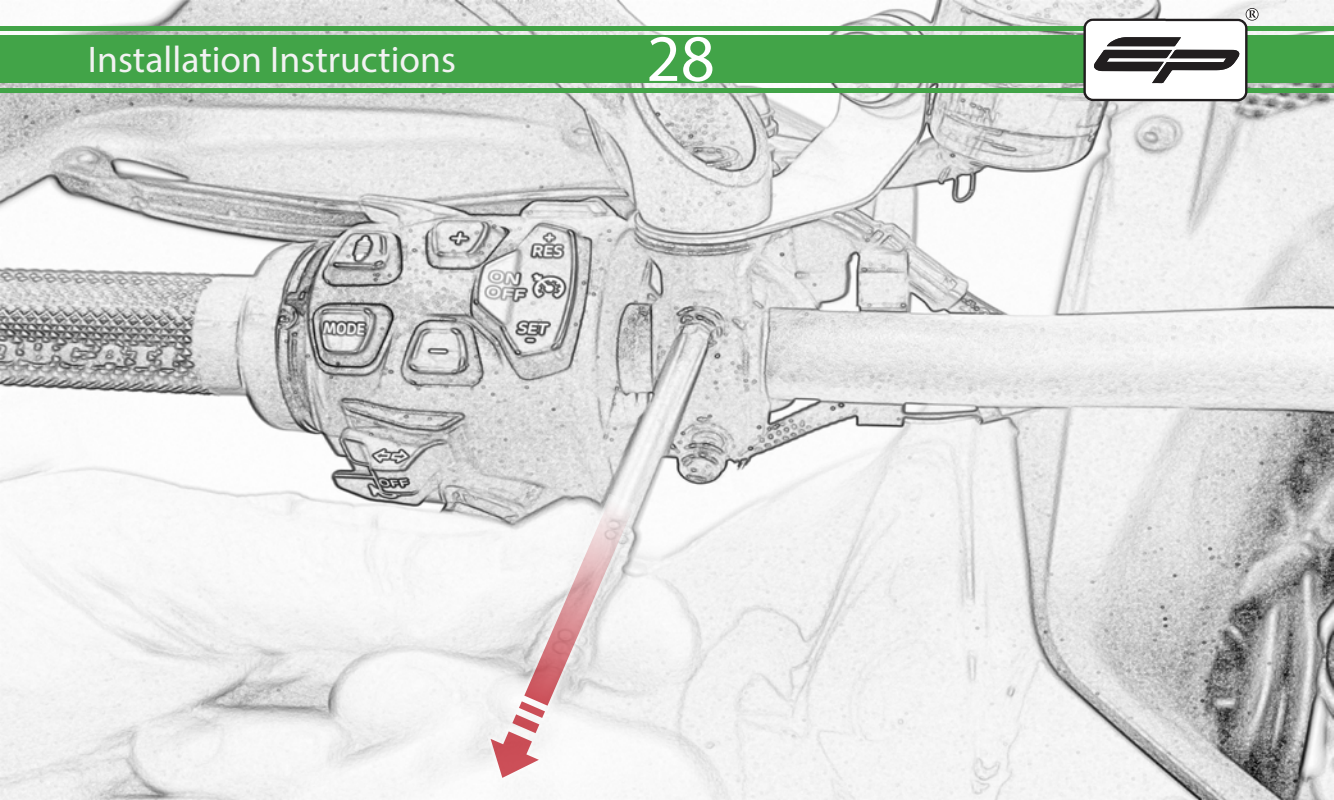


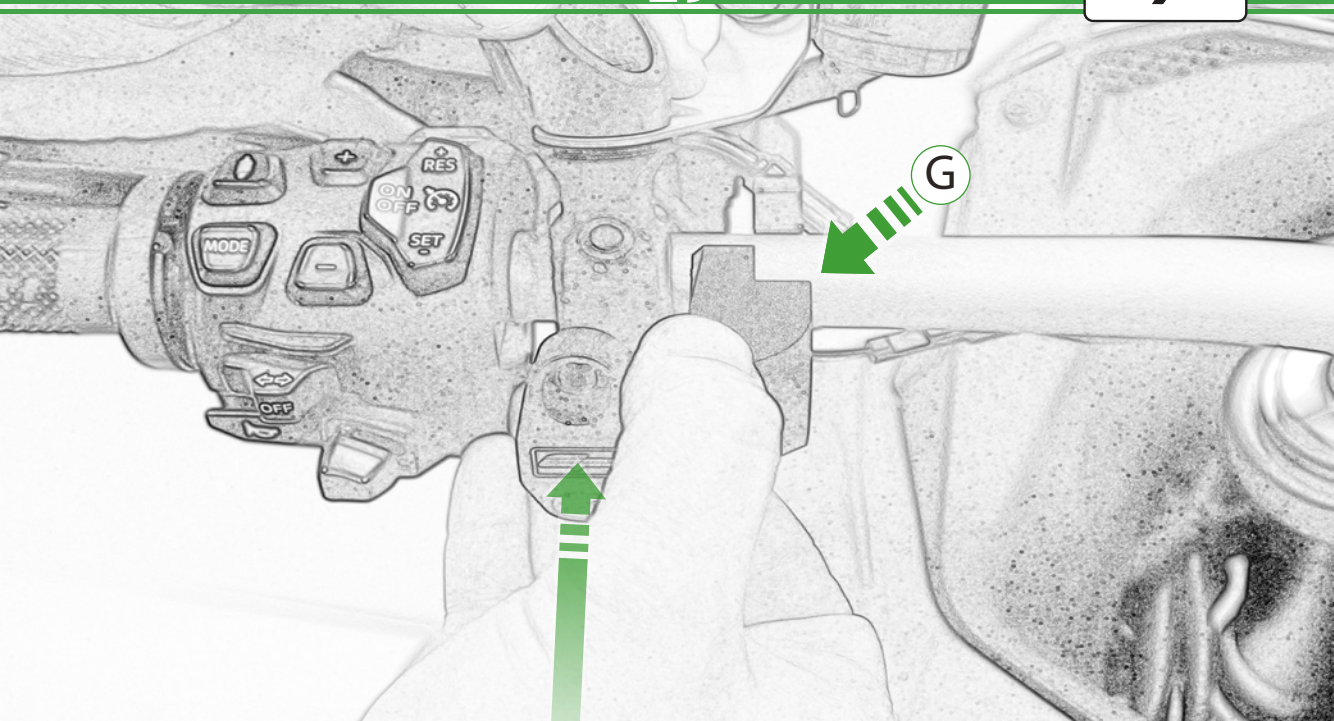


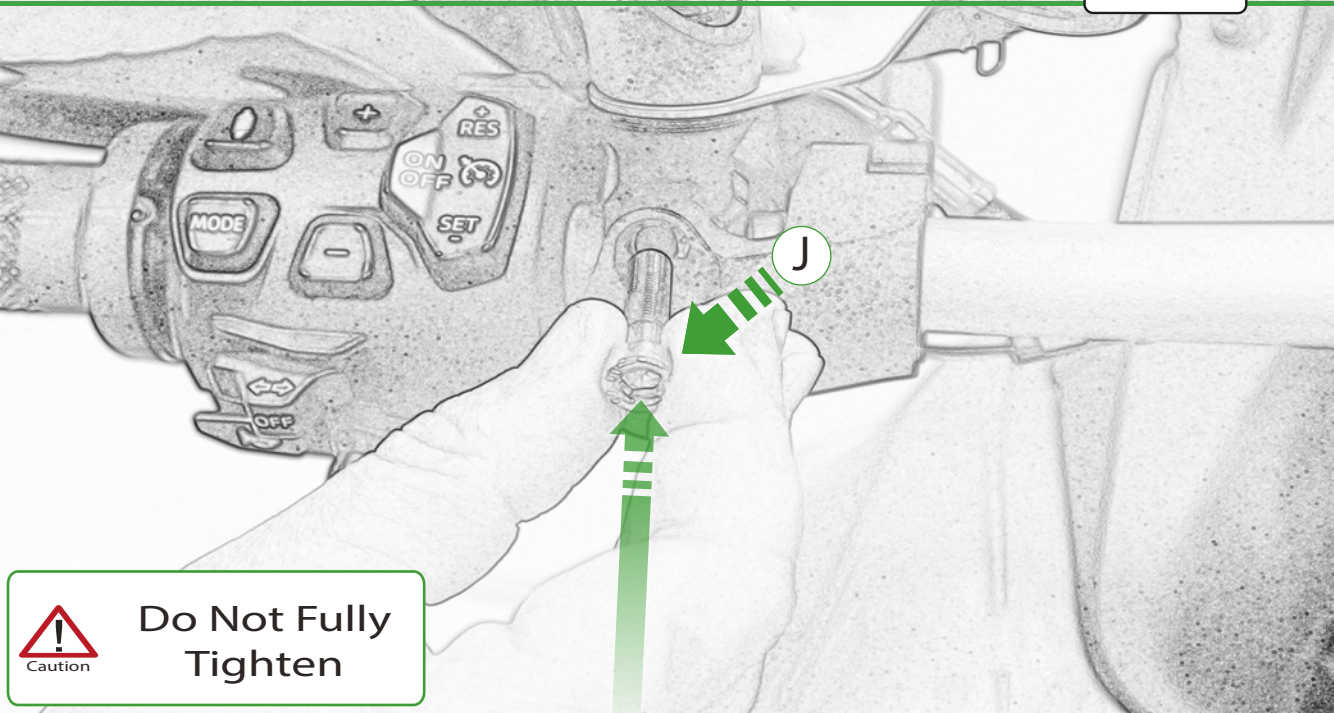


Do Not Fully Tighten

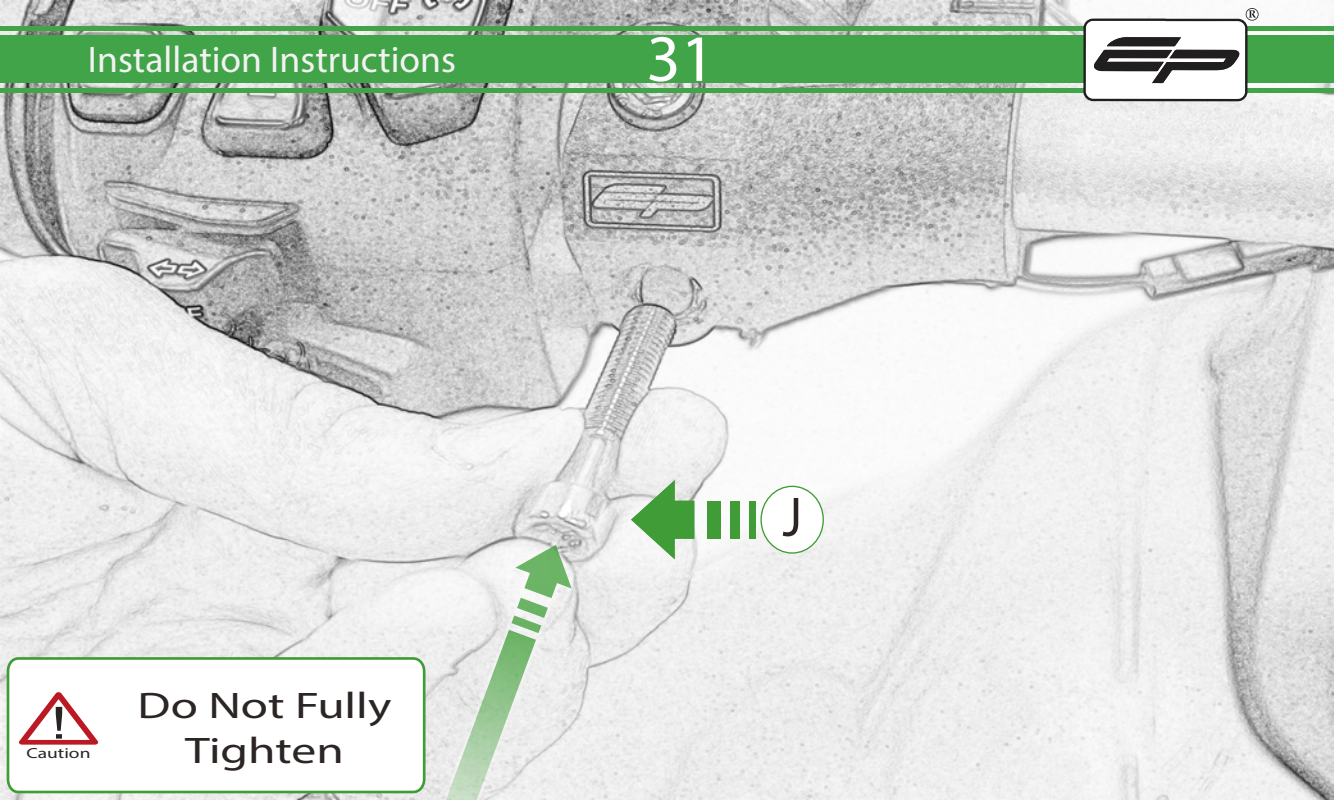

Do Not Fully Tighten

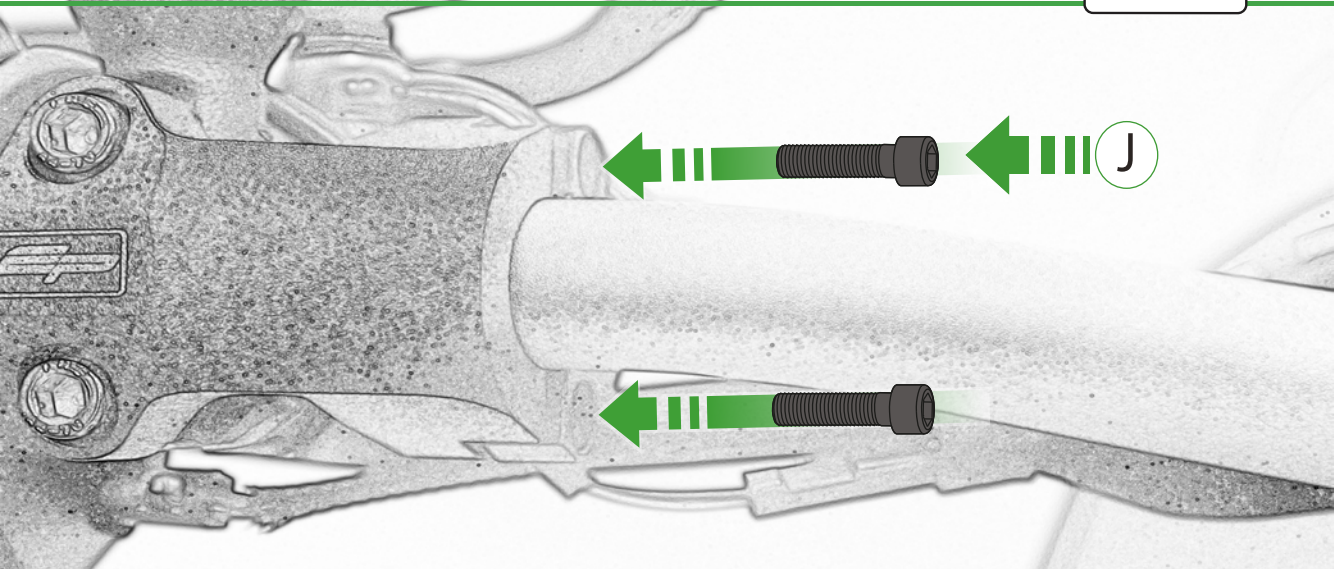


Fully
Tighten

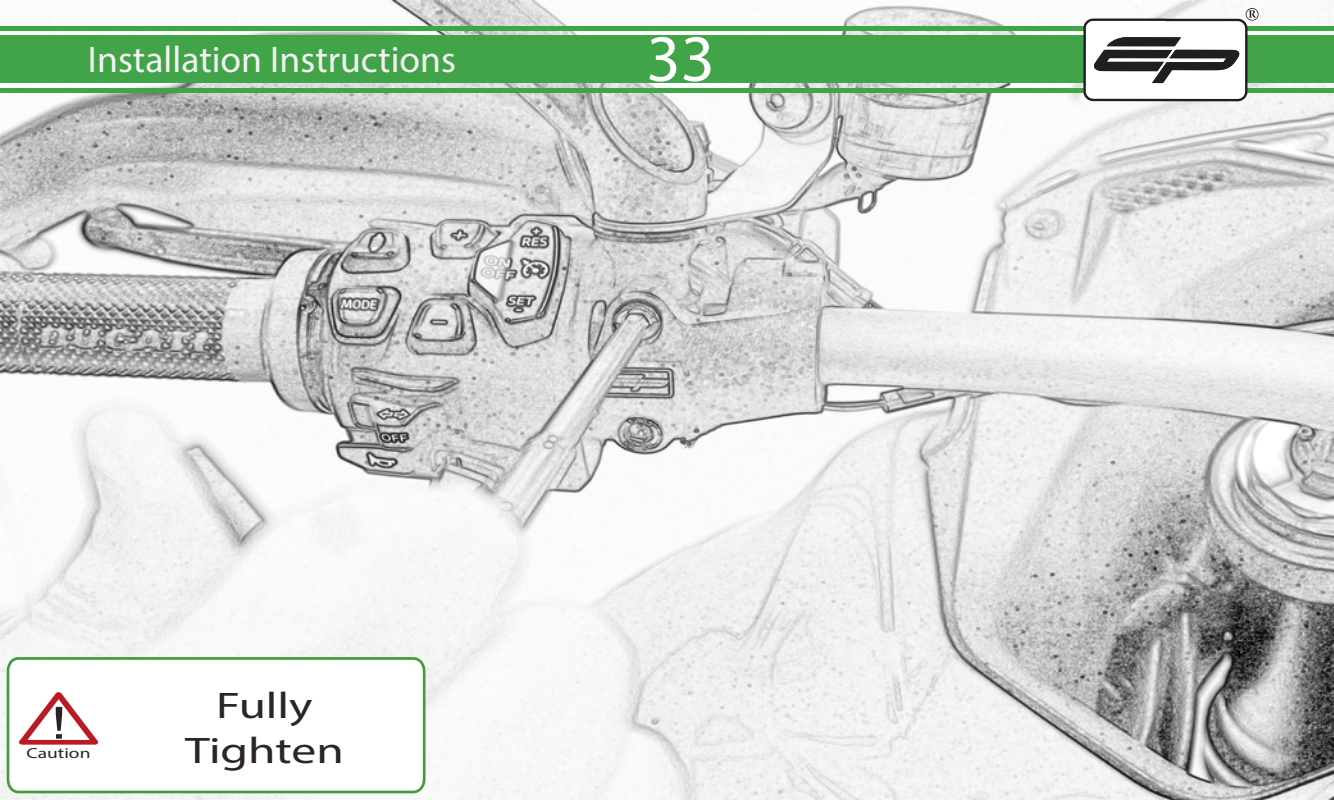

Fully
Tighten



Fully
Tighten

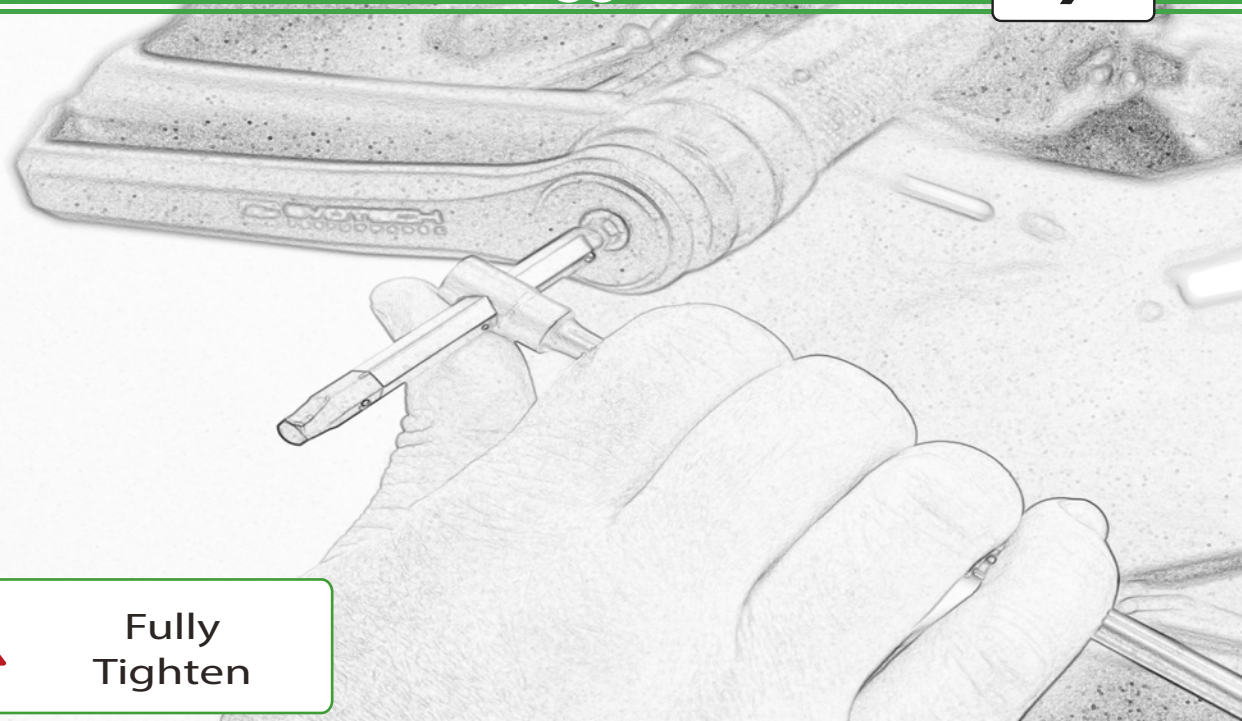

Caution

Fully
Tighten



Repeat for R/H Side

1 - 35



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com