

EVOTECH®
P E R F O R M A N C E


www.evotech-performance.com


Honda CBR650R Tom Tom Satnav Mount
Installation Instruction




- Ⓐ 1 x Main Plate
- Ⓑ 1 x Pivot Plate
- Ⓒ 1 x Sub Mounting Bracket
- Ⓓ 2 x M5 x 8mm Black Button Head Bolts
- Ⓔ 2 x Lobe Screw
- Ⓕ 2 x Locking Washer
- Ⓖ 2 x P-clips (No.1)
- Ⓗ 2 x P-clips (No.2)
- Ⓘ 2 x P-clips (No.3)
- Ⓙ 2 x P-clips (No.4)
- Ⓚ 2 x M5 Black Washer
- Ⓛ 2 x M4 x 5mm Black Button Head Bolts
- Ⓜ 4 x M5 x 12mm Black Button Head Bolts
- ⓂⓂ 2 x M8 x 45mm Flange bolt


EPTeCH®
P E R F O R M A N C E

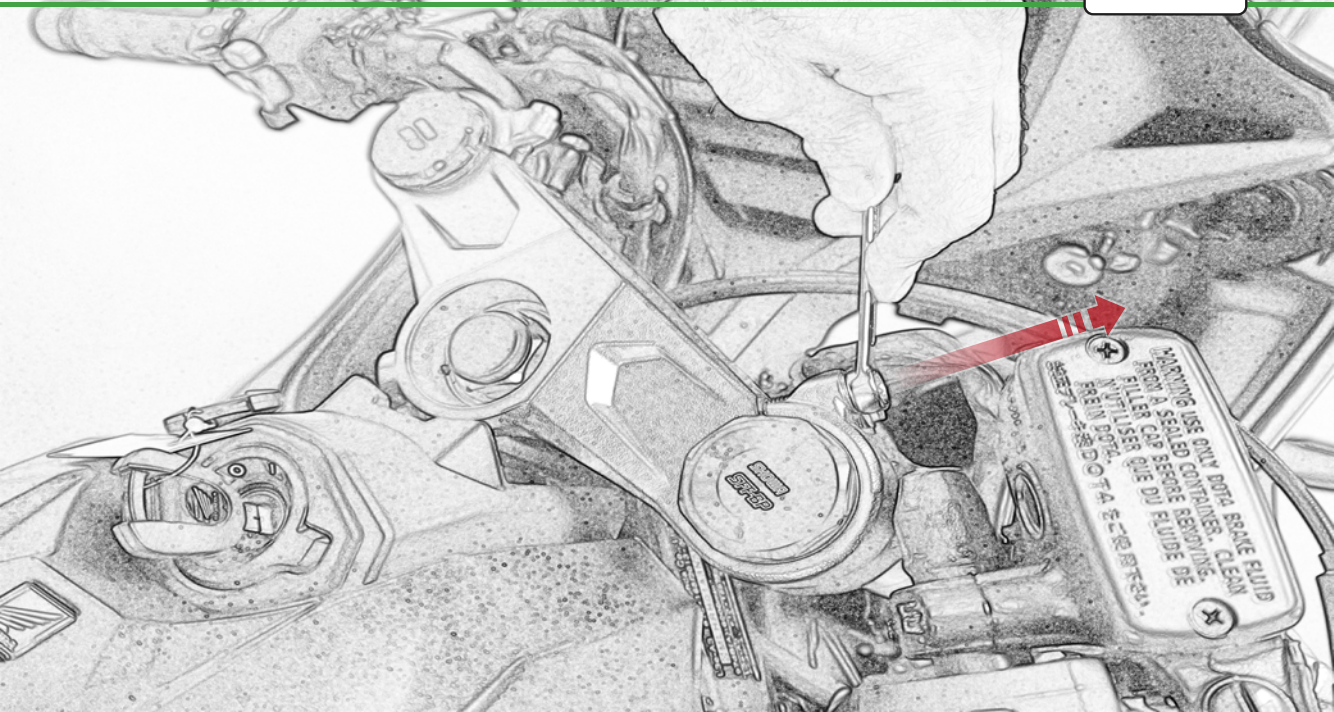


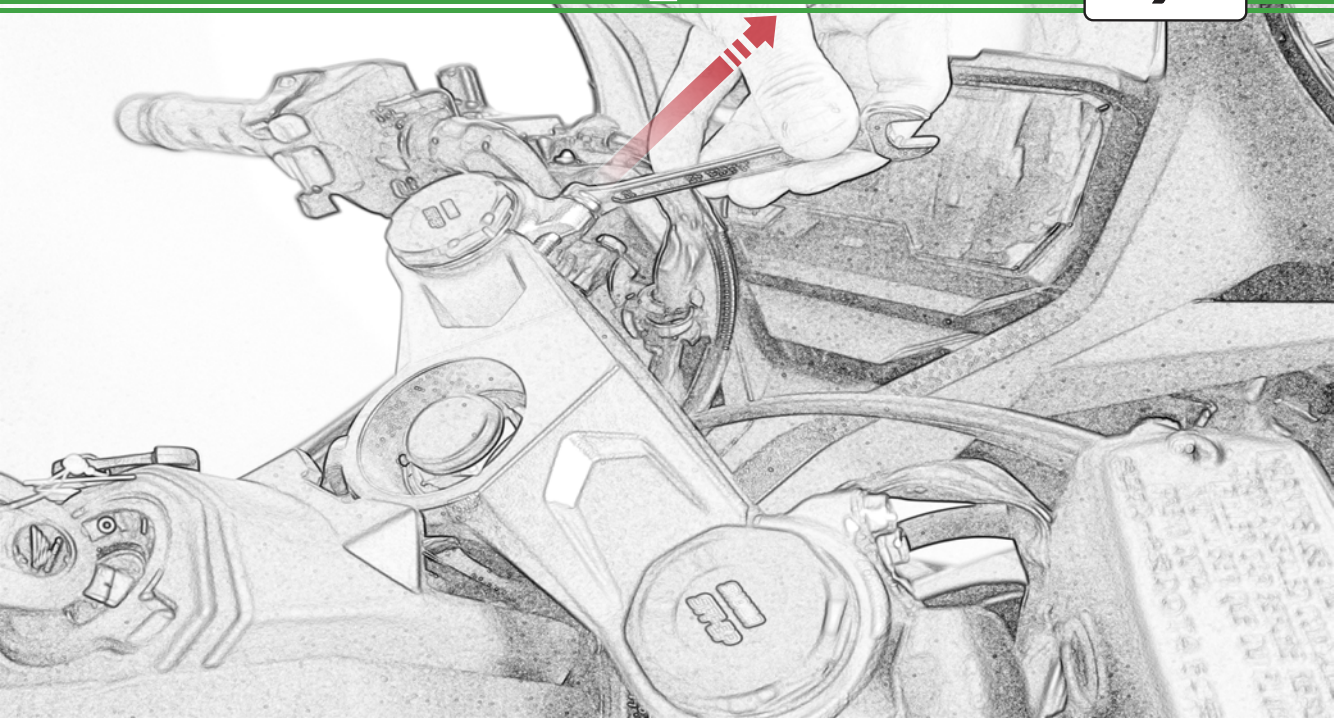


Installation Instructions

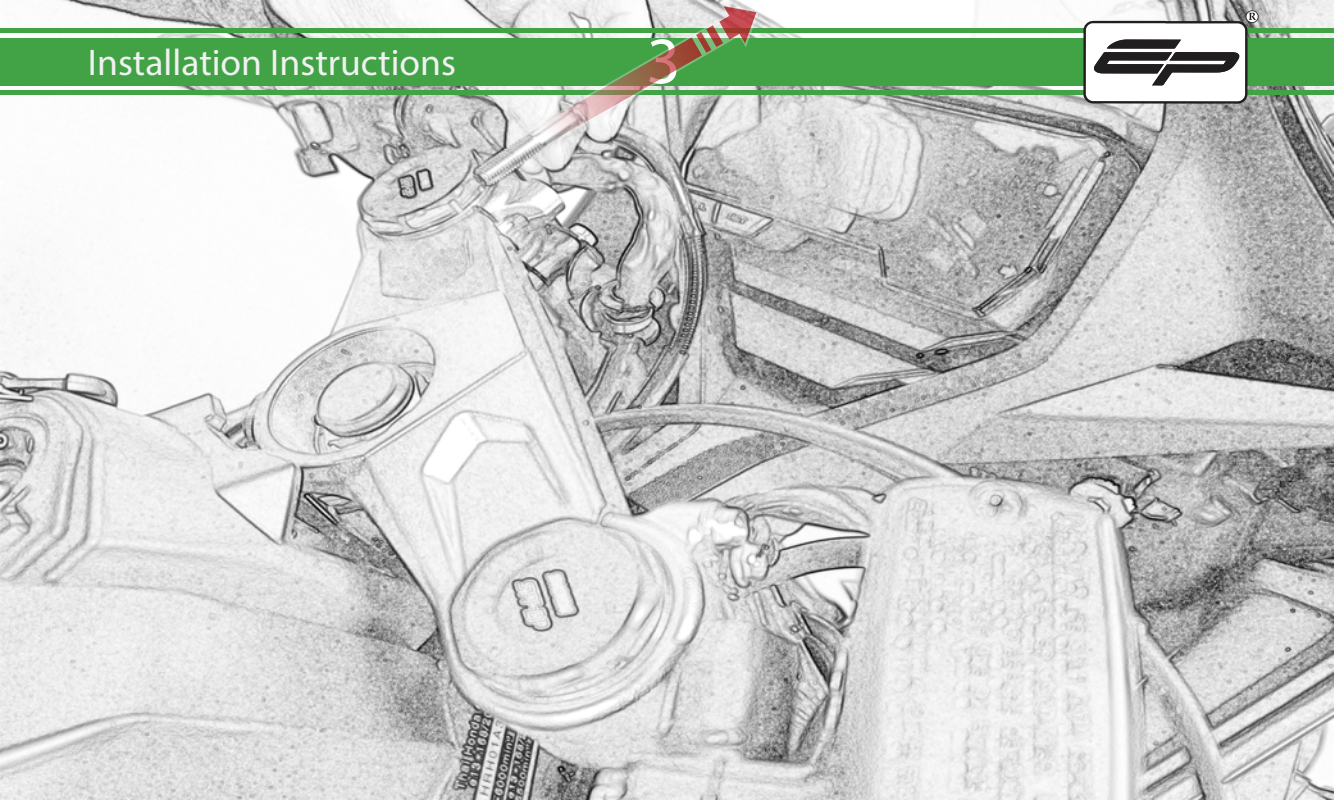


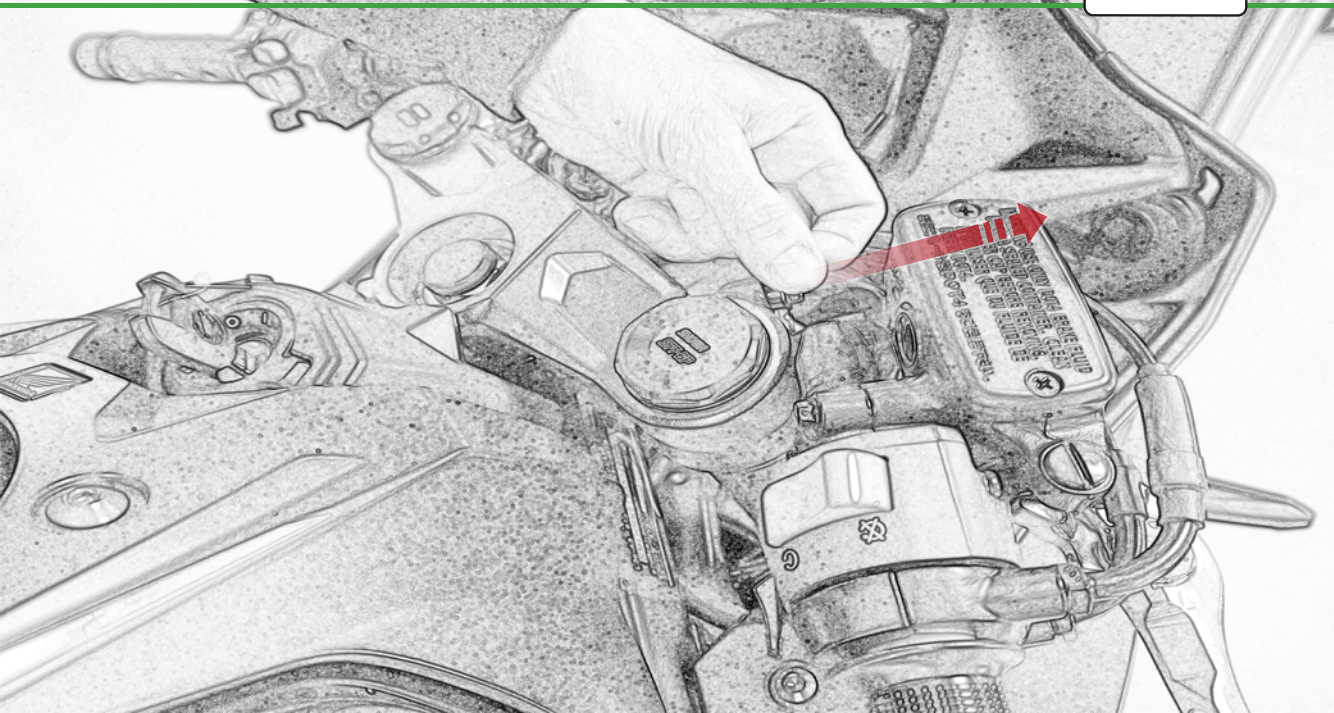


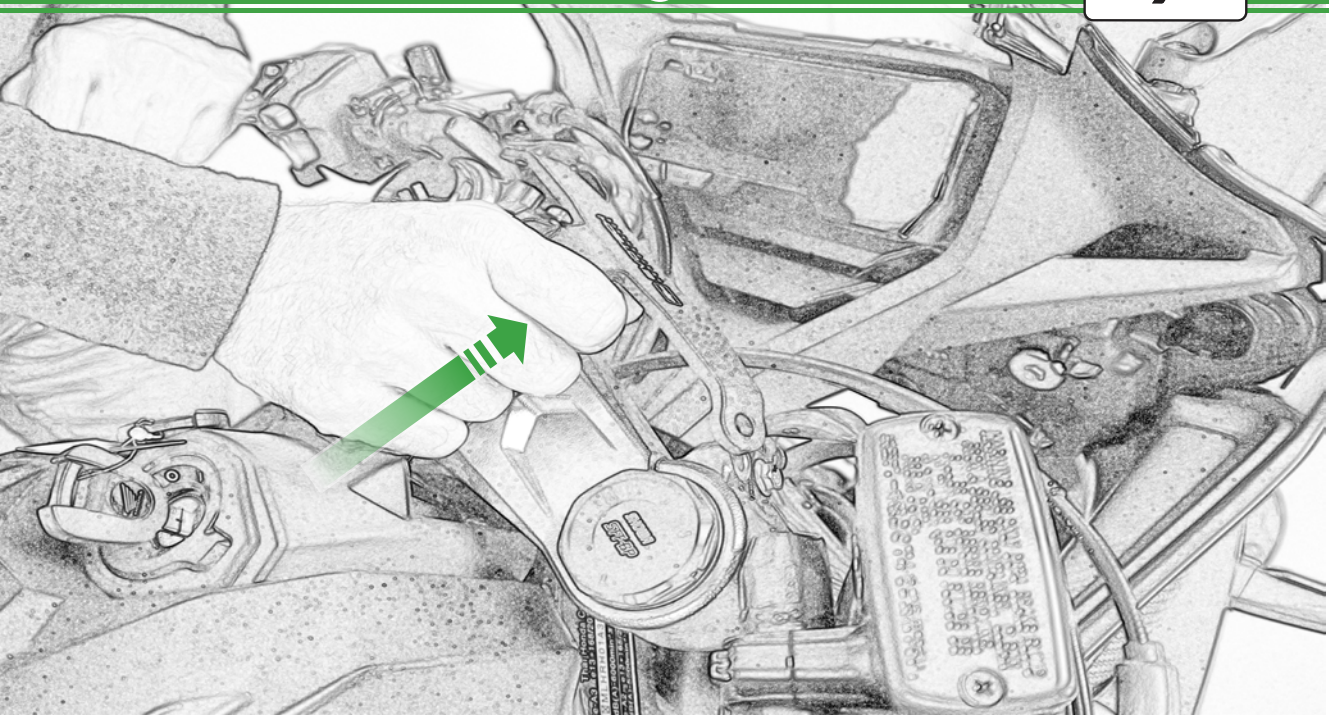


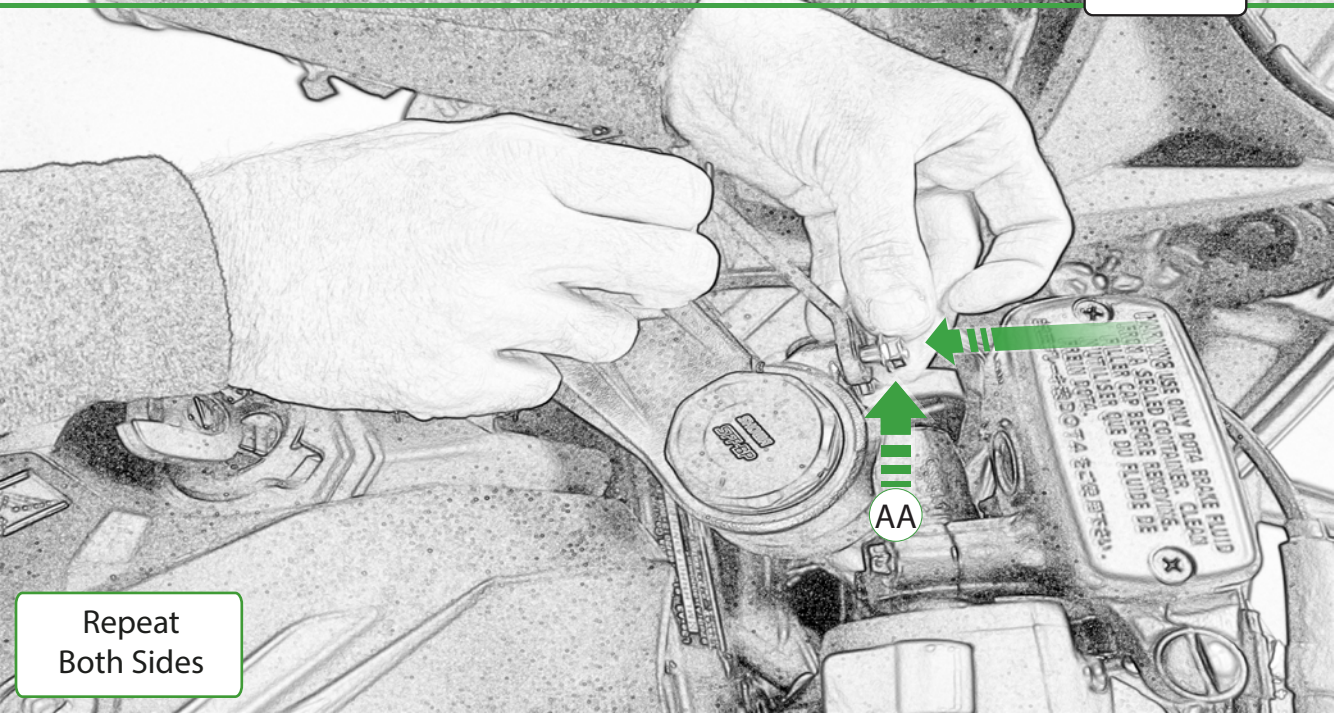



Repeat
Both Sides

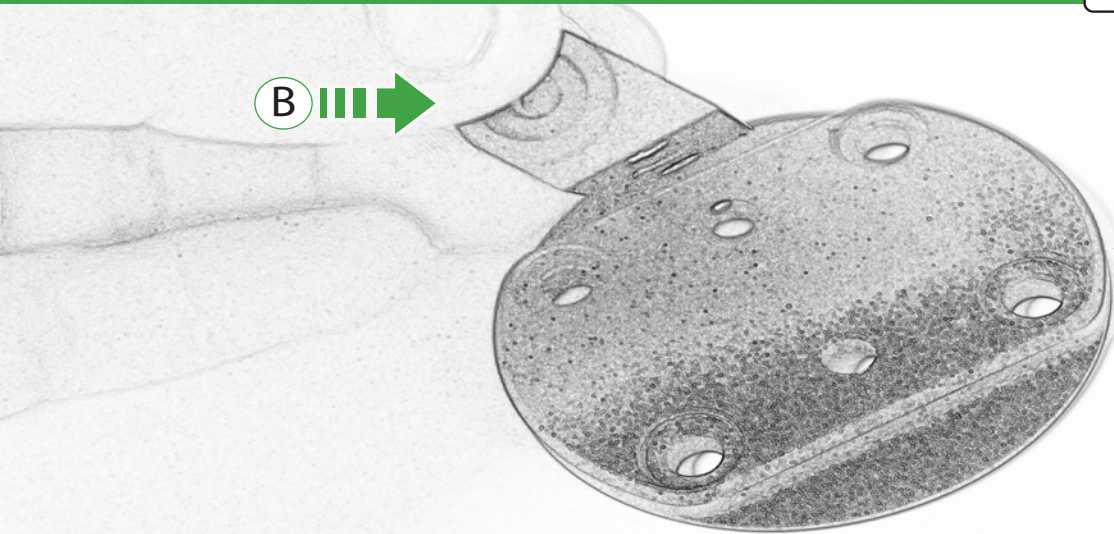

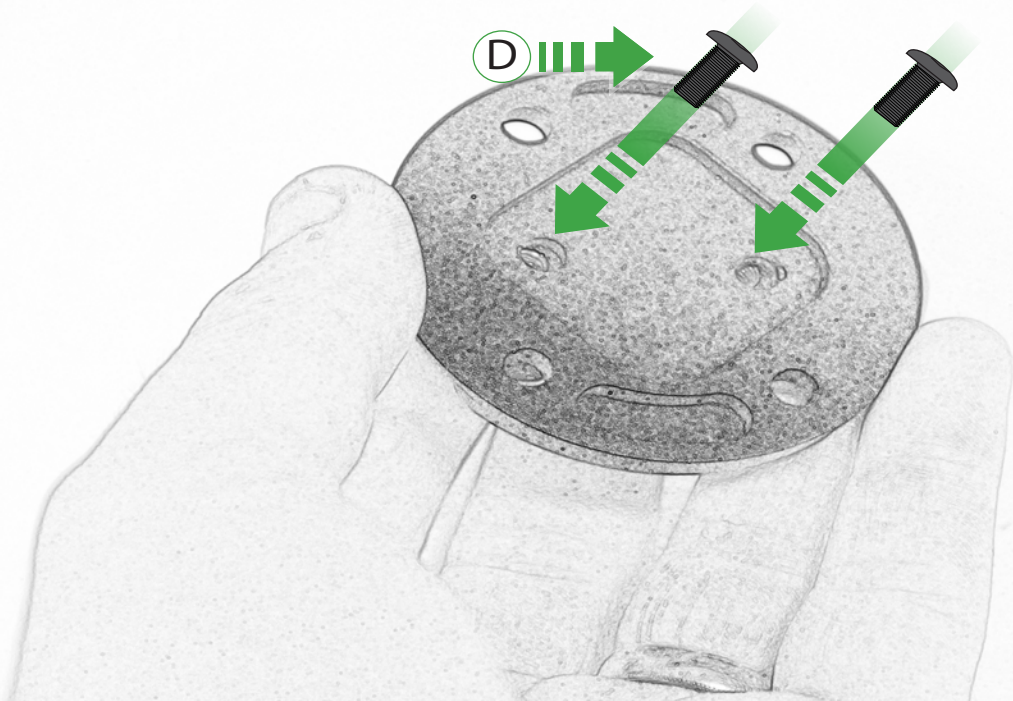


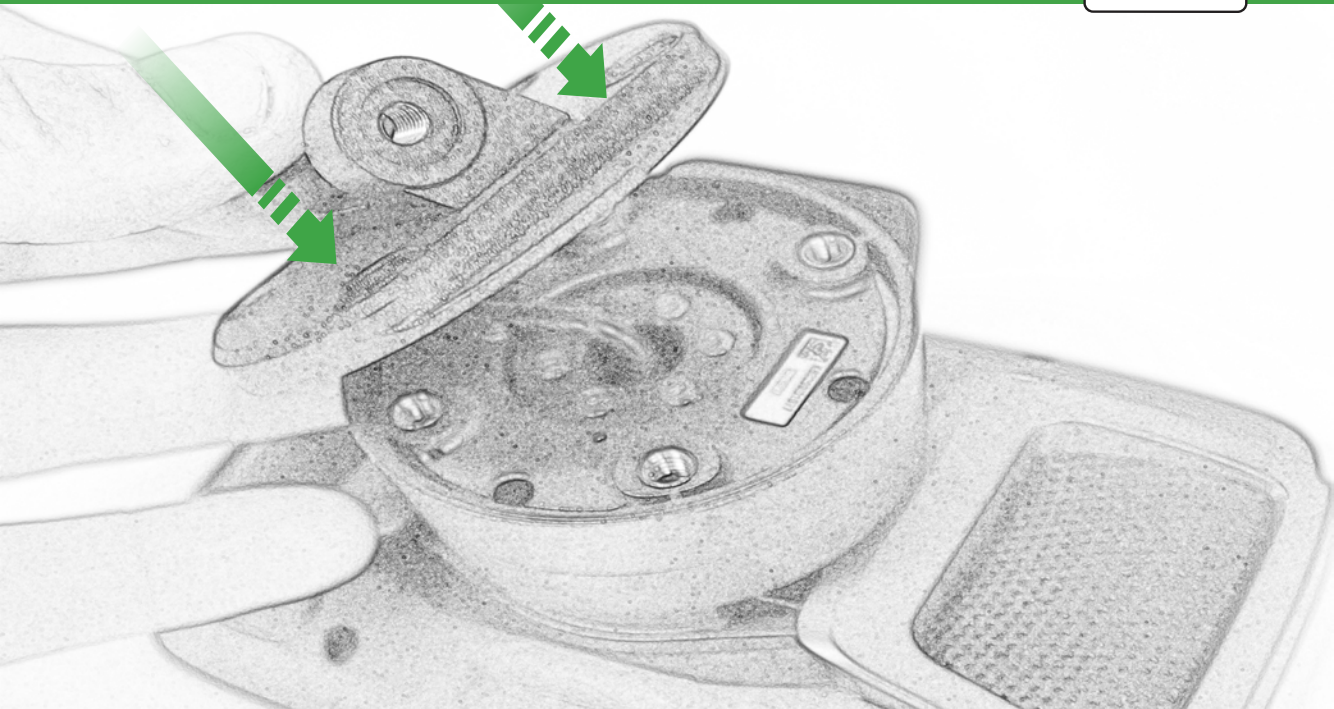


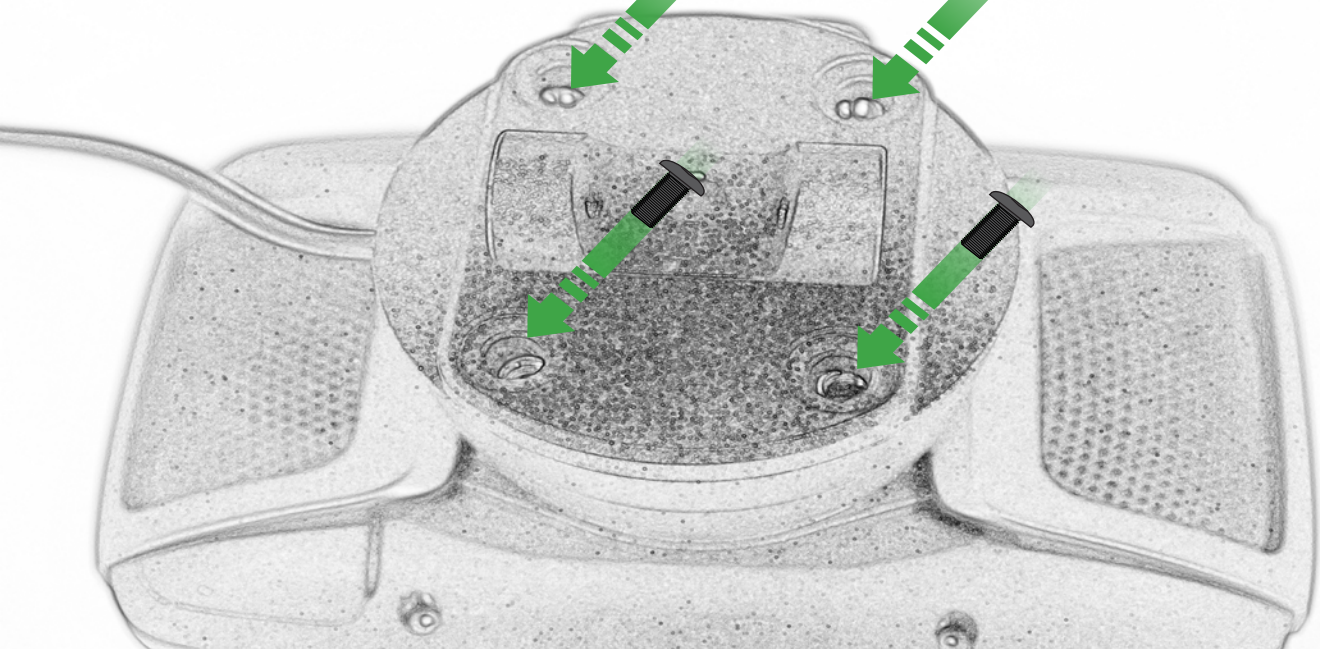

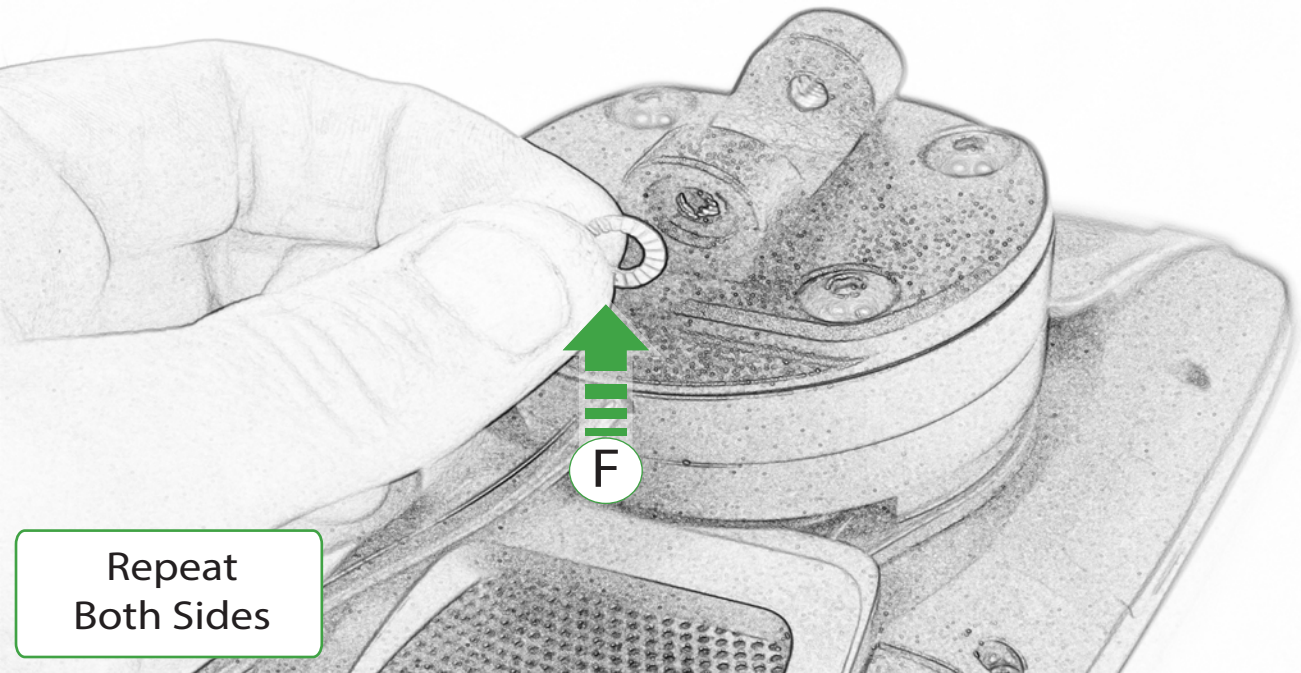

Repeat
Both Sides

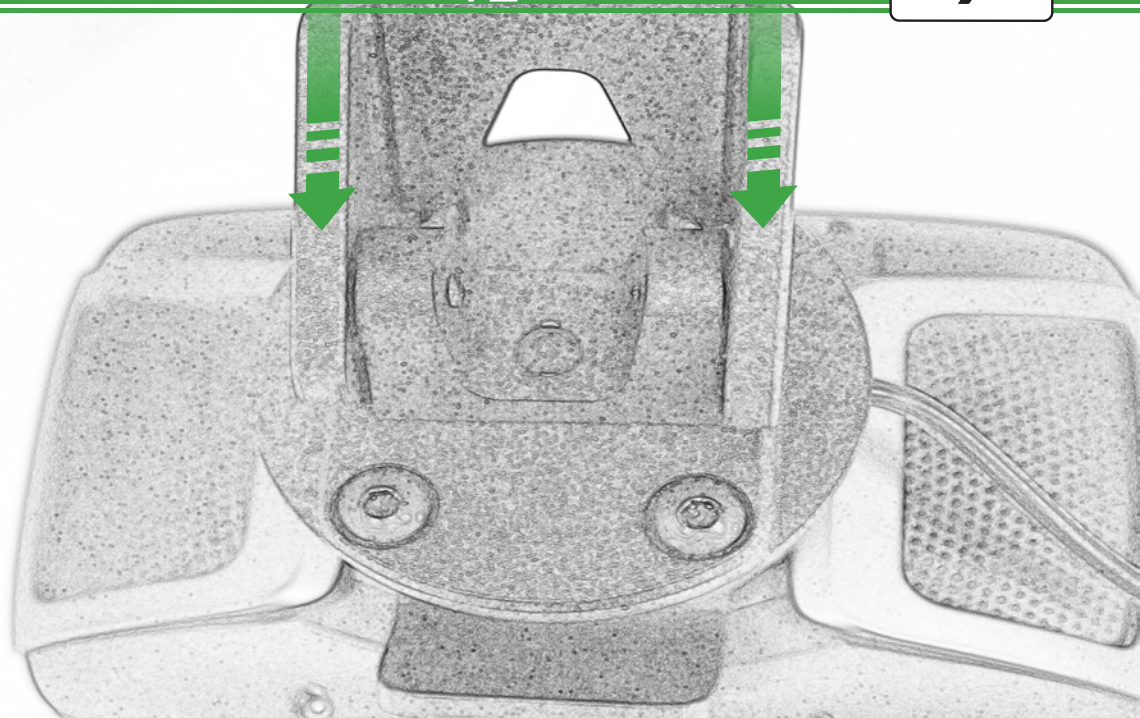

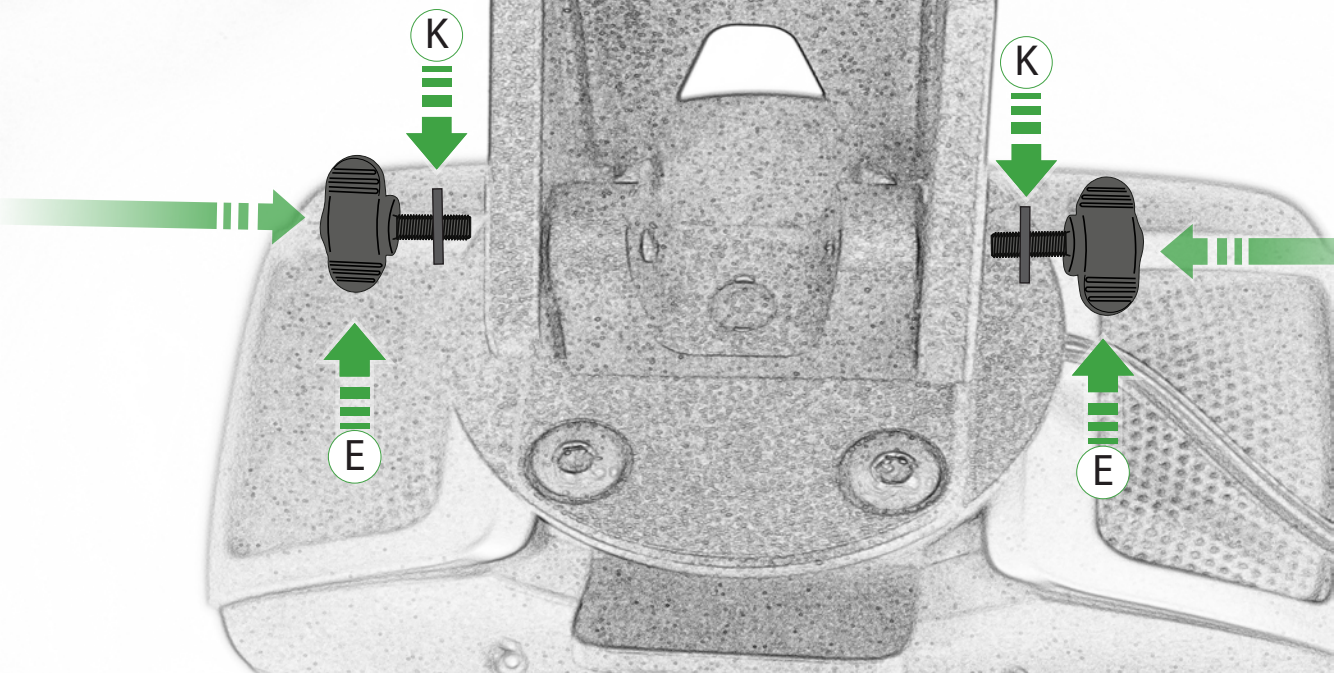



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

P E R F O R M A N C E



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com