



**EVOTECH**®  
P E R F O R M A N C E


[www.evotech-performance.com](http://www.evotech-performance.com)


Triumph Trident Tail Tidy  
Installation Instructions



## Kit Contents PRN015396


- (A) 1 x BMW Light
- (B) 1 x Connector Type 23
- (C) 1 x Connector Type 25
- (D) 1 x M8 x 20mm Button Head Bolts
- (E) 1 x M5 x 16mm Button Head Bolts
- (F) 1 x M5 Washer
- (G) 1 x Back Spacer
- (H) 1 x Front Spacer
- (I) 1 x Support Bracket
- (J) 1 x Number Plate Bracket
- (K) 1 x Main Right Body
- (L) 1 x Main Left Body
- (M) 2 x M6 Flange Nut
- (N) 6 x M6 x 16 Button Head Bolts

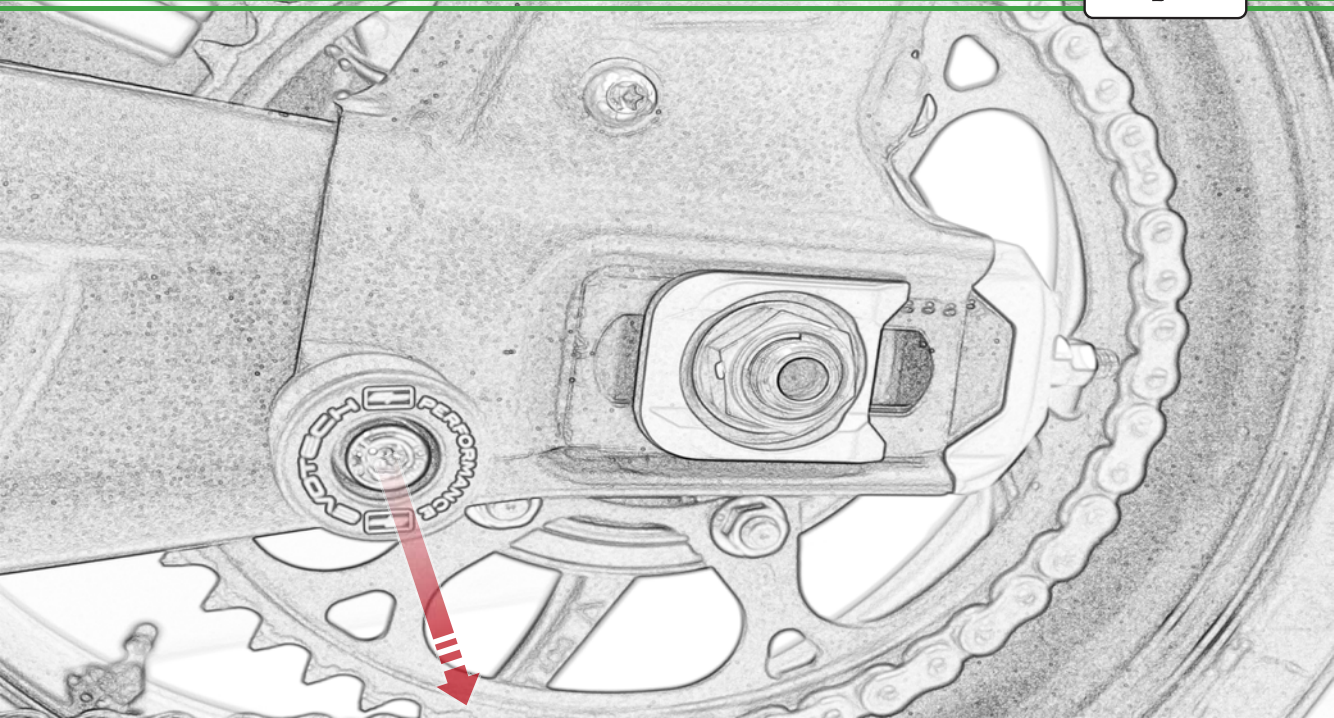


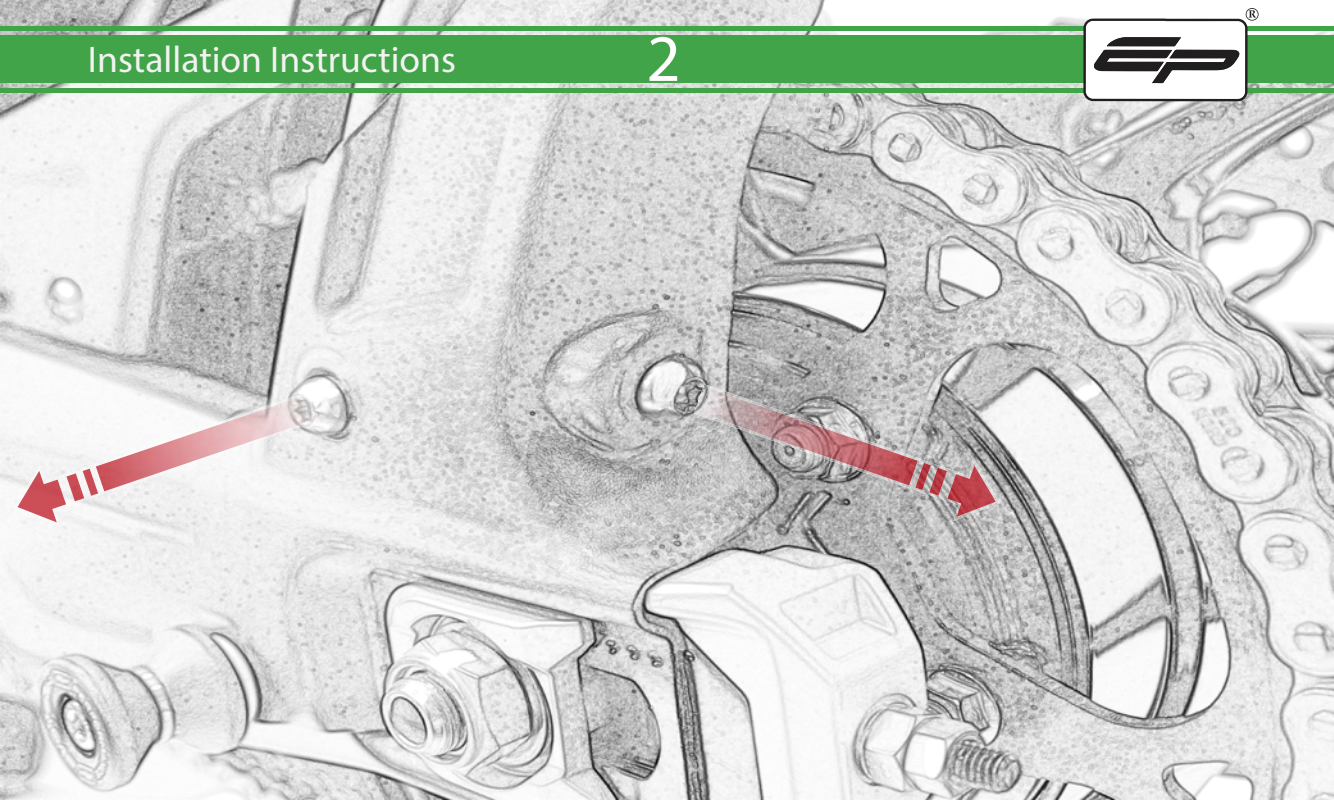









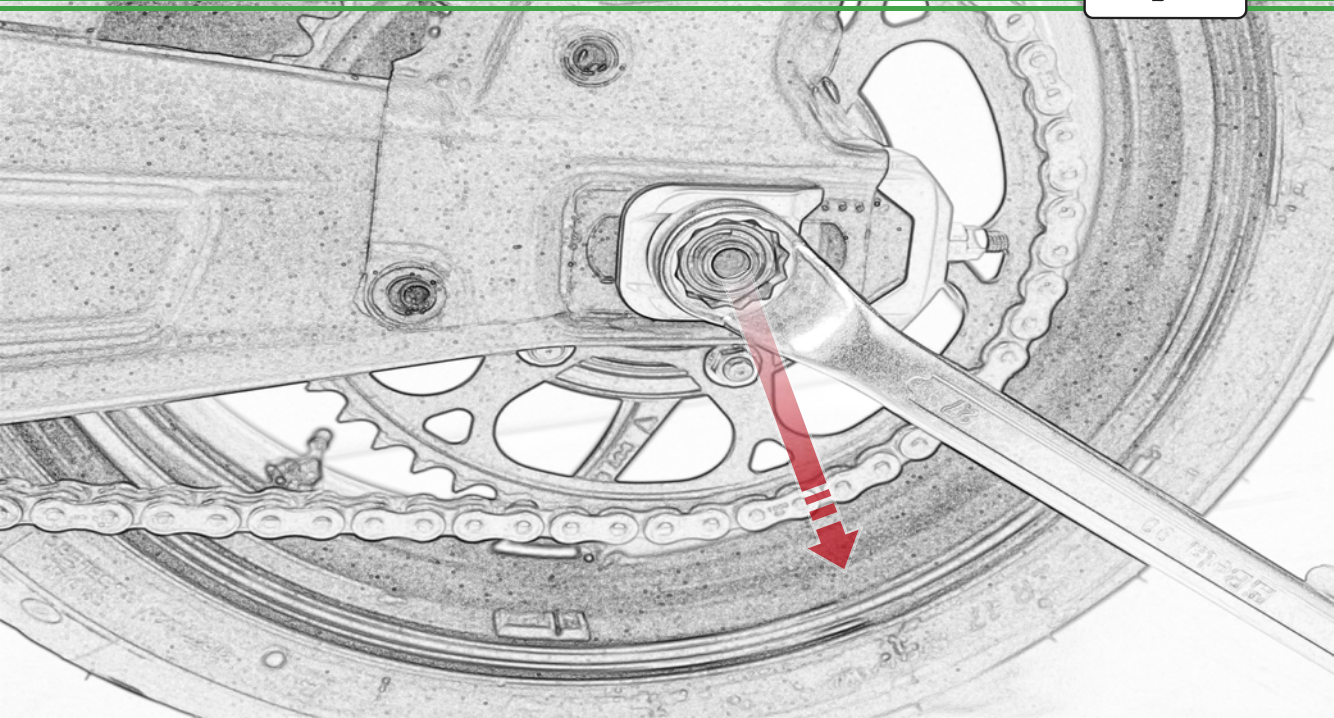


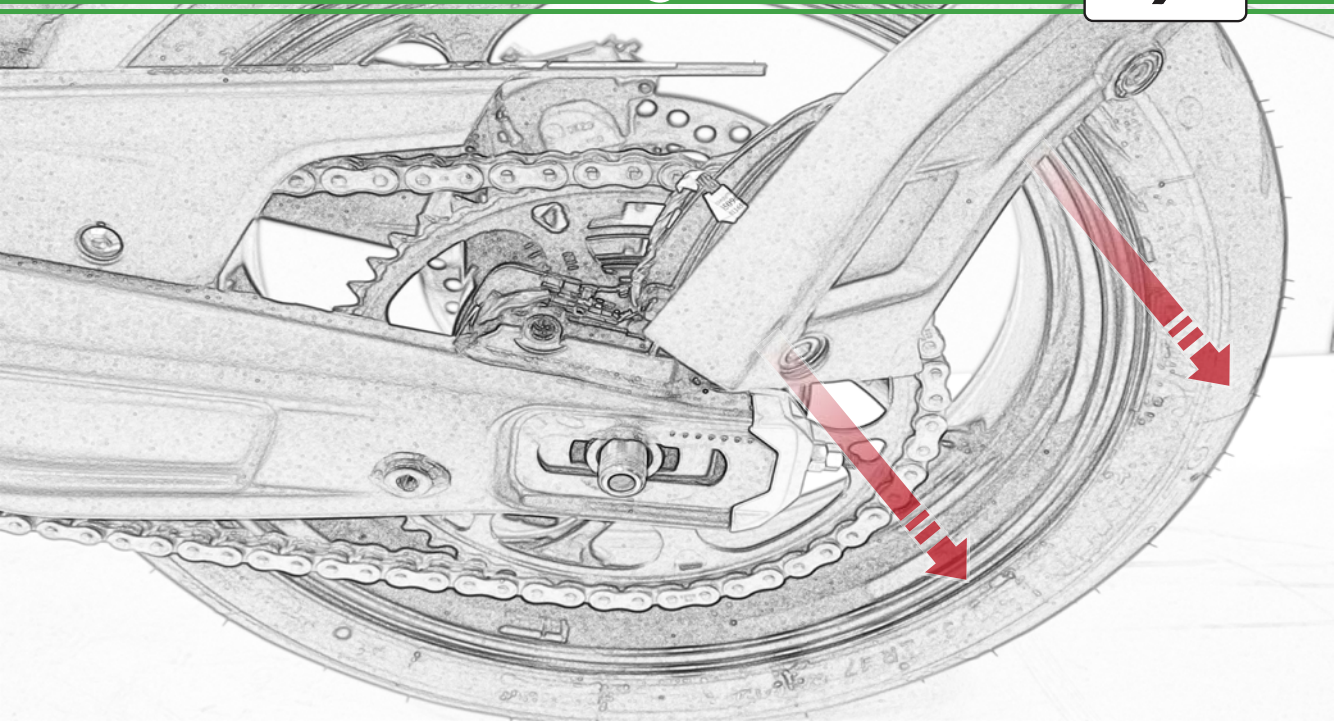




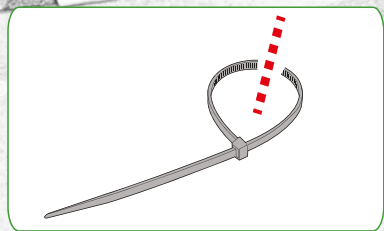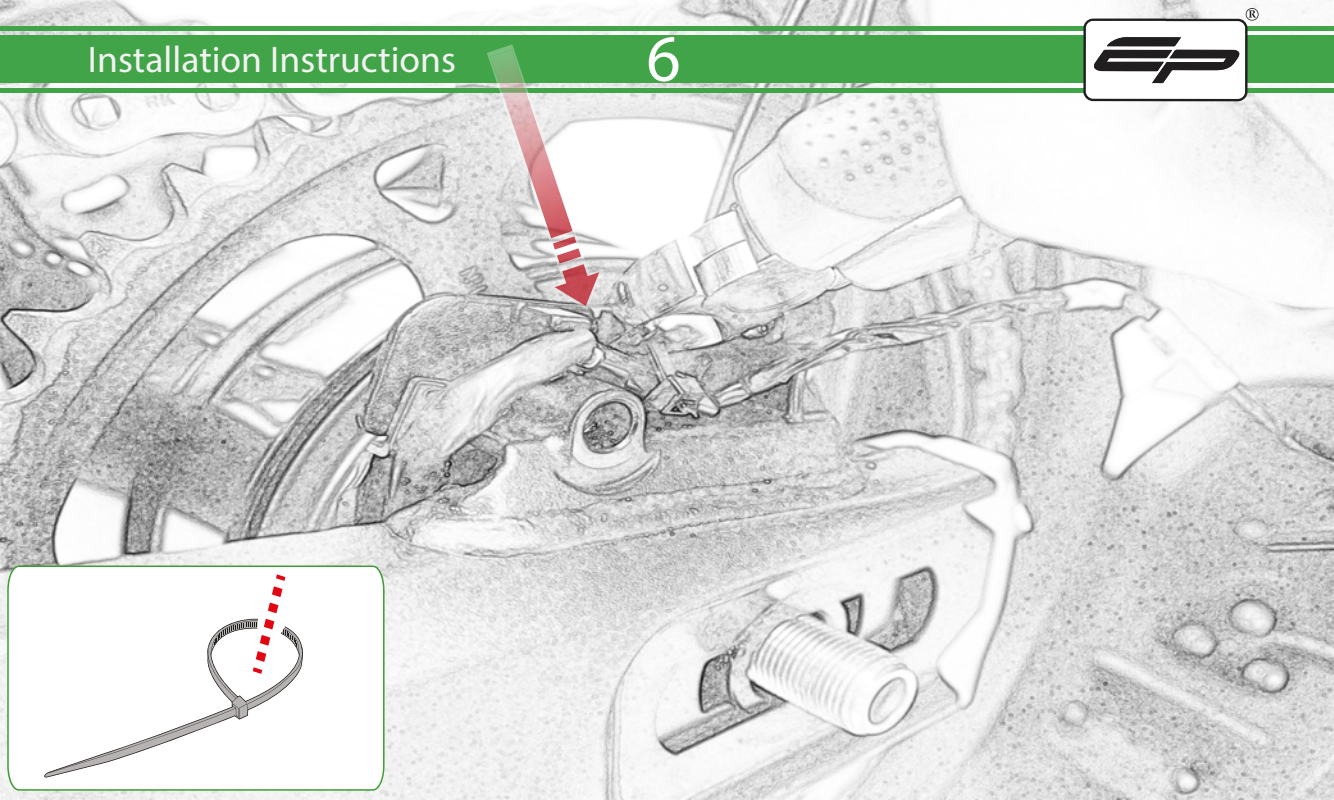


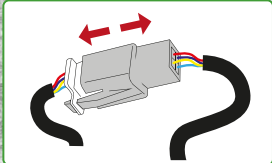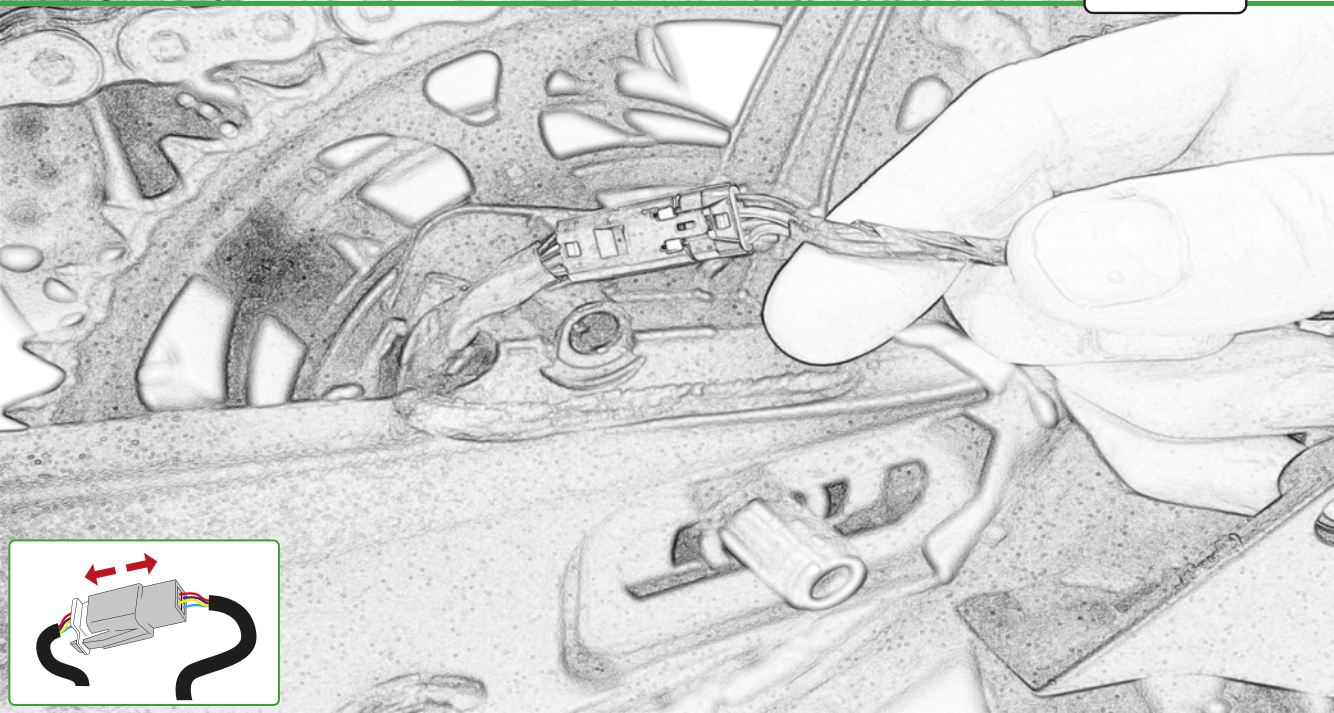


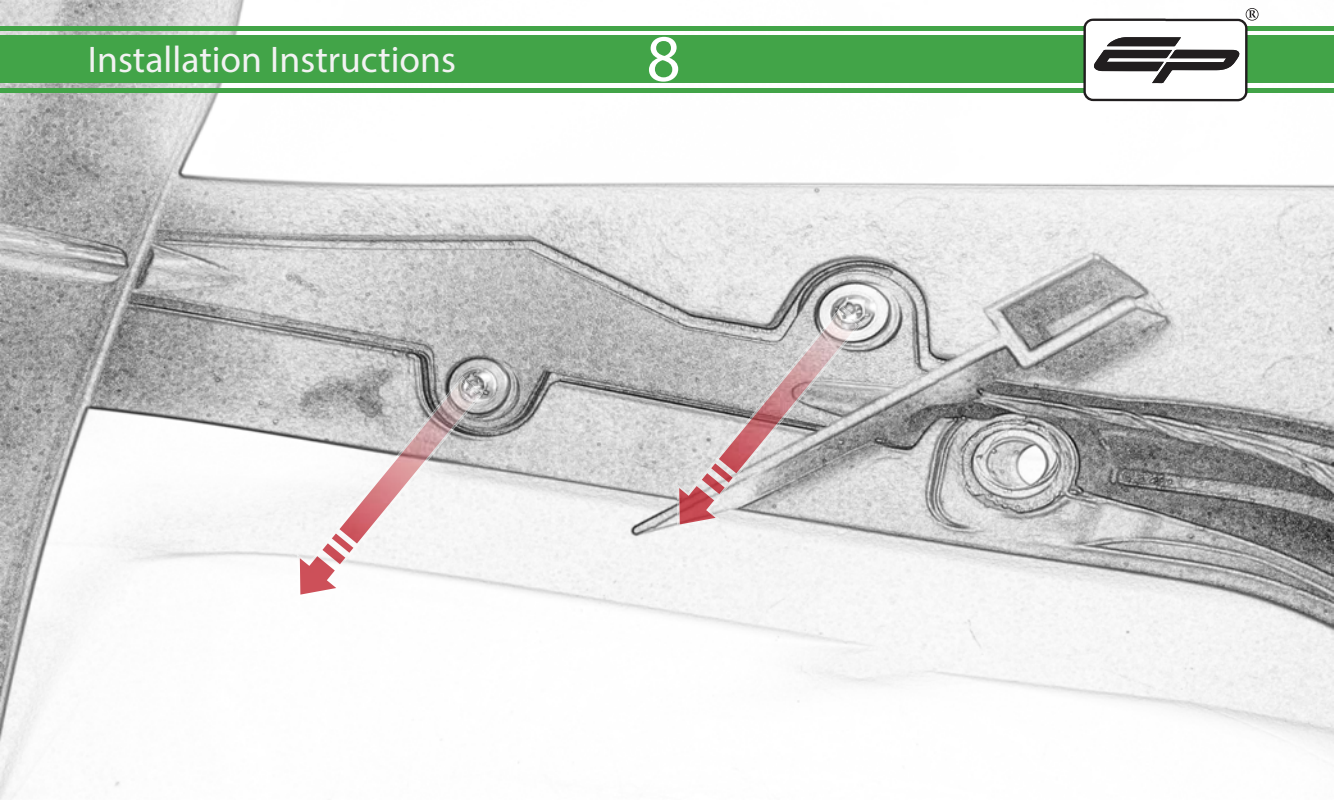





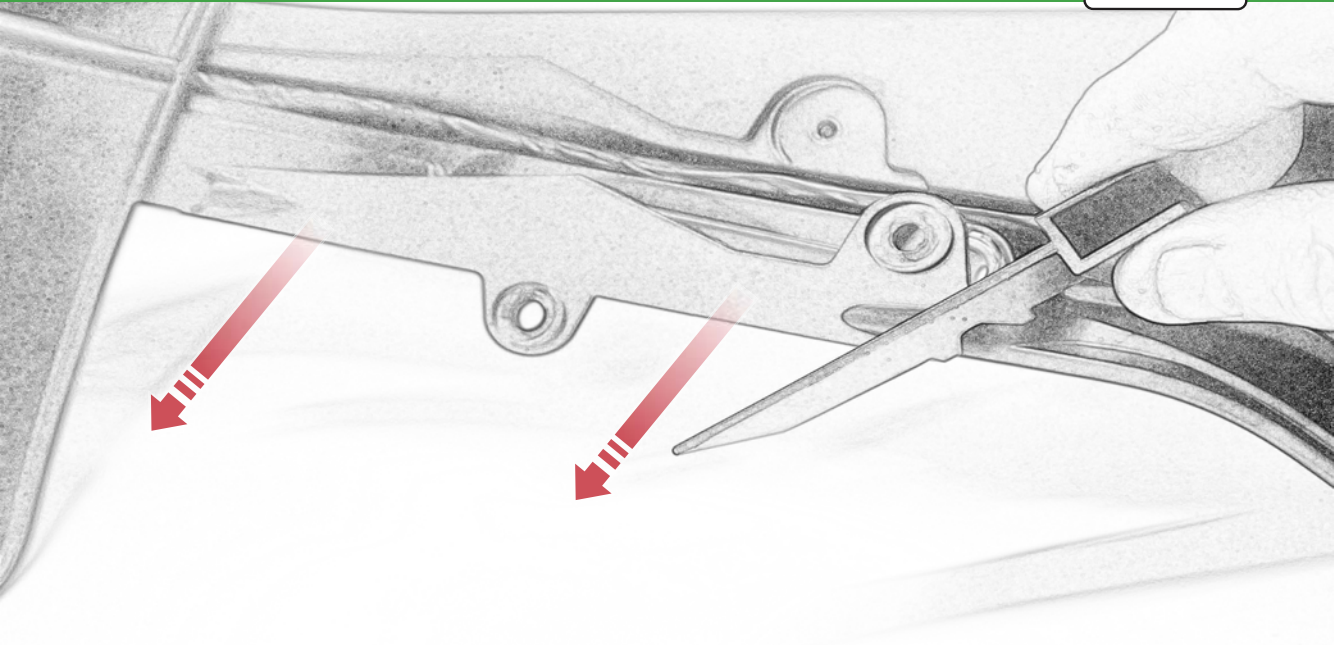

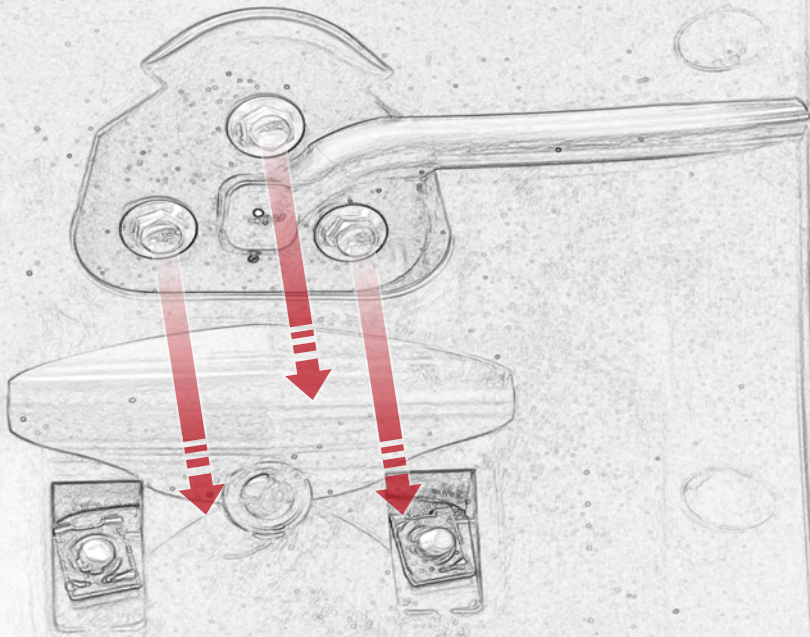


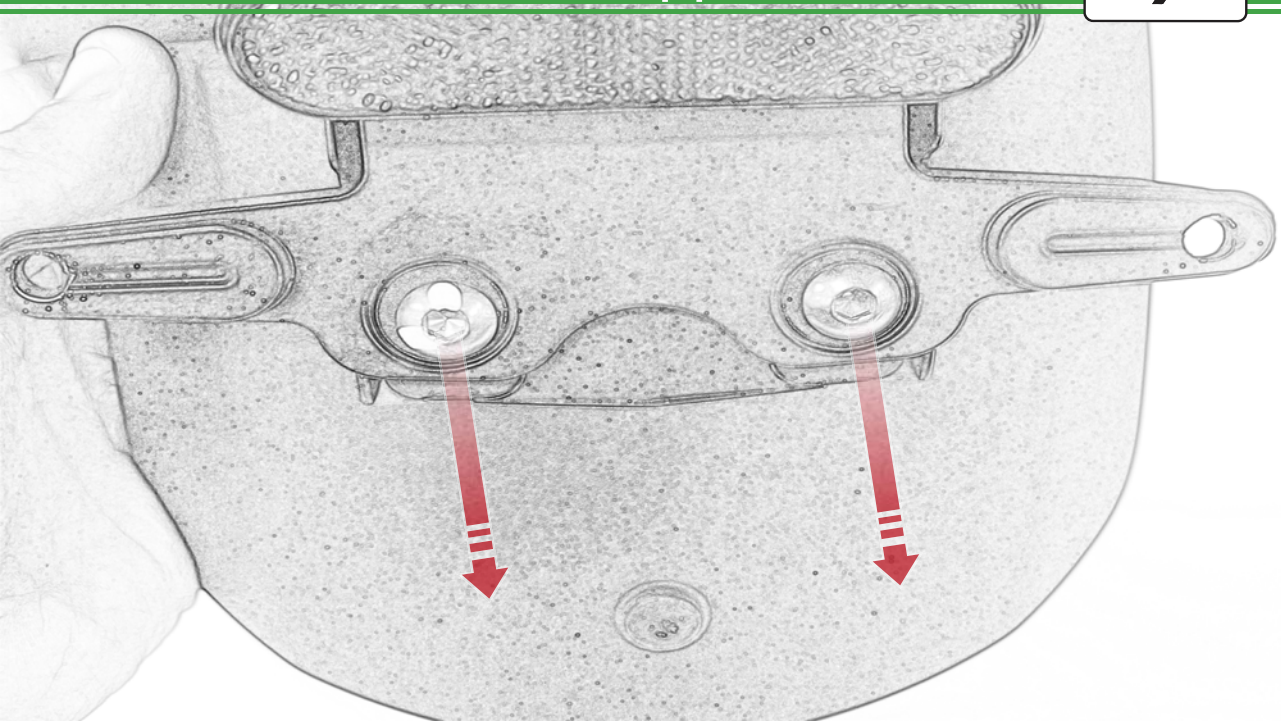

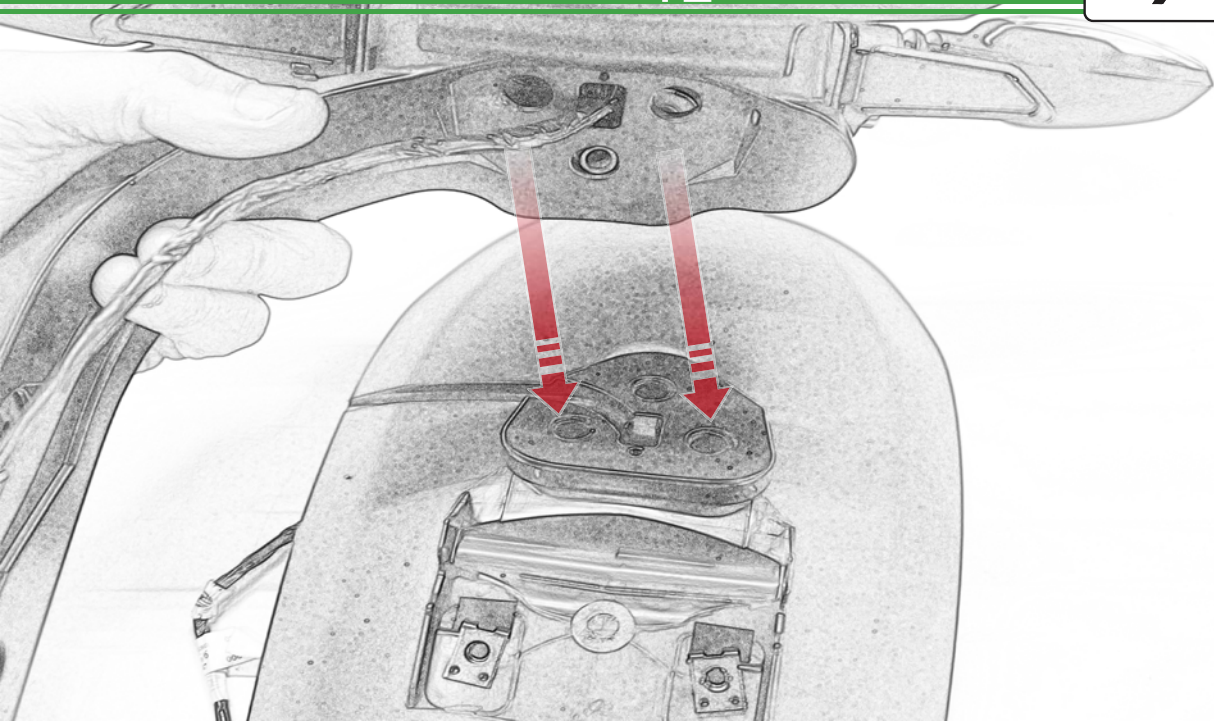

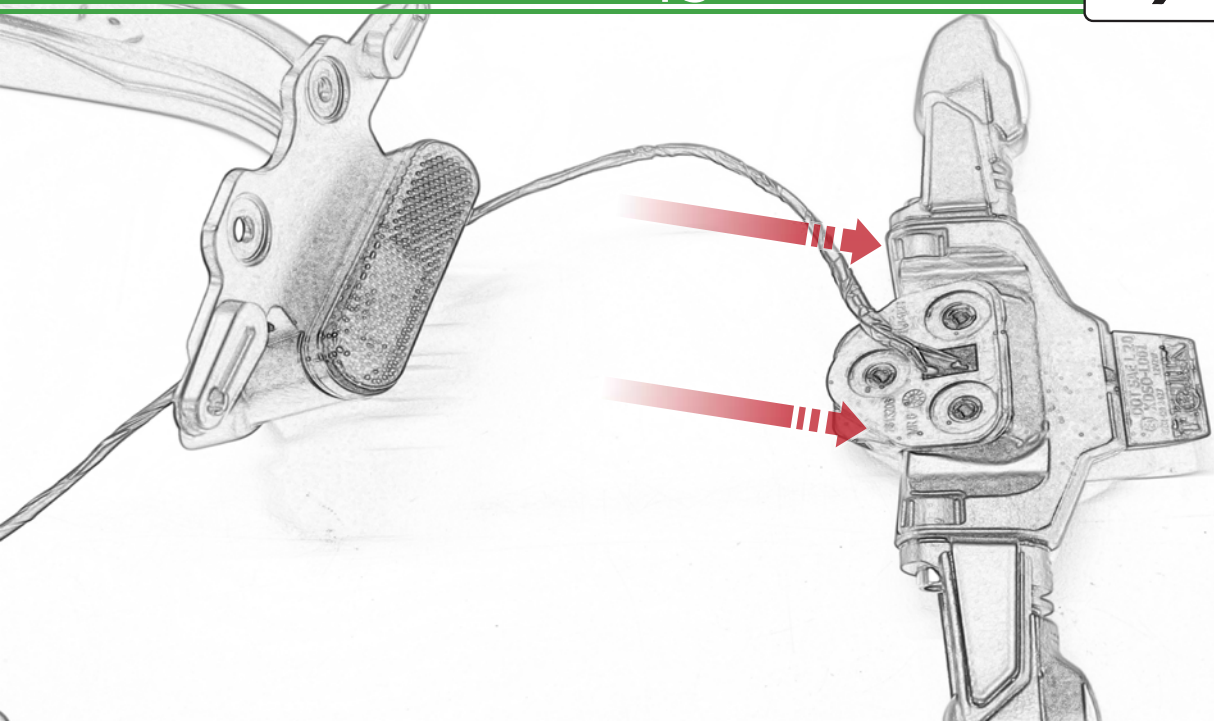





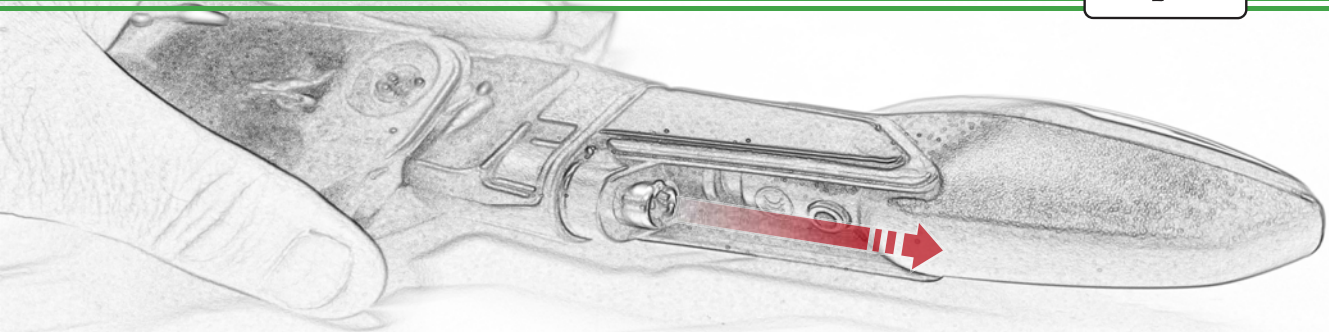


Repeat  
Both Sides




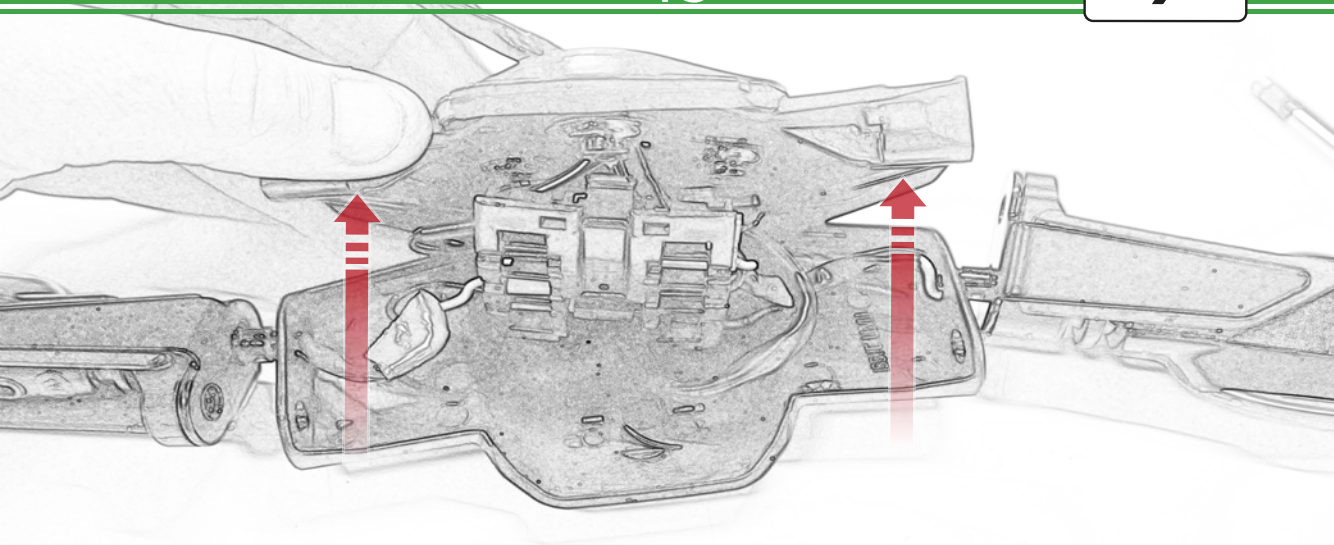


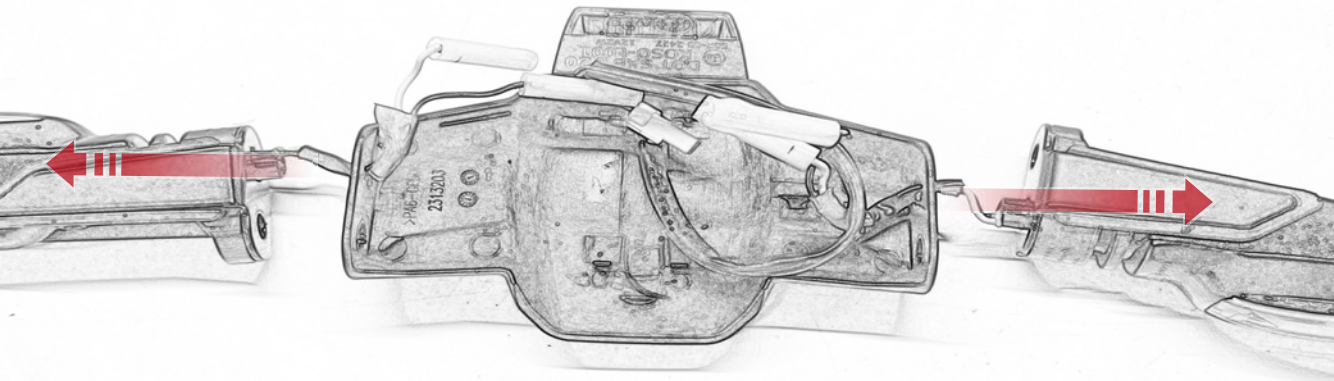

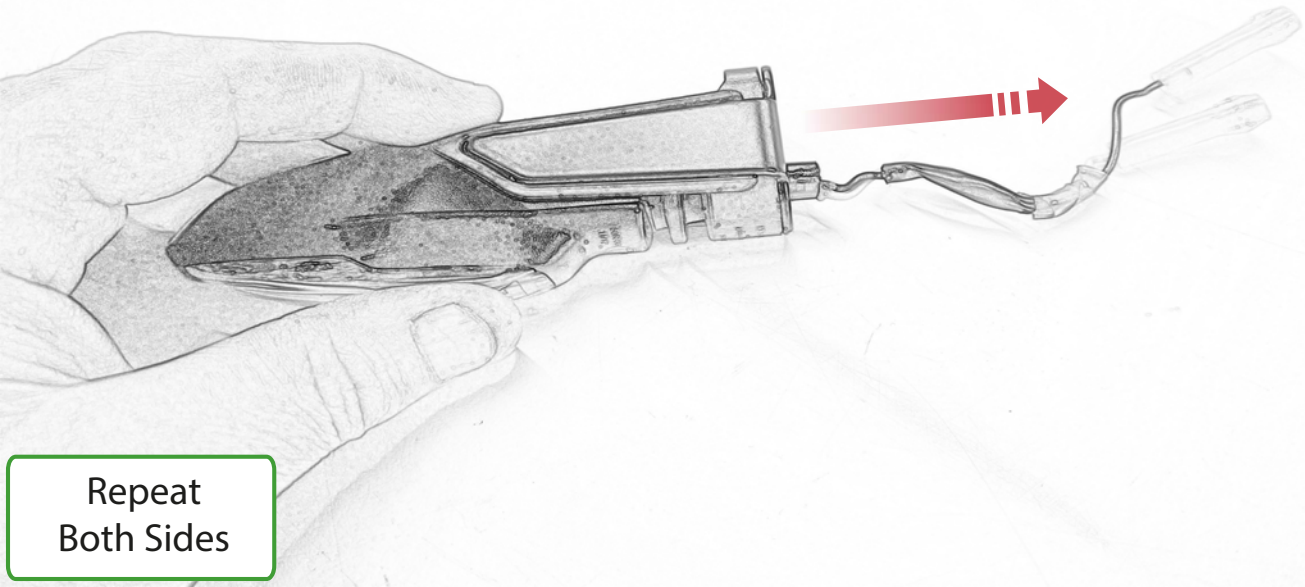



Repeat  
Both Sides

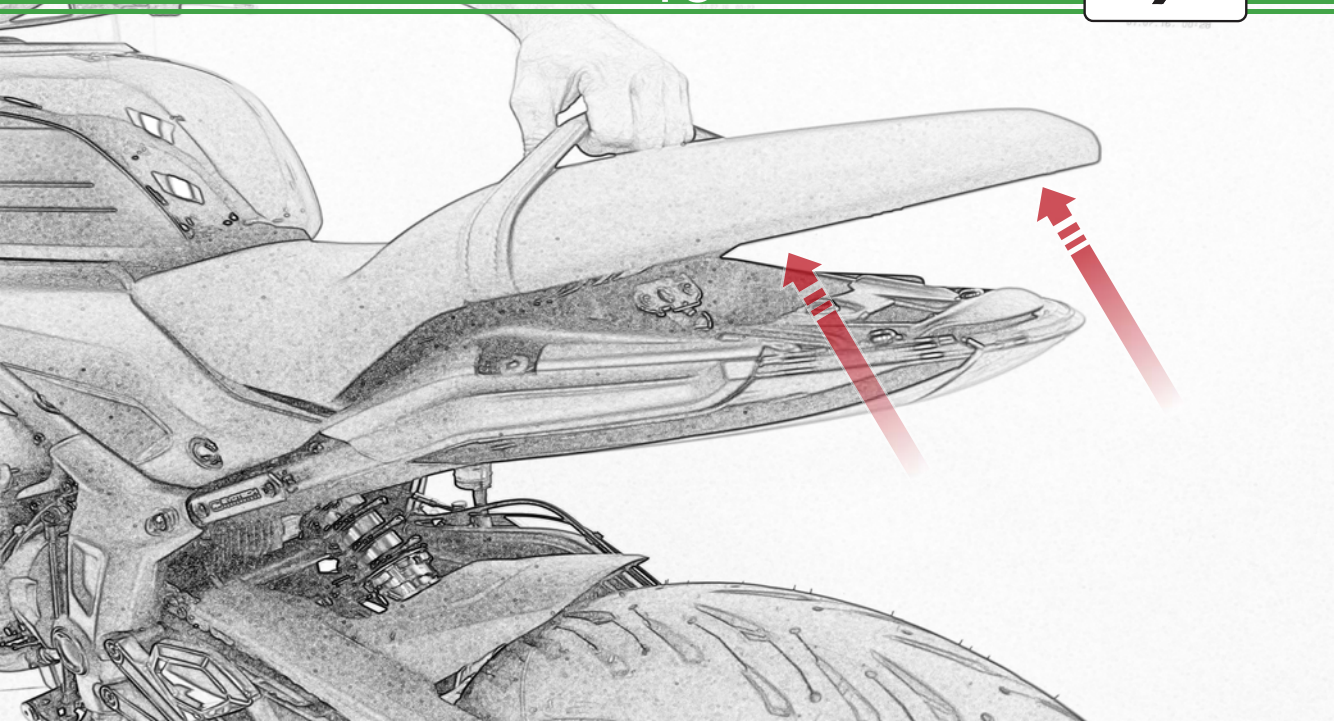

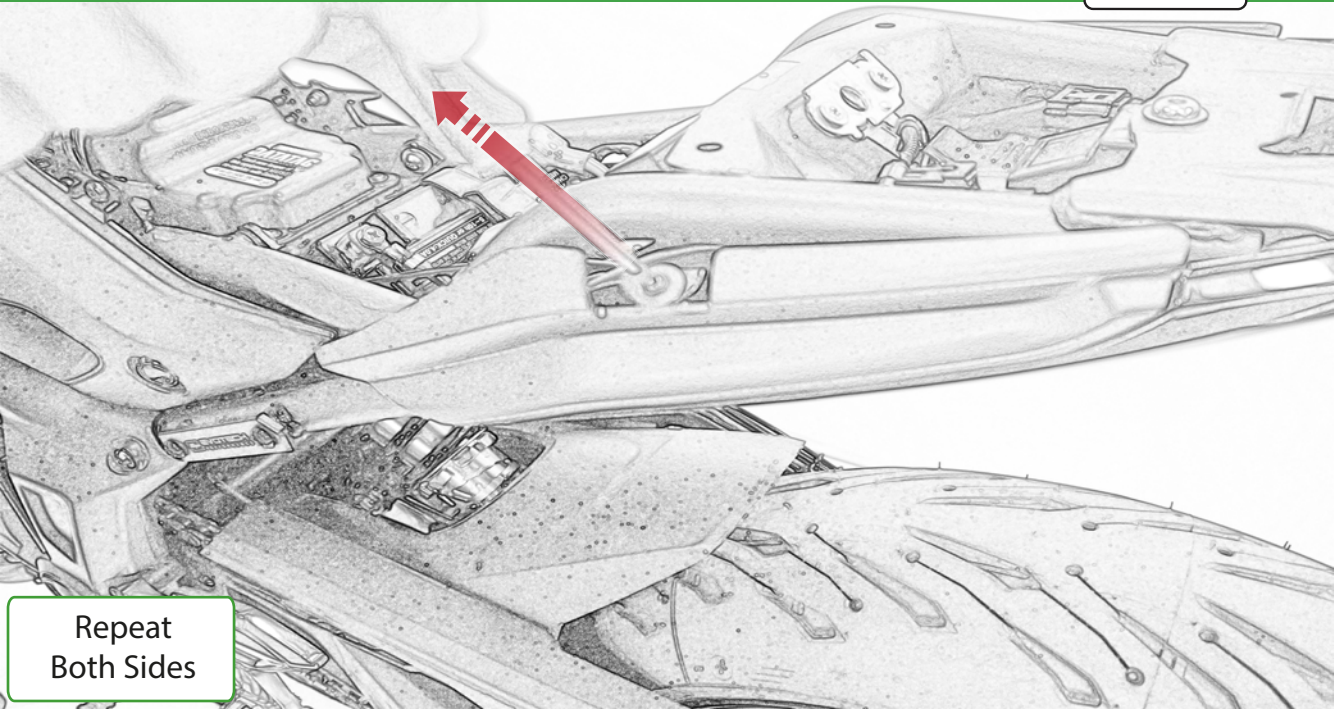



Repeat  
Both Sides




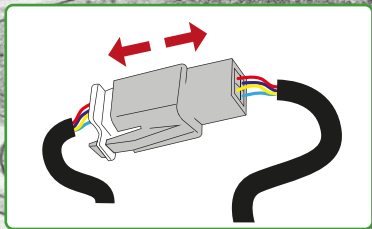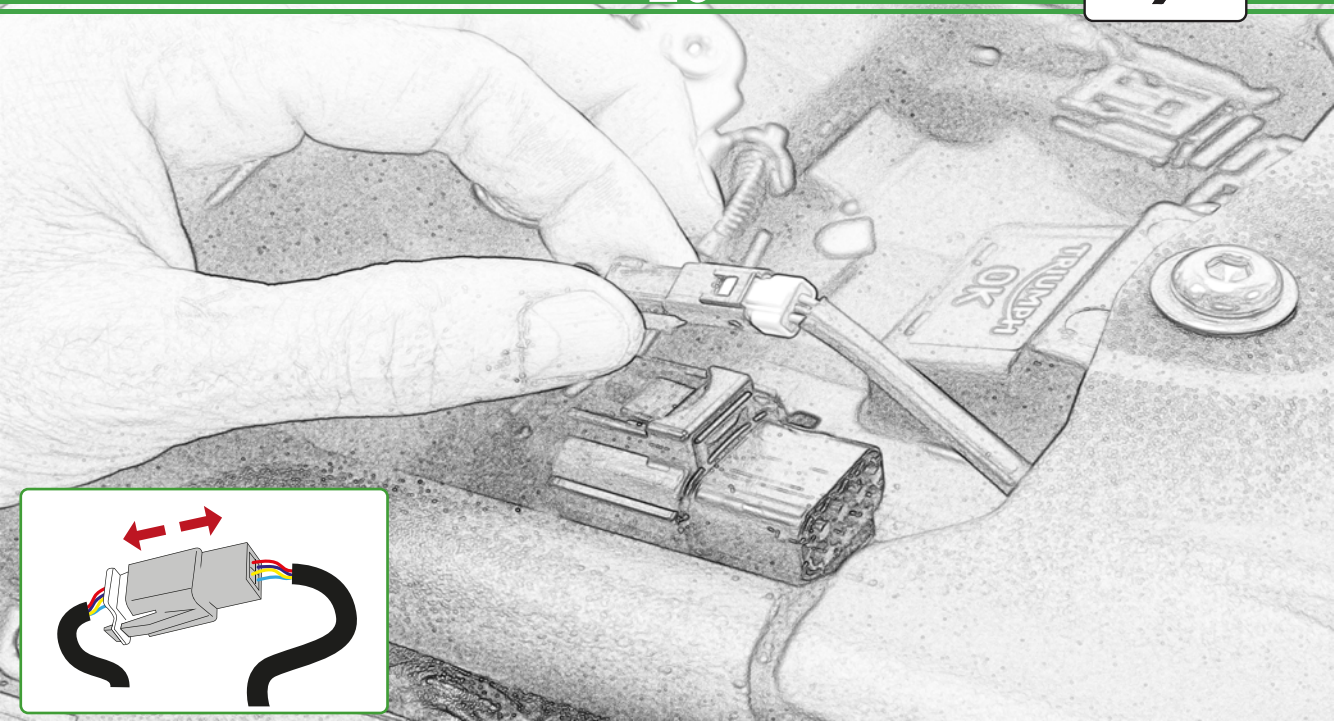



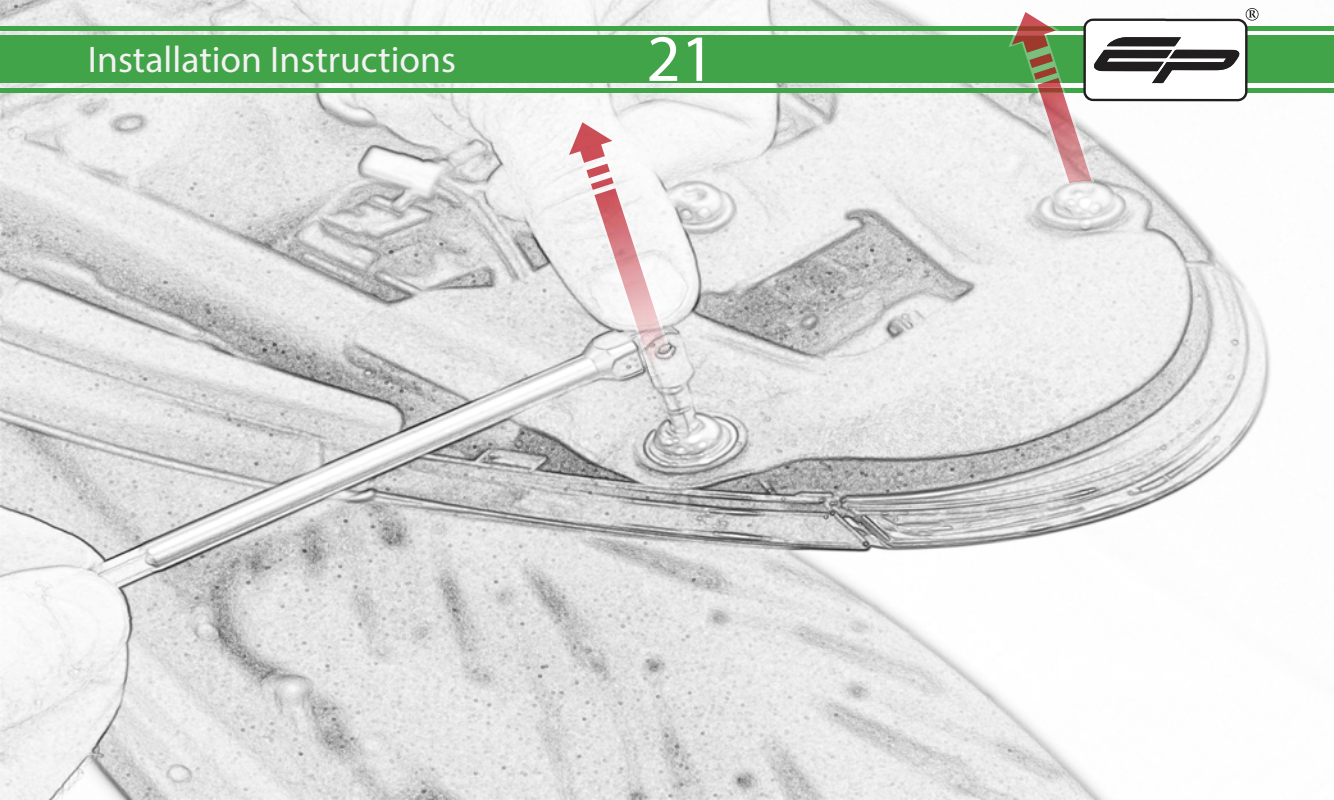

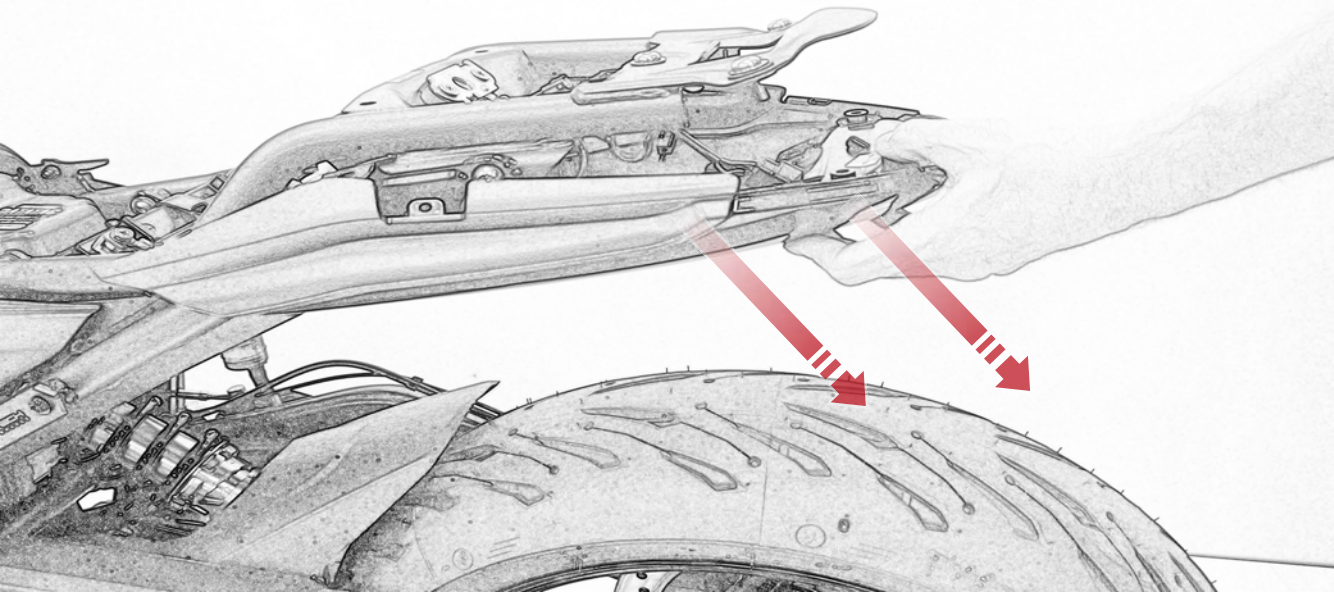


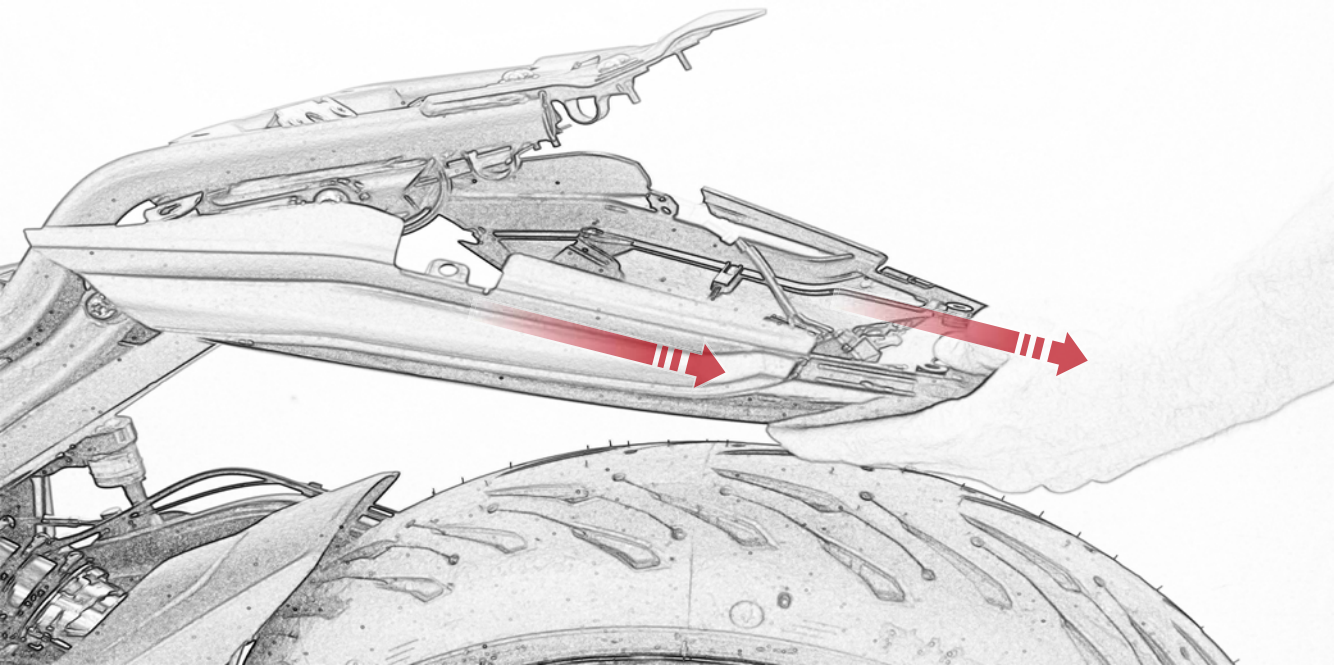




Release  
Tab



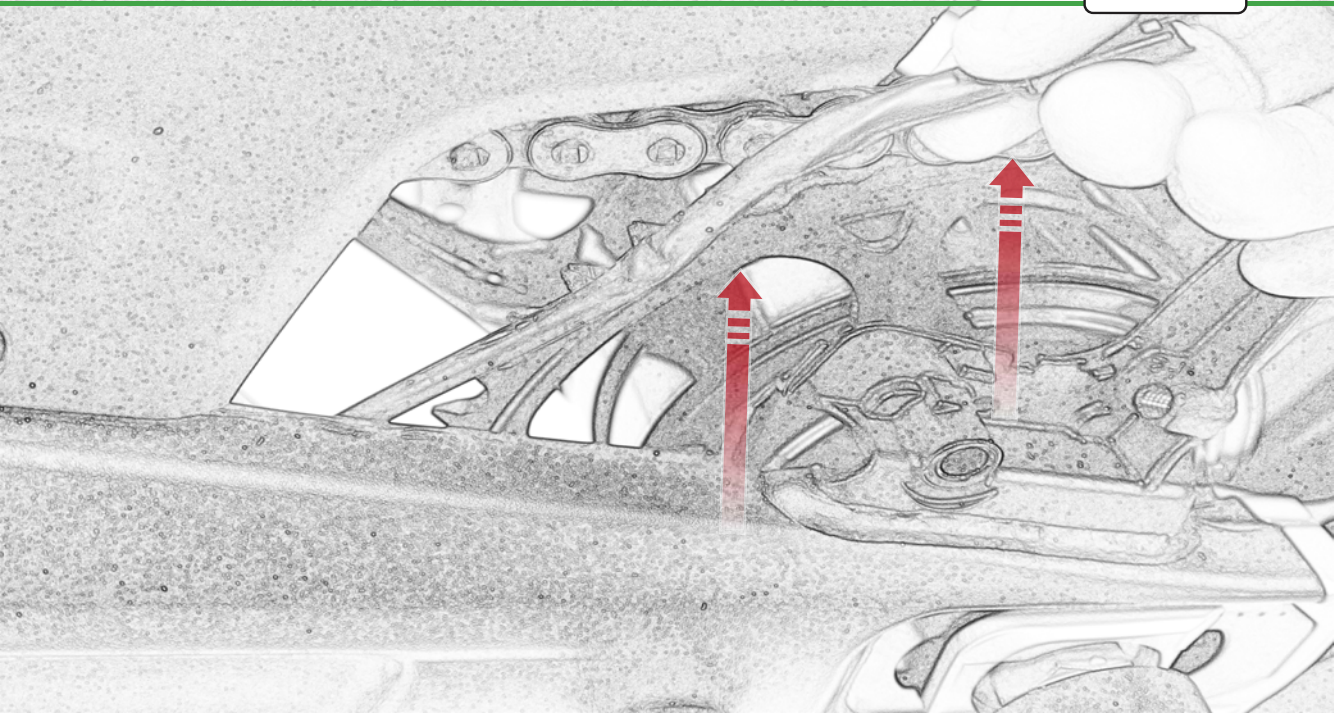


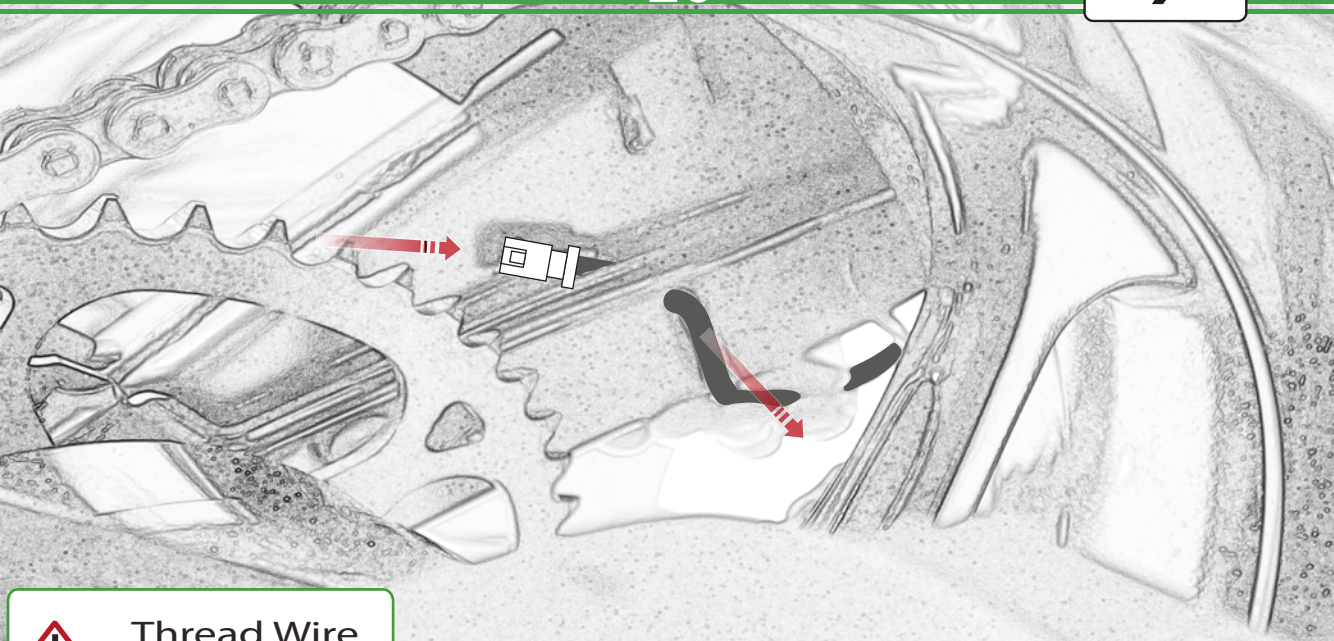



Caution


Thread Wire  
Behind Cover



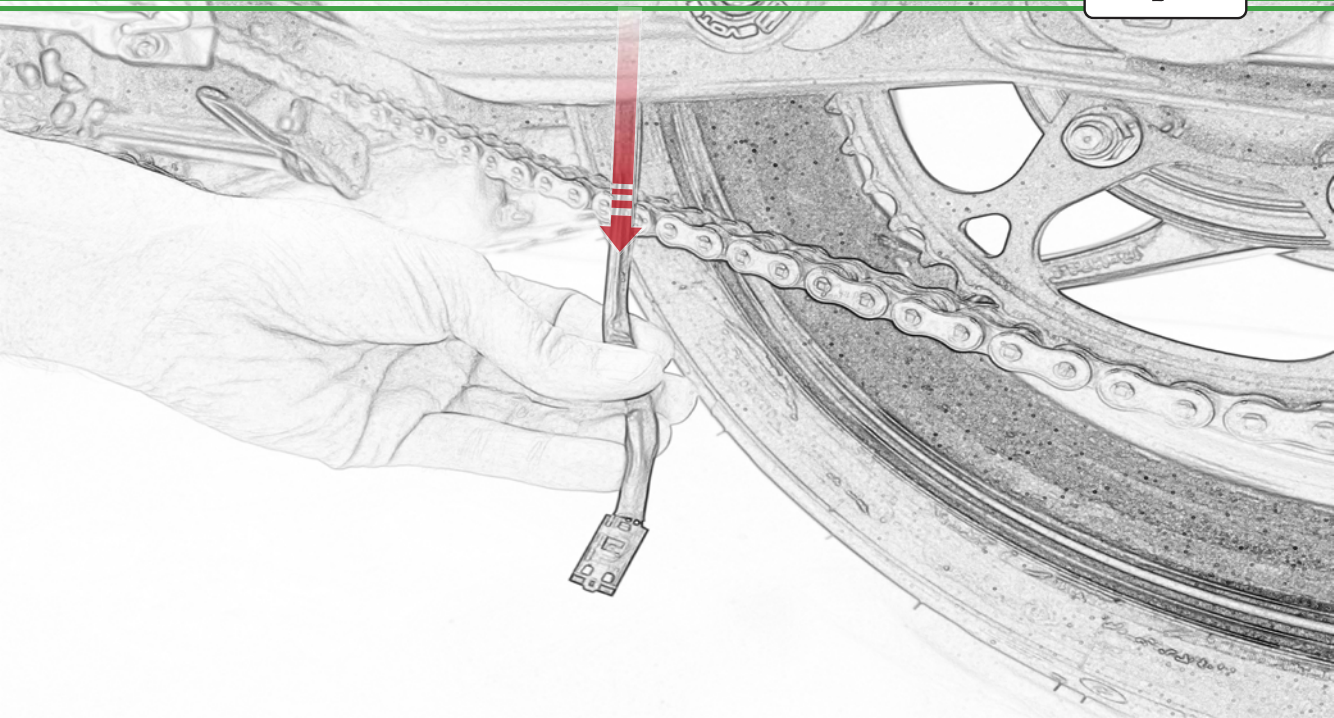


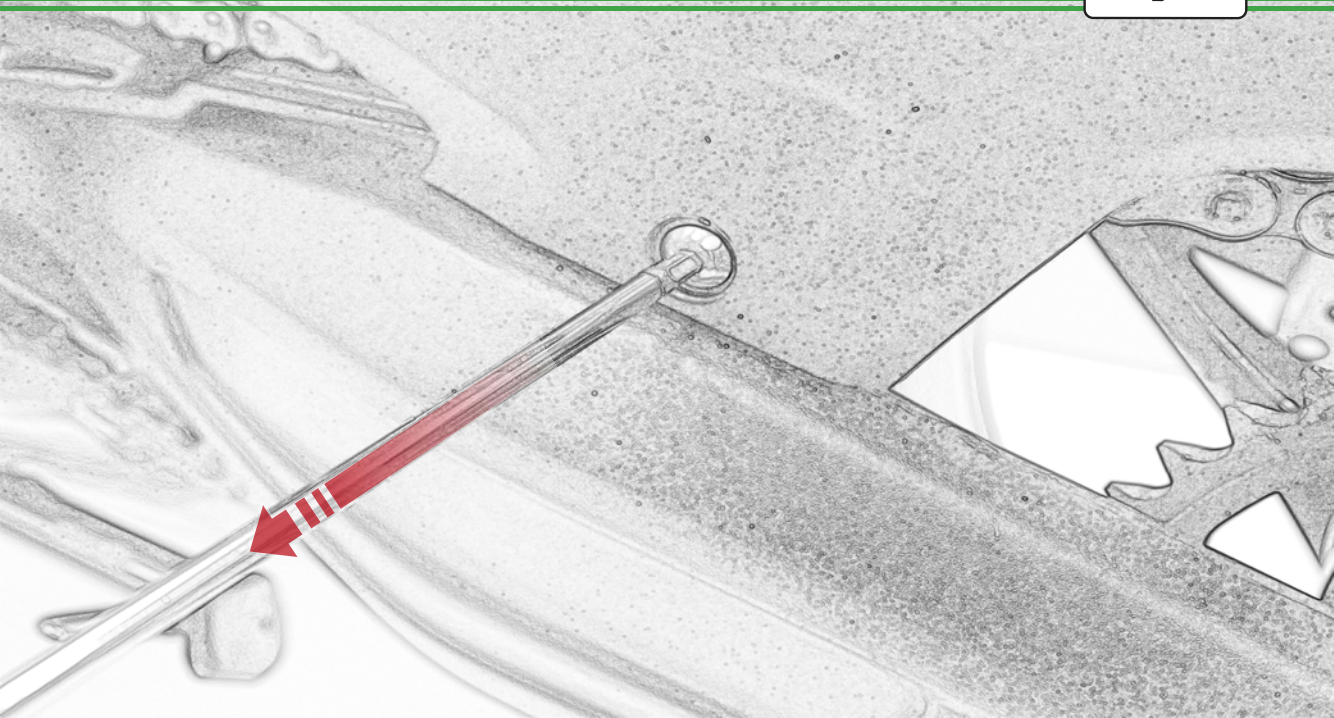


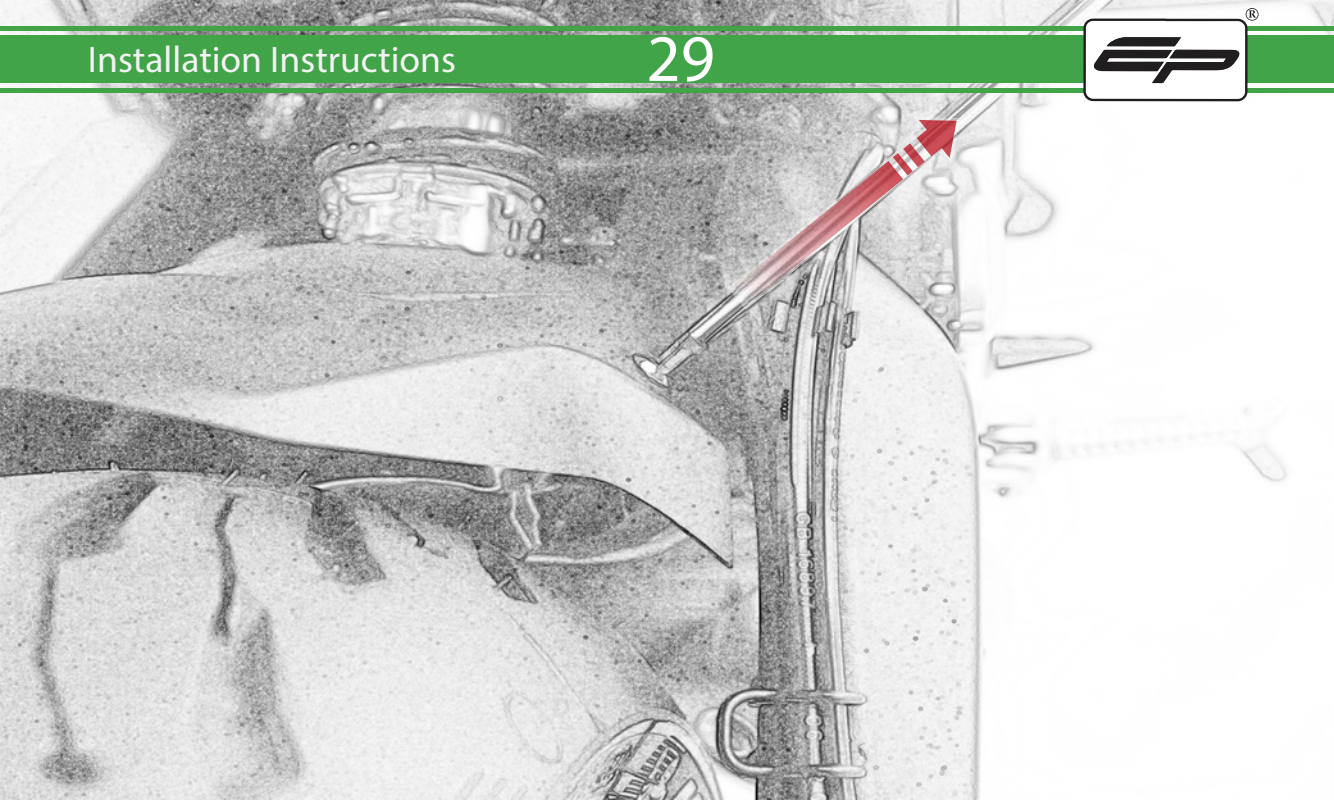



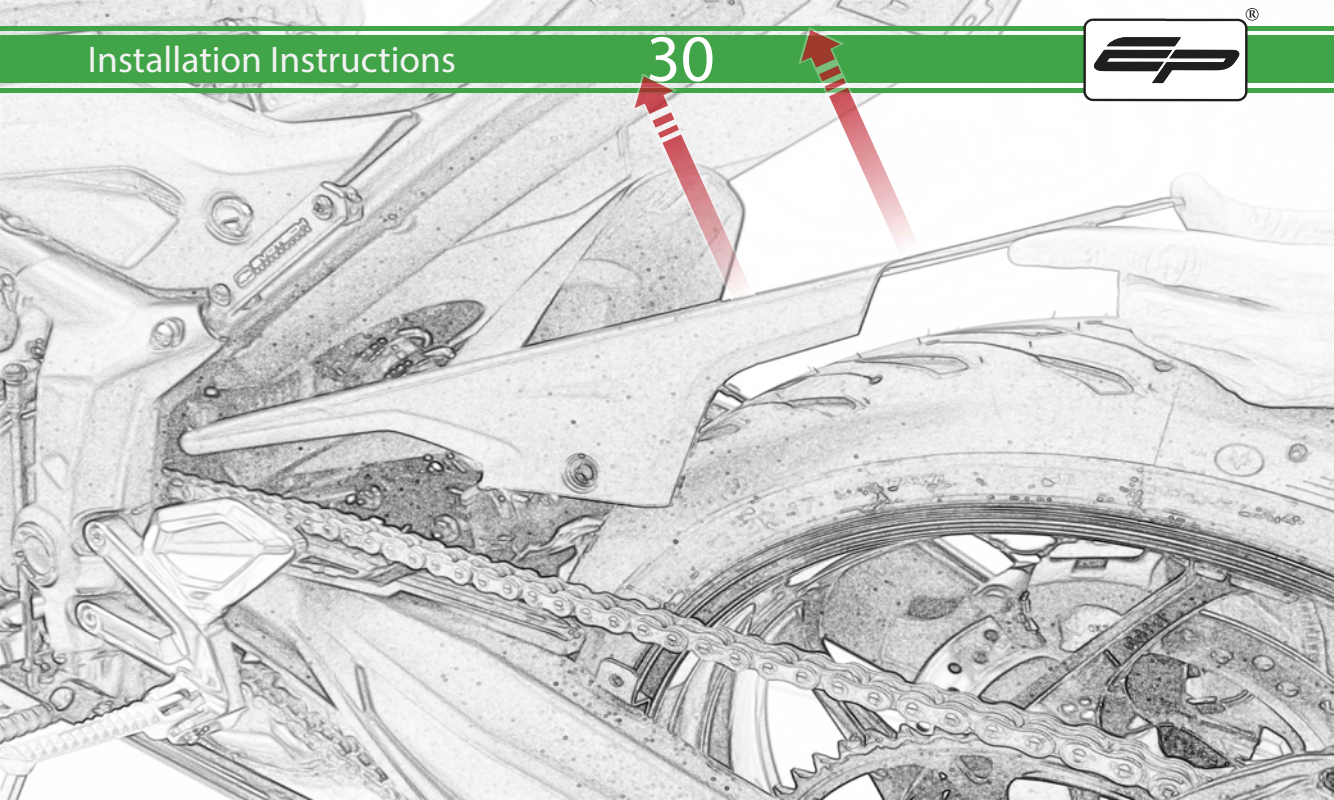






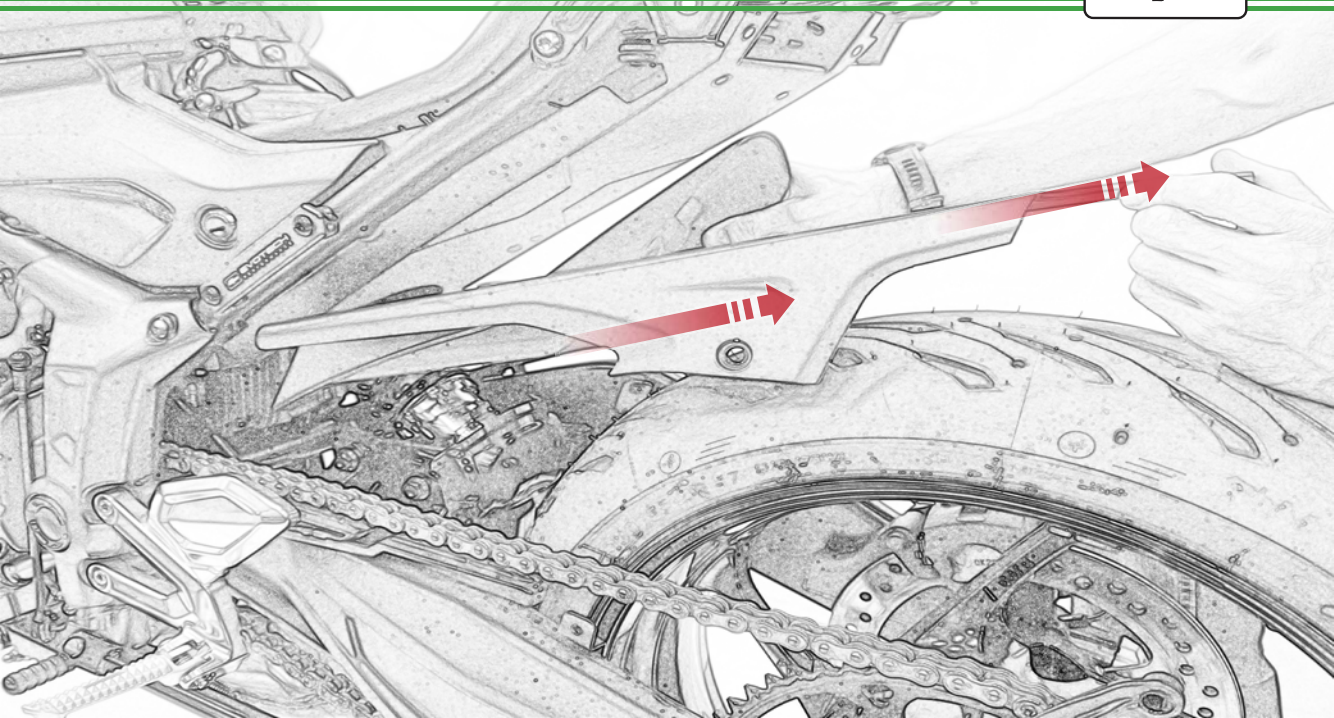




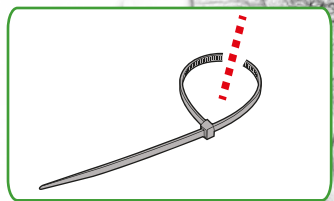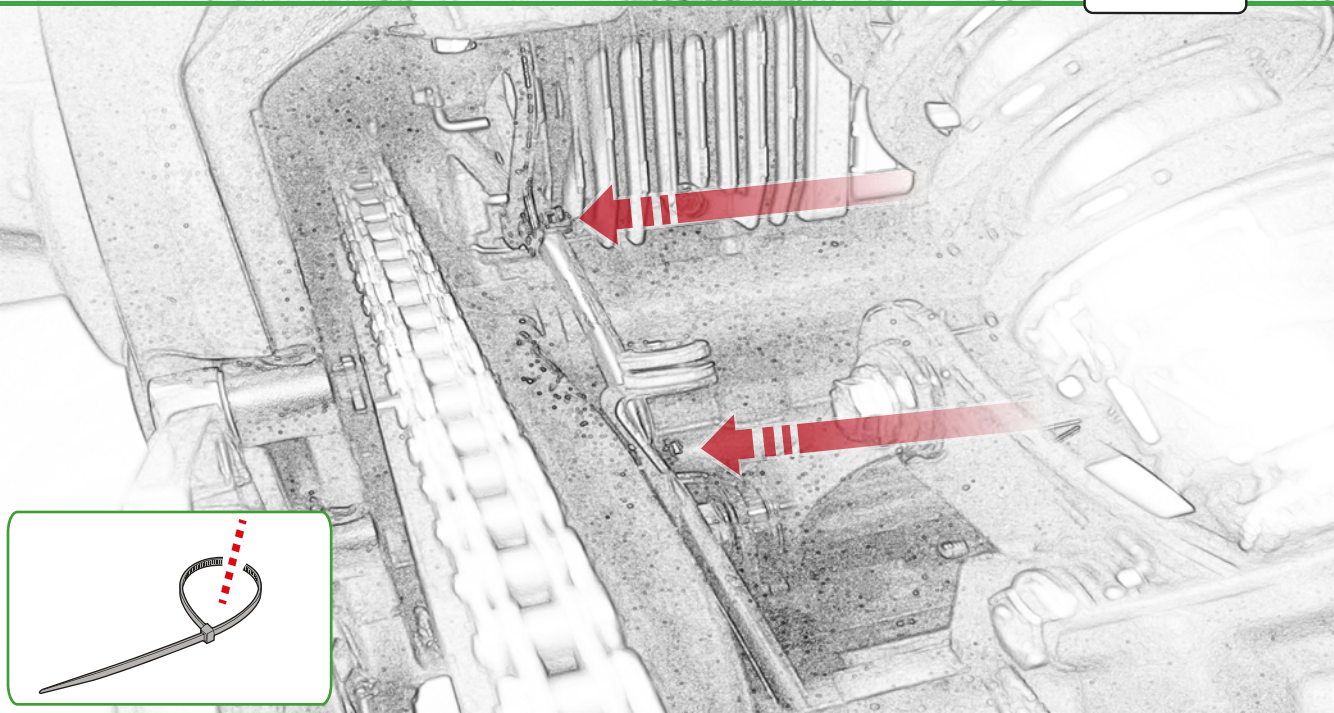

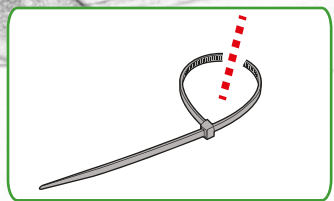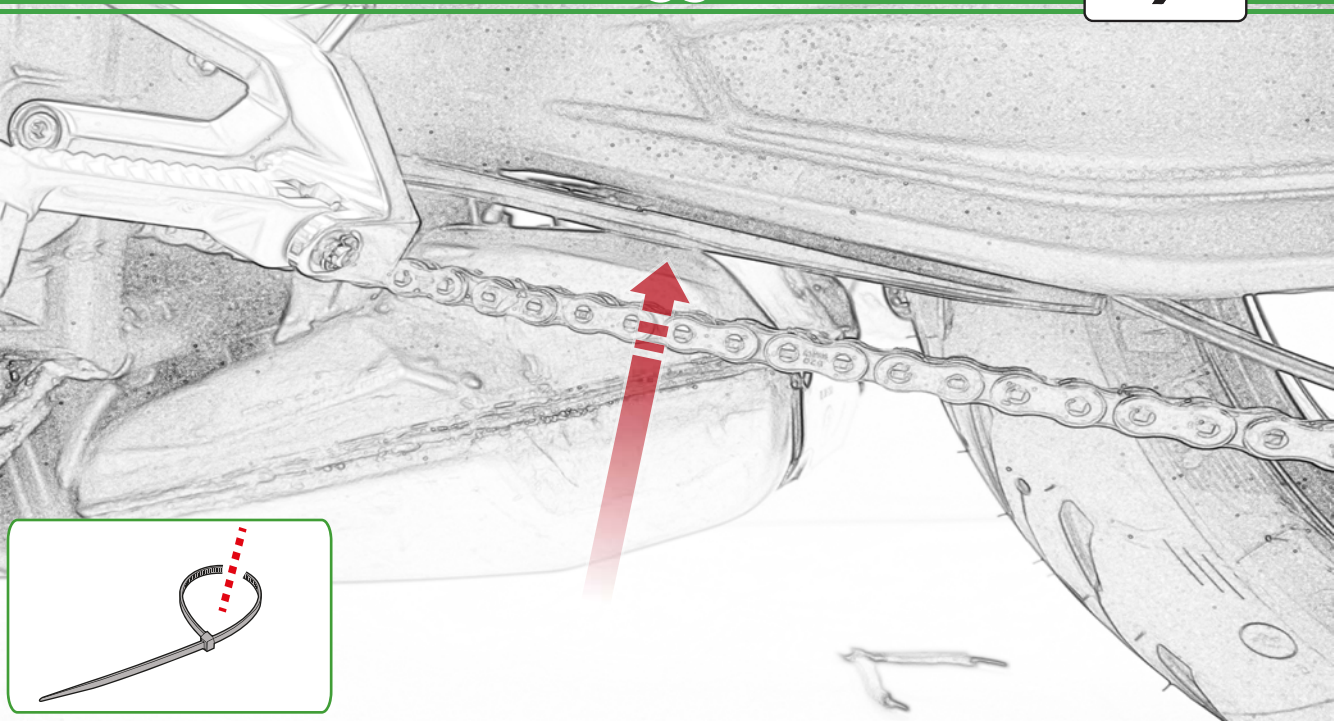

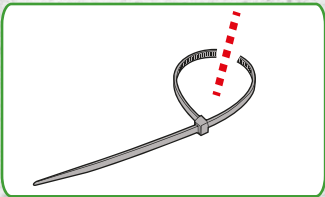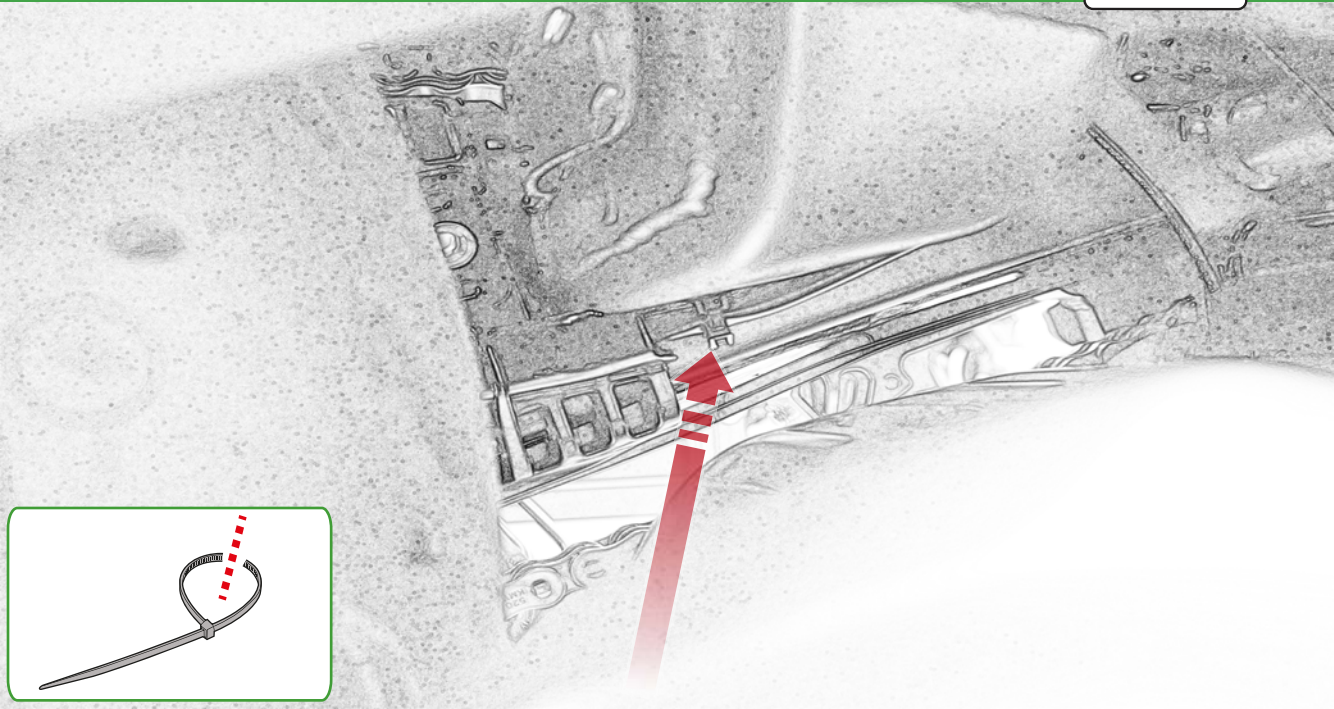


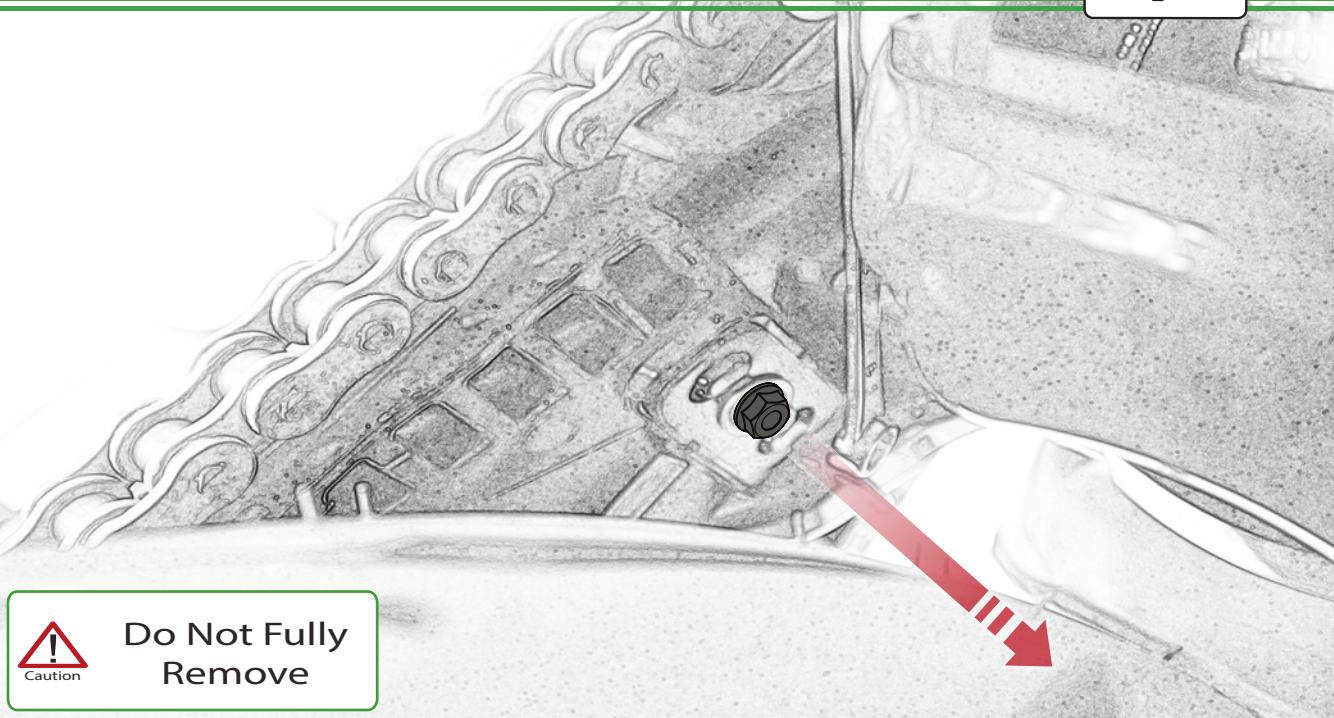


Caution


Do Not Fully  
Remove



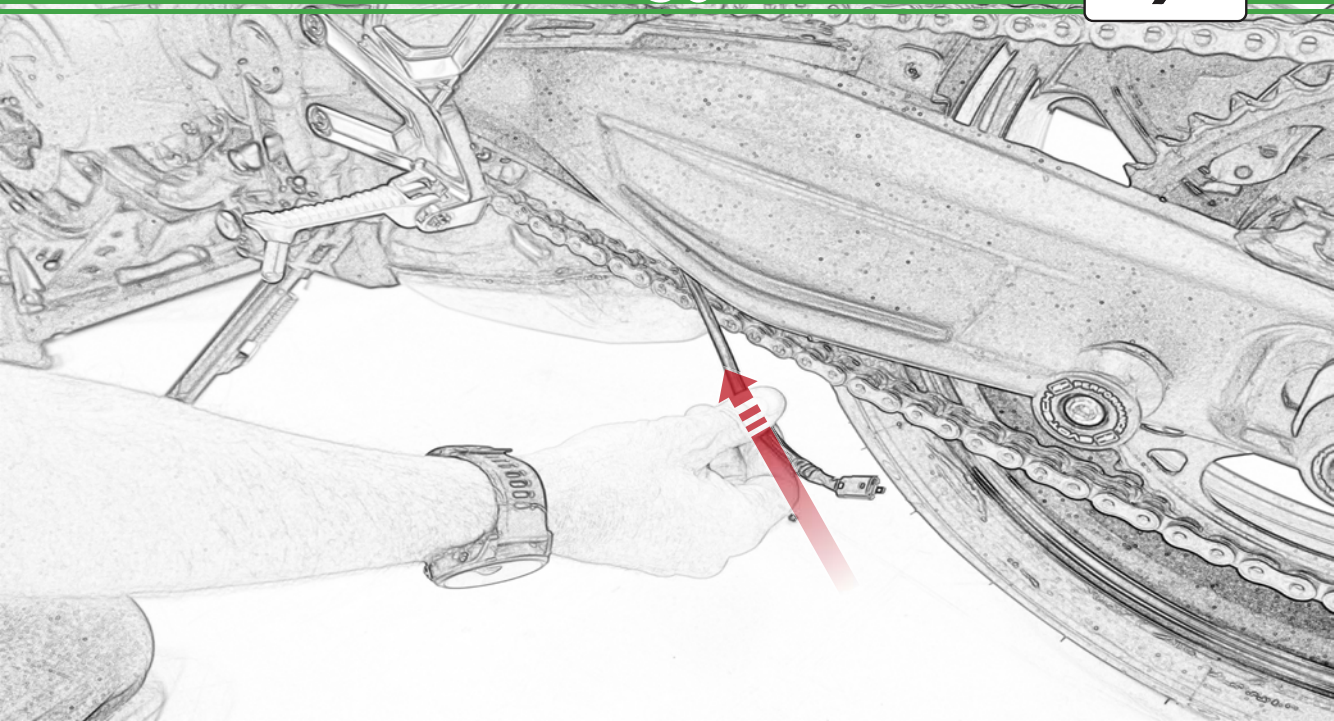




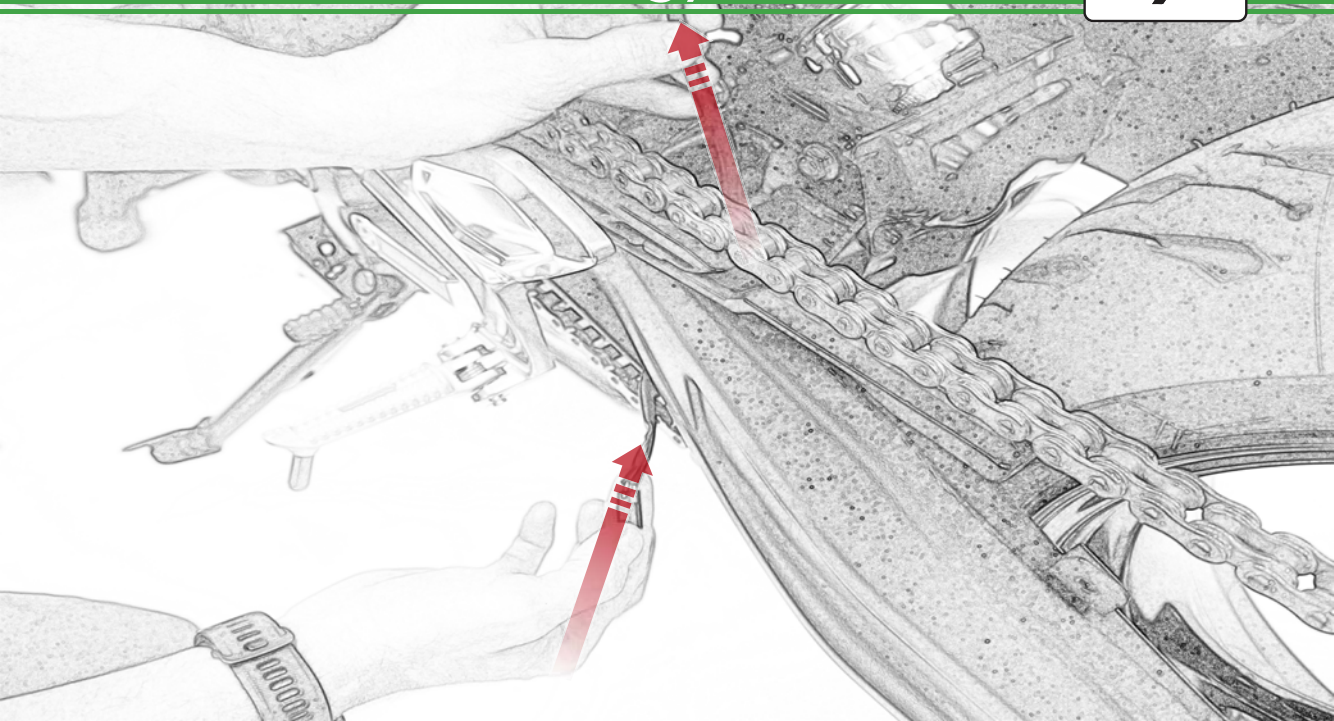

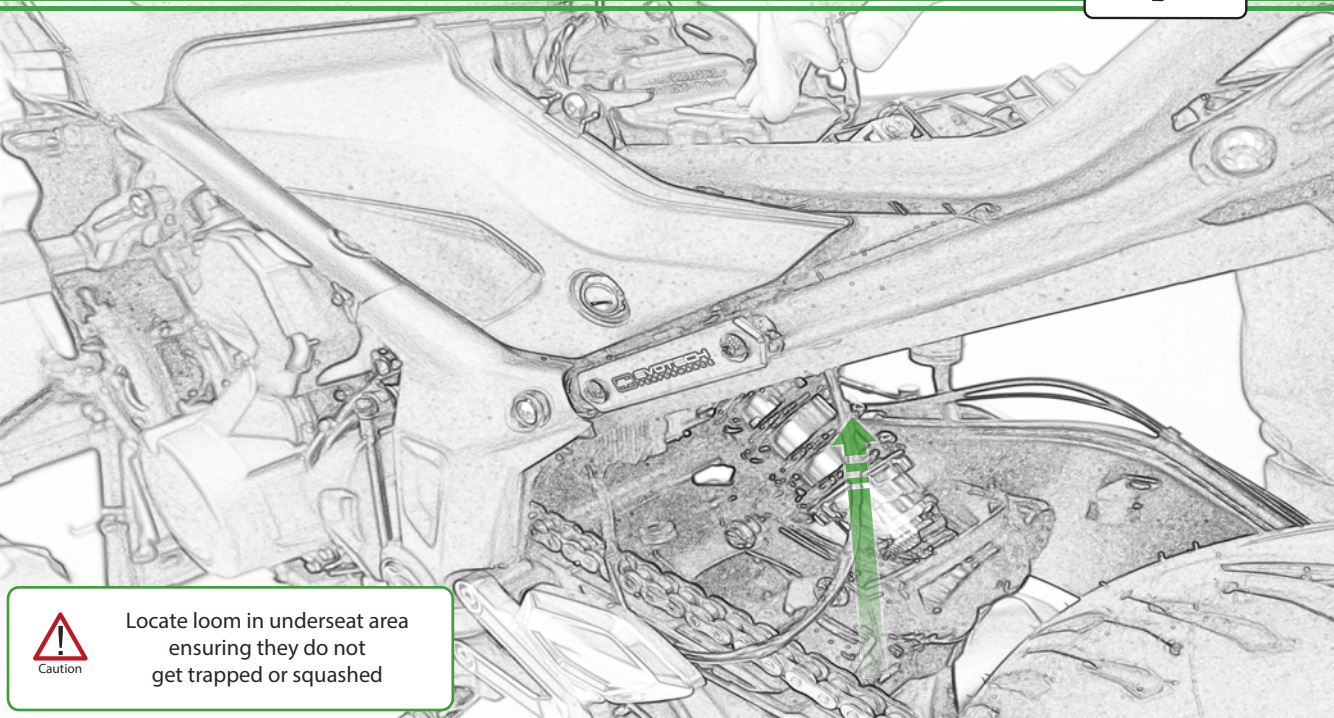

Caution

Locate loom in underseat area  
ensuring they do not  
get trapped or squashed

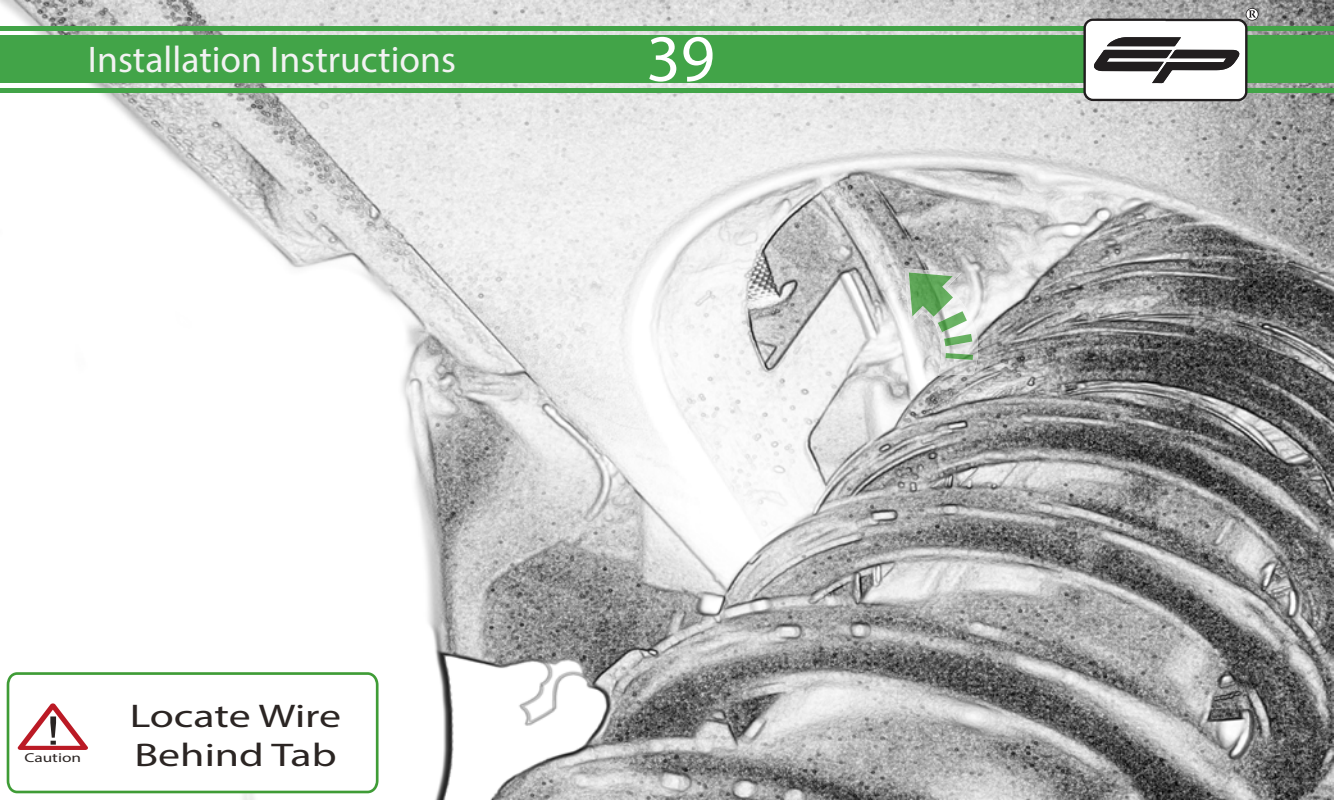


Caution

Locate Wire  
Behind Tab








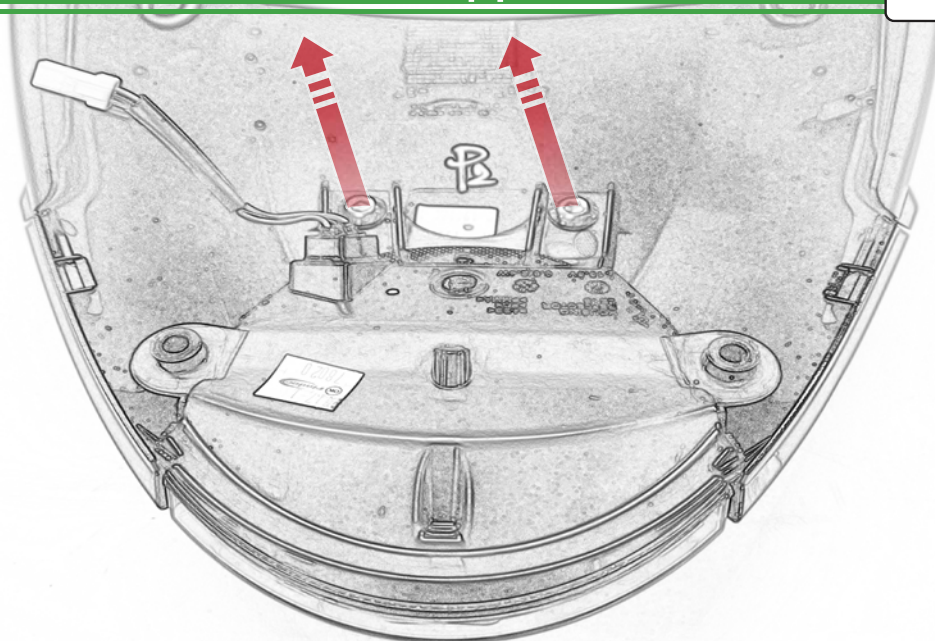






A

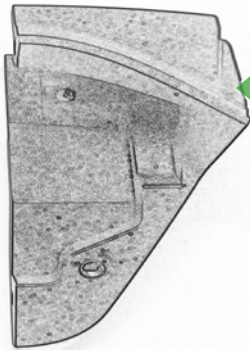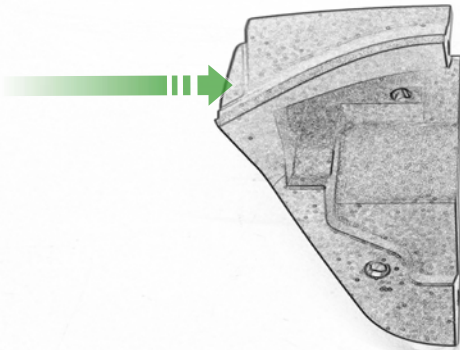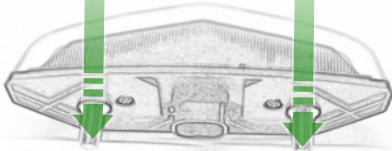


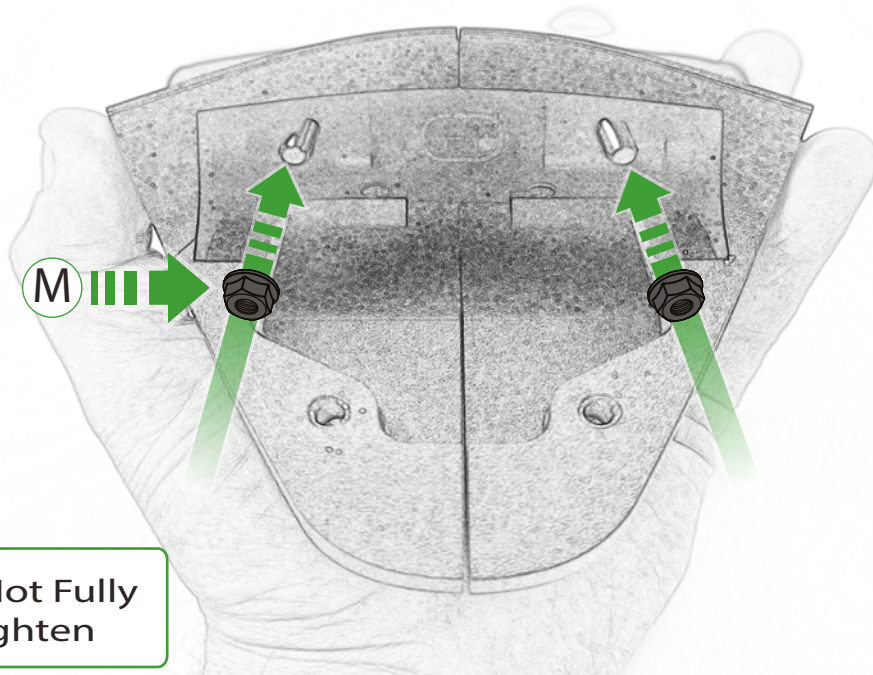


M




Do Not Fully Tighten

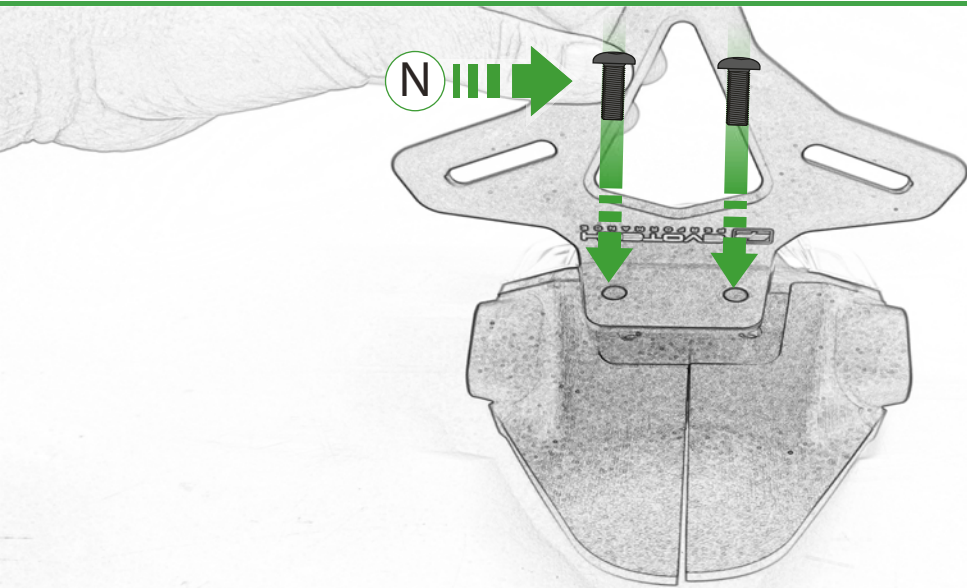

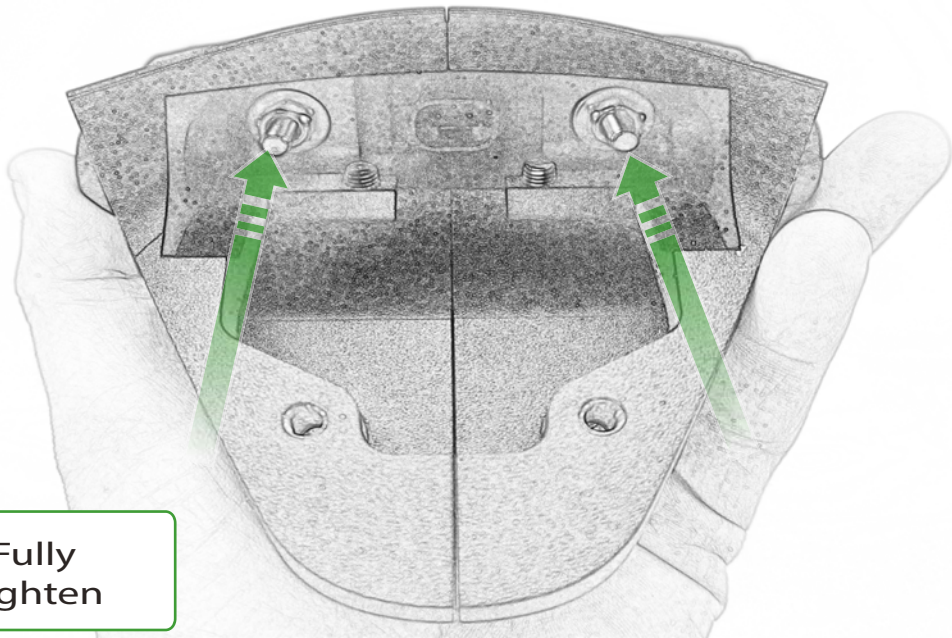


Caution

Fully  
Tighten

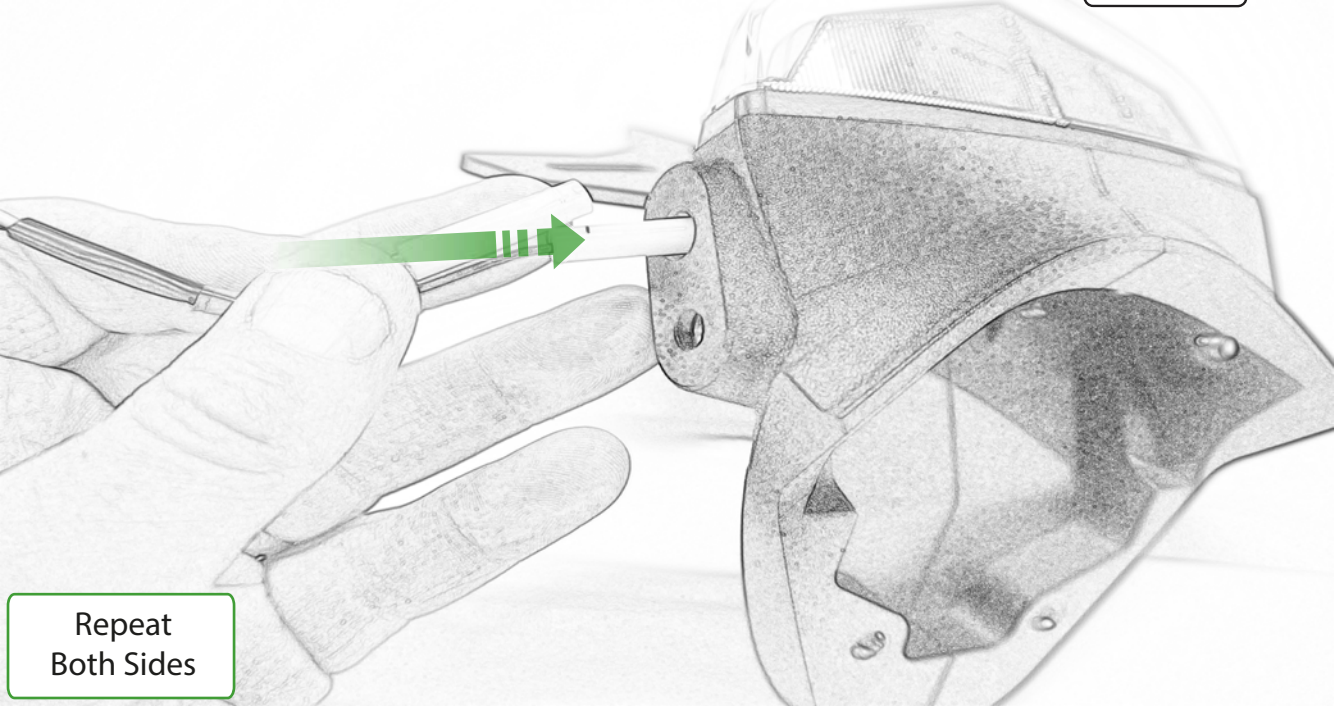



Repeat  
Both Sides




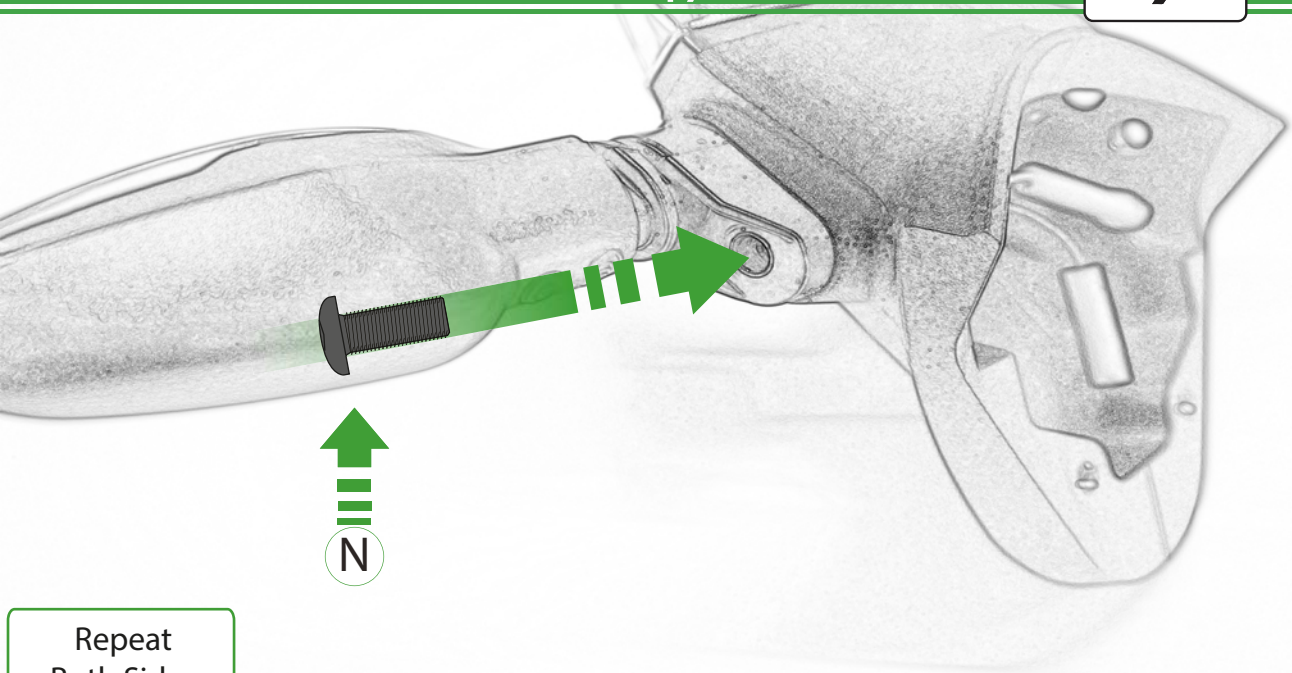

Repeat  
Both Sides

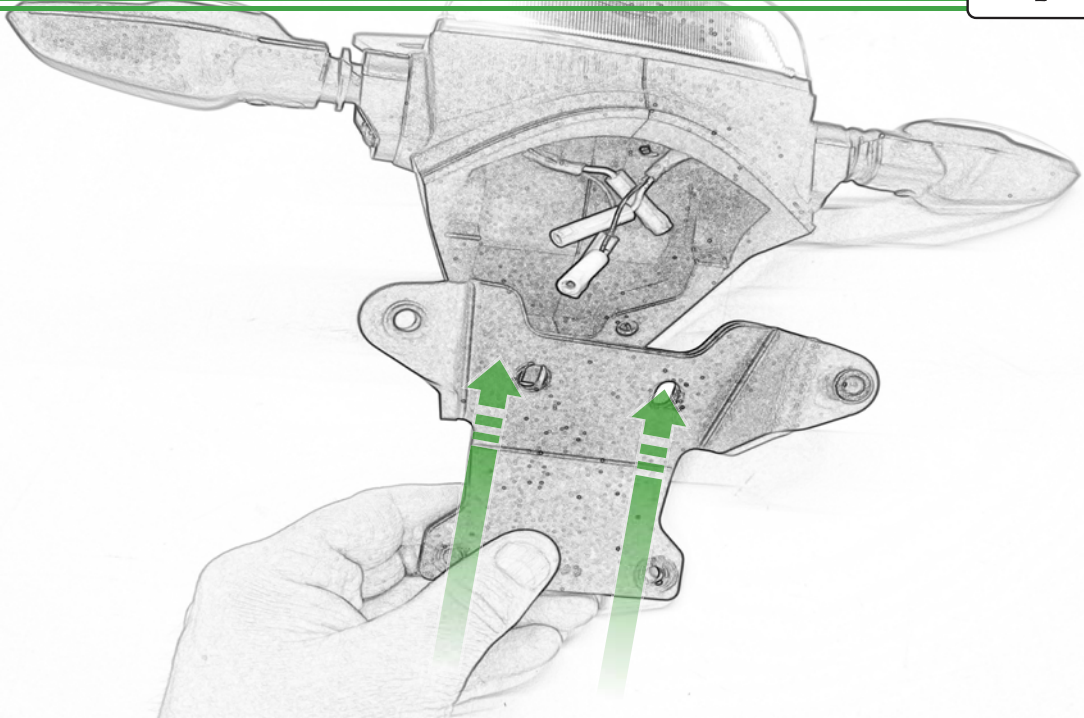



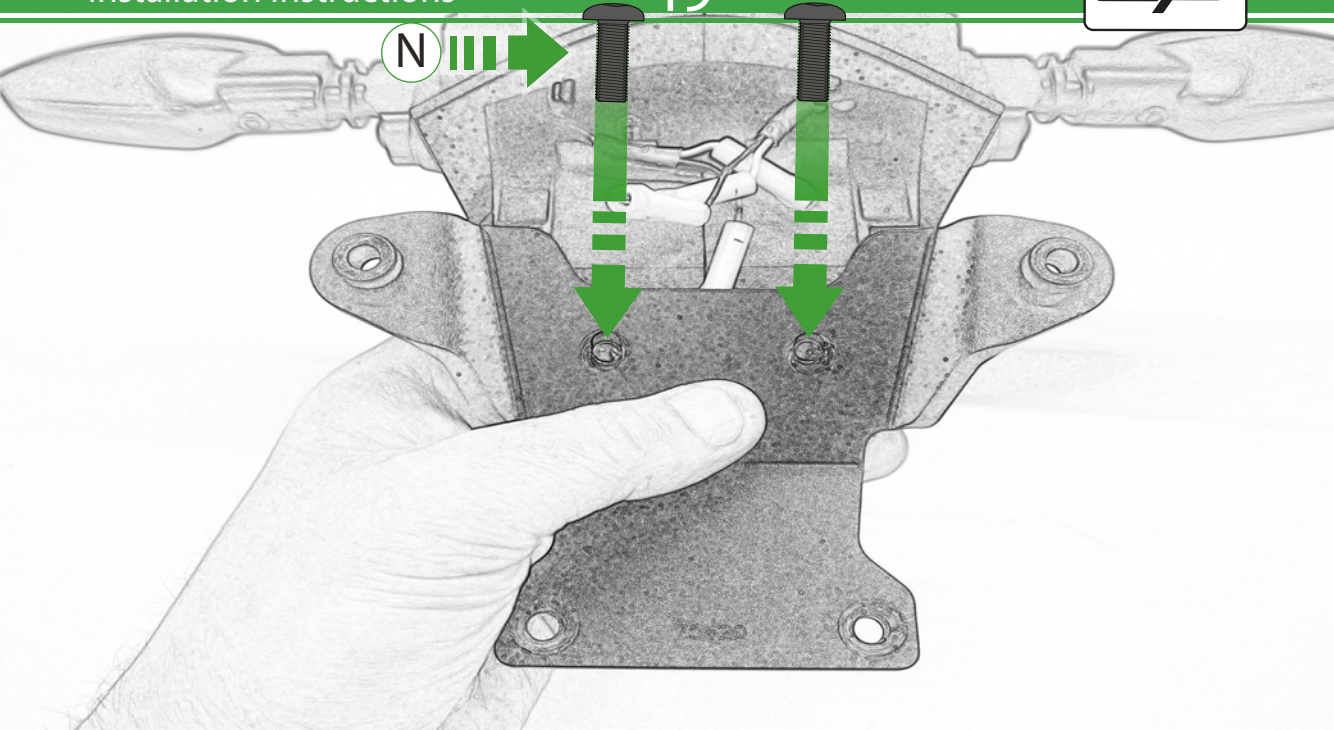



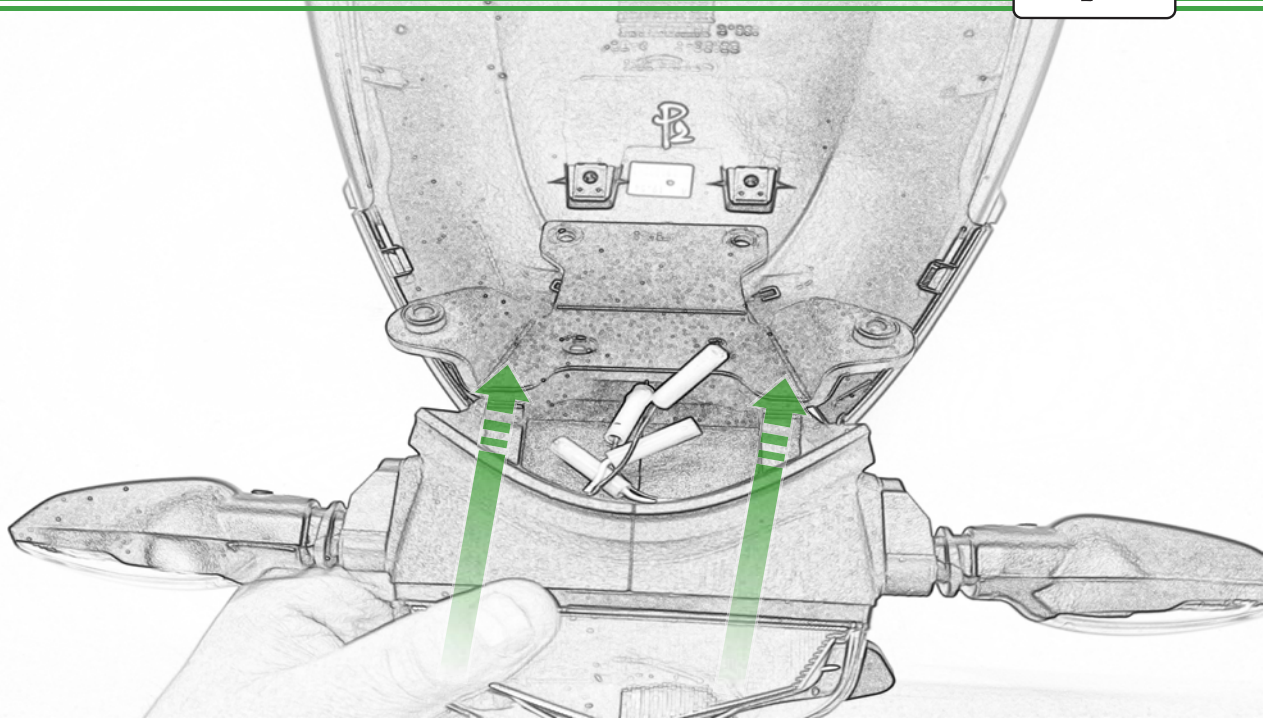





N

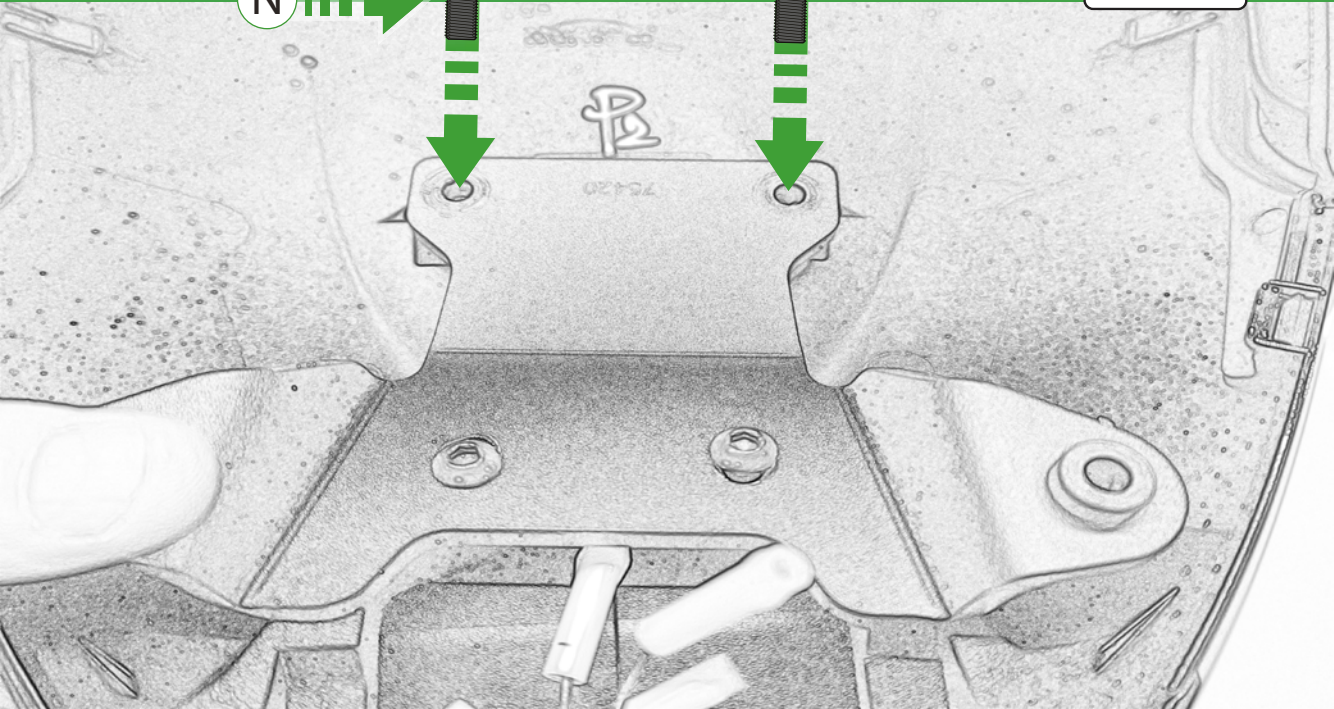

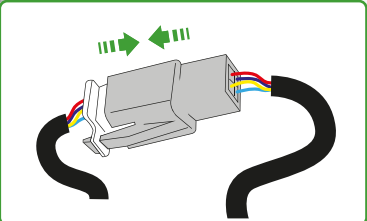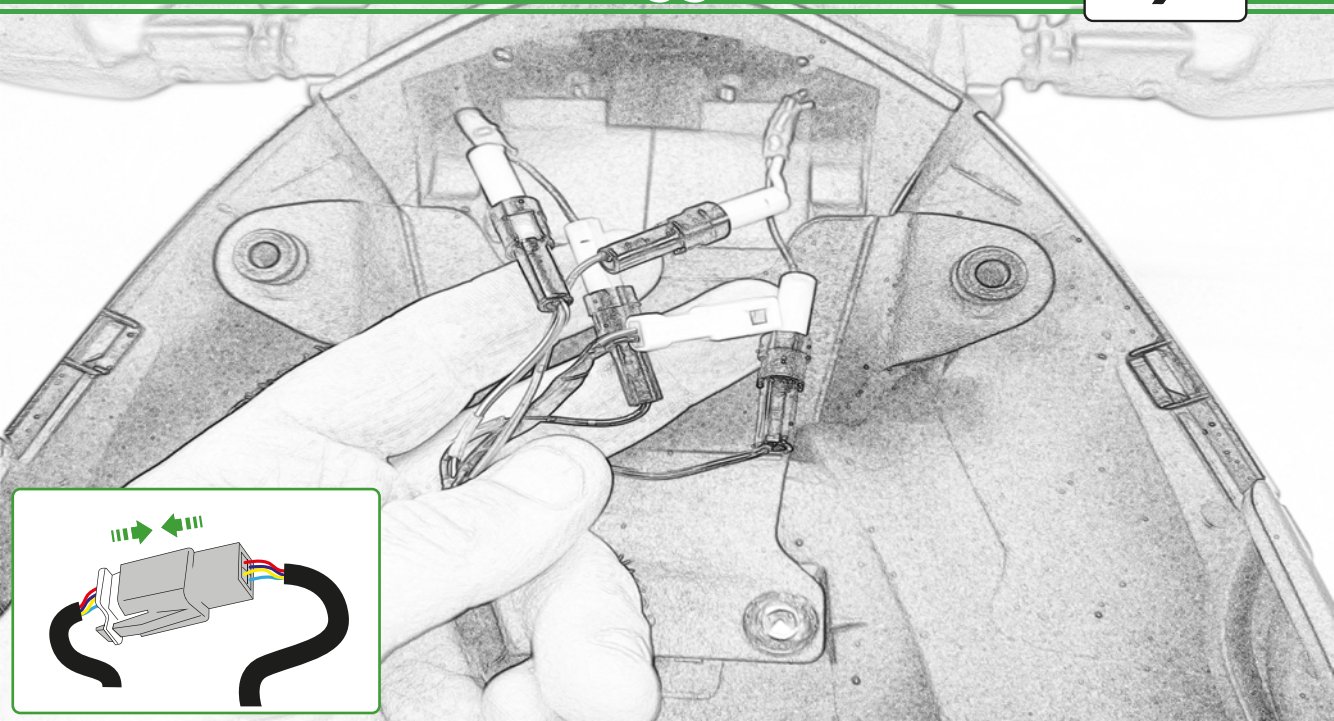

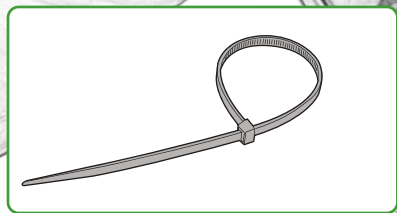
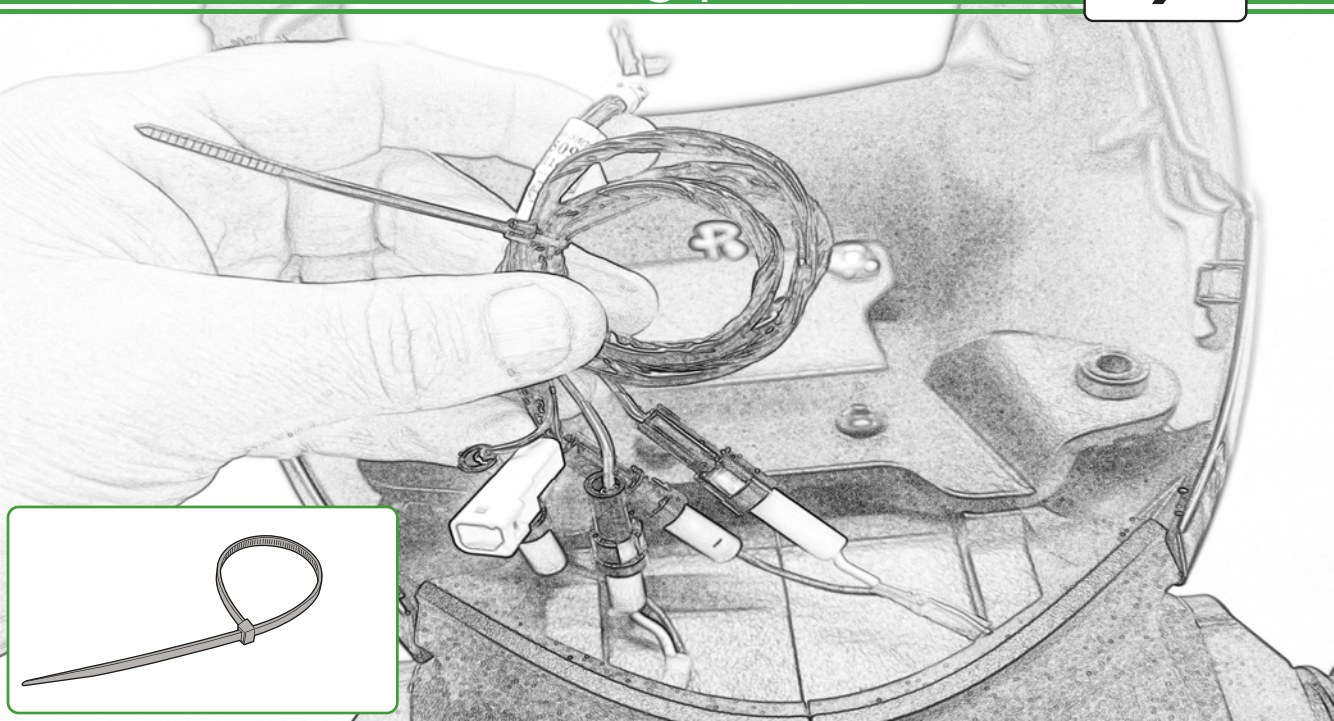


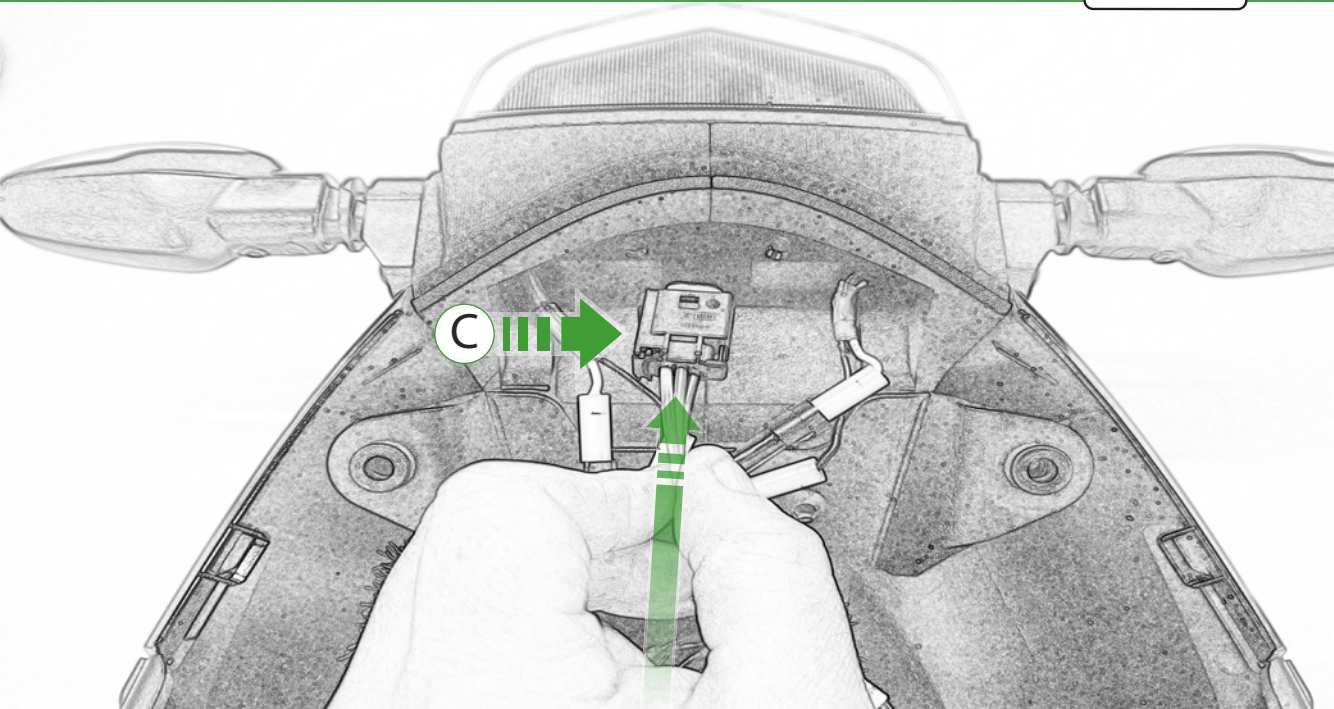


C







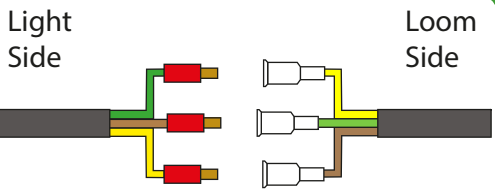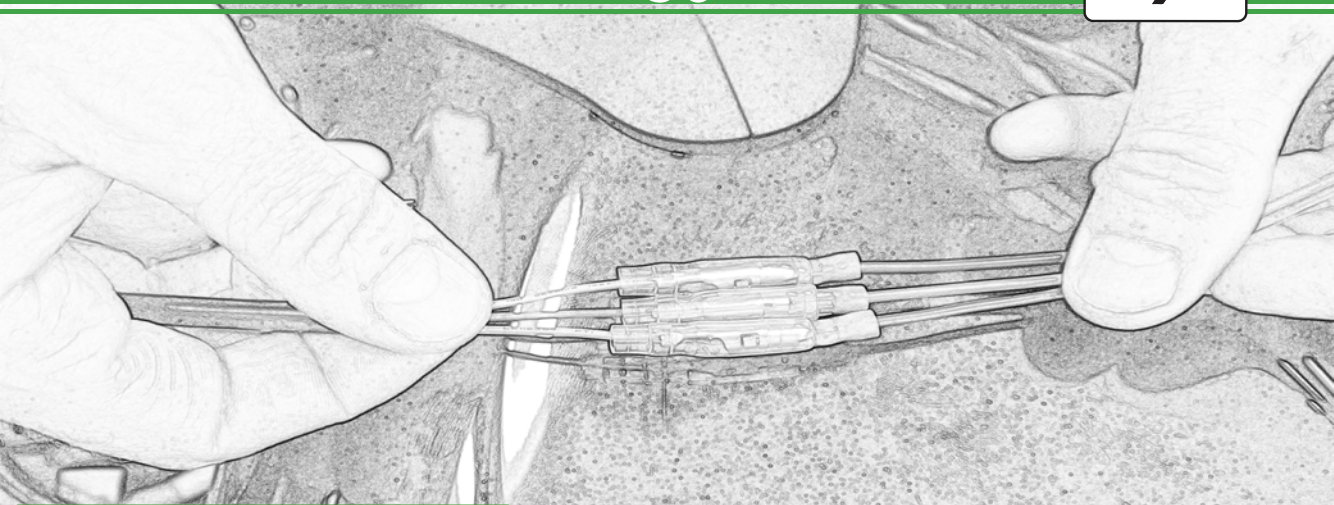

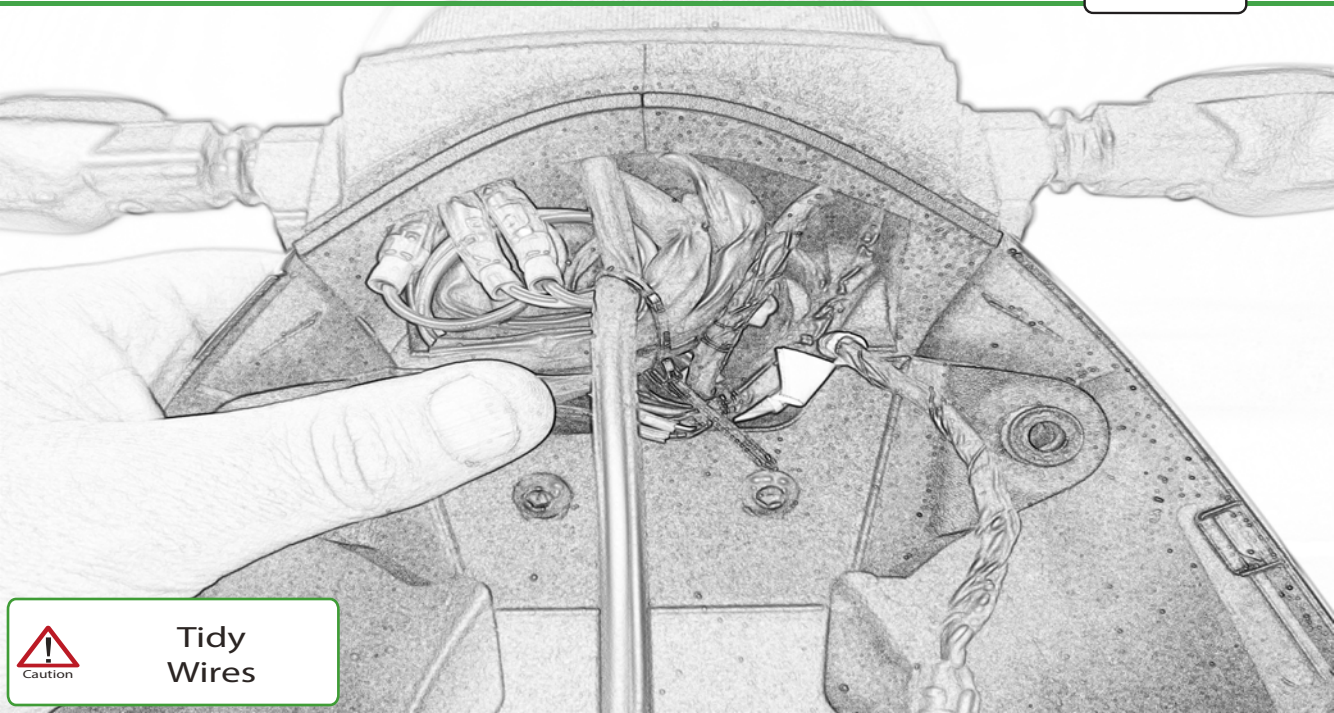



Tidy  
Wires

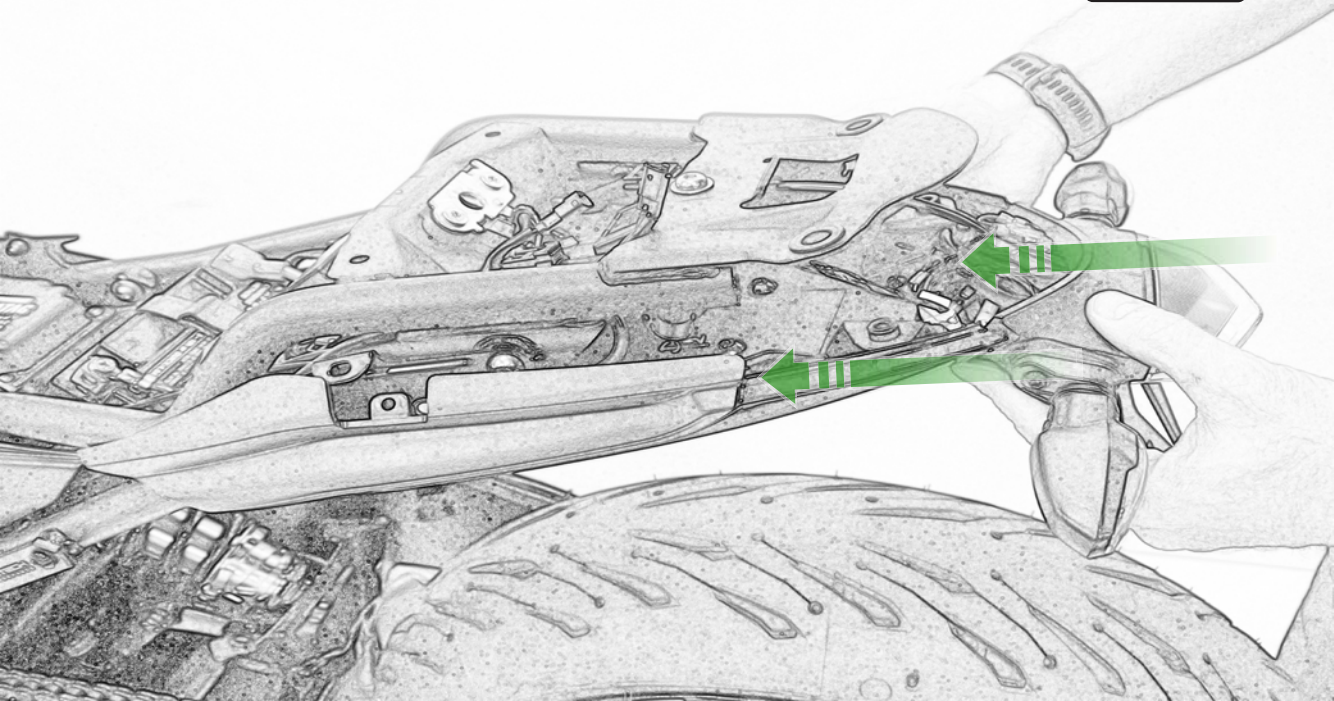

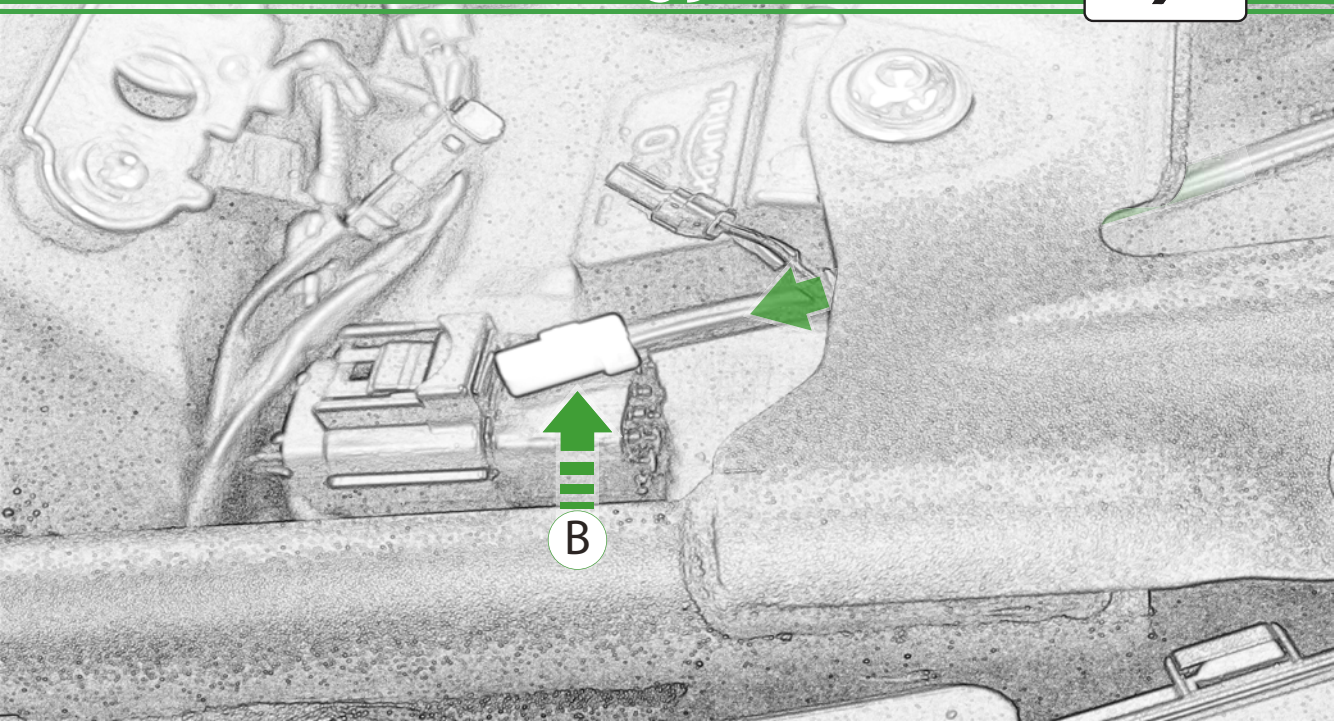




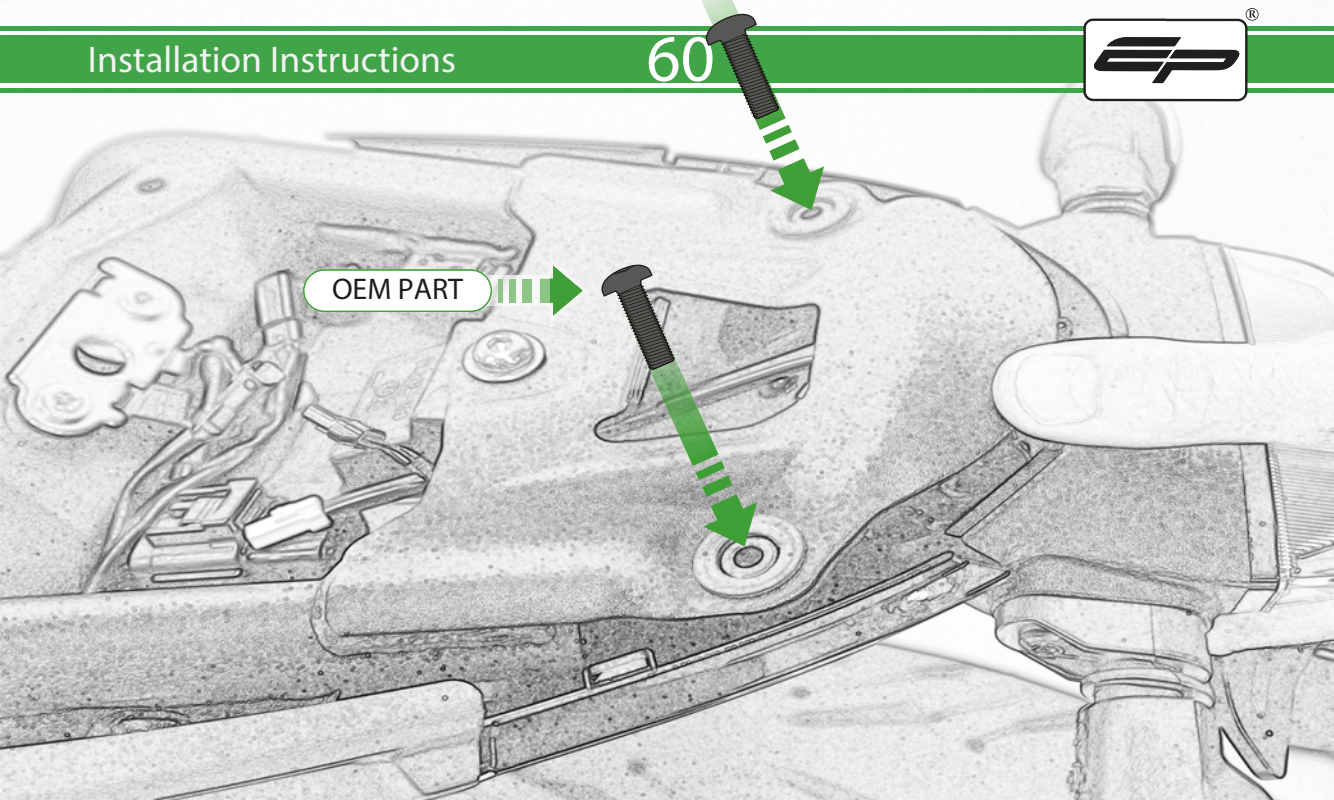


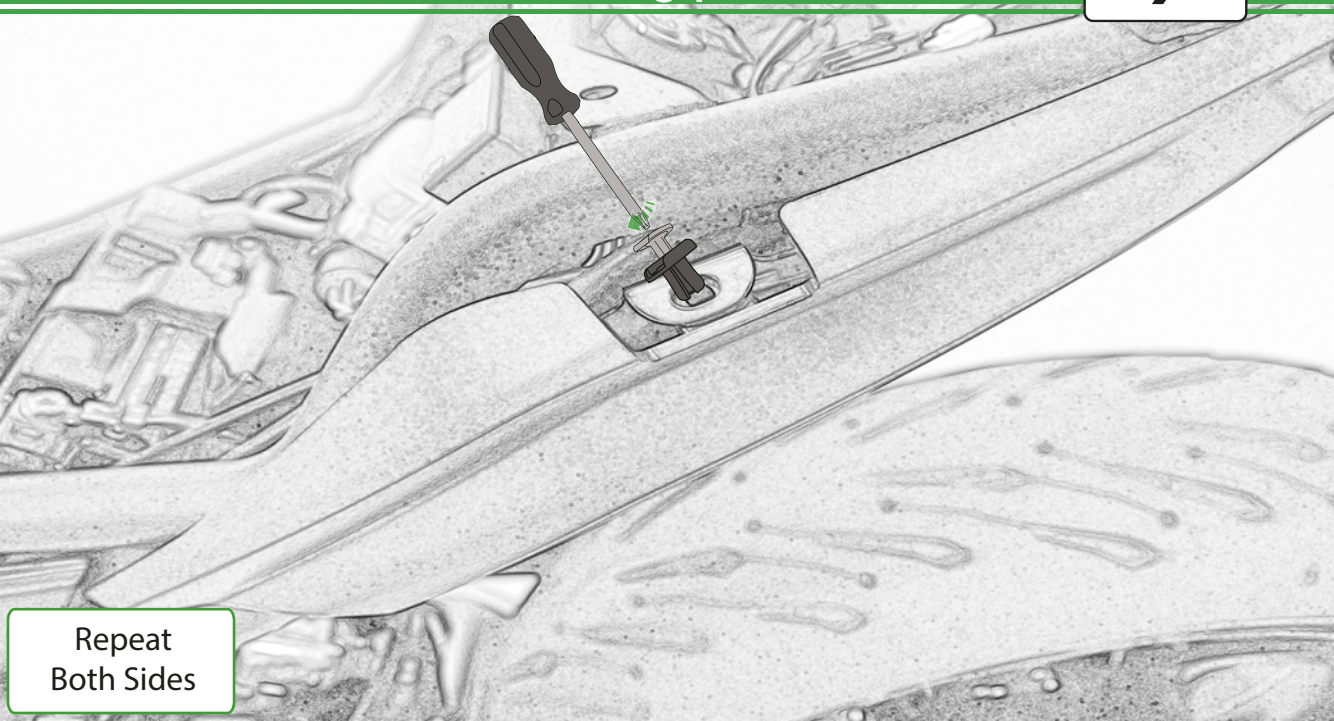

Repeat  
Both Sides




Fully  
Tighten

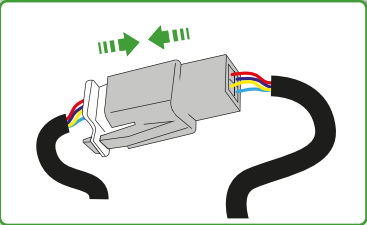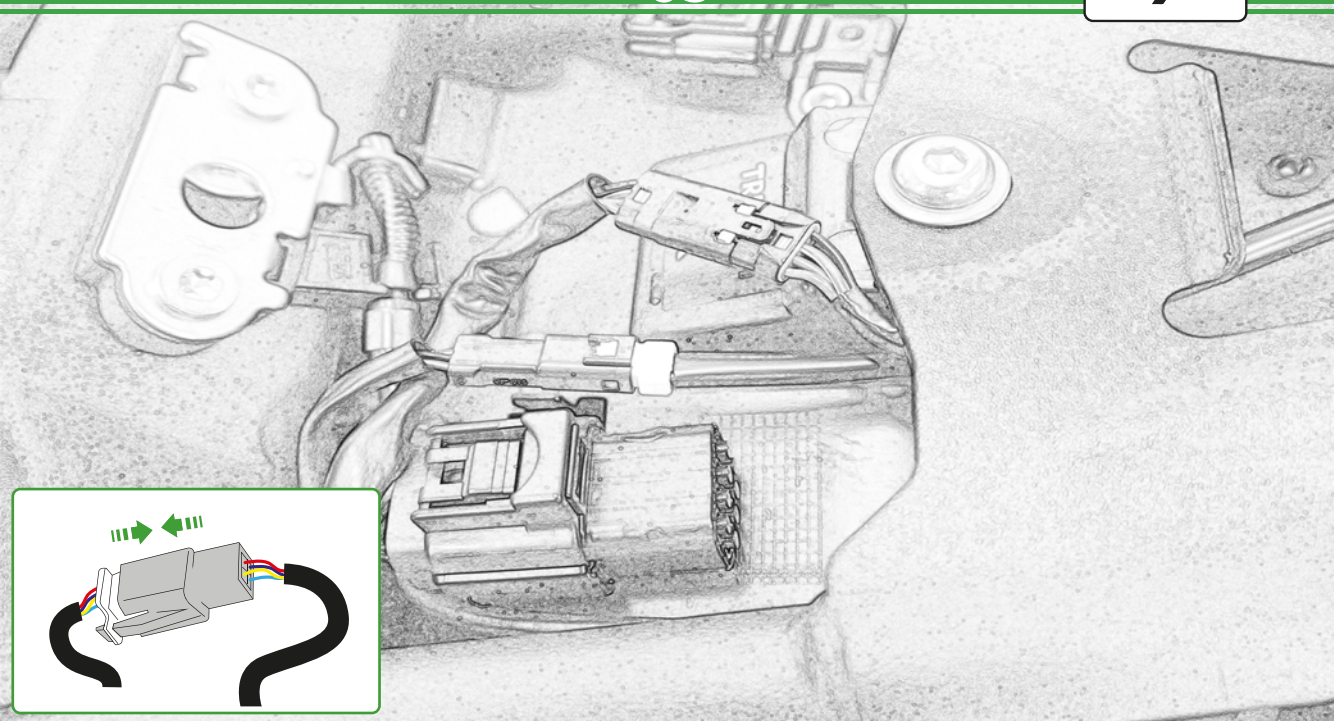







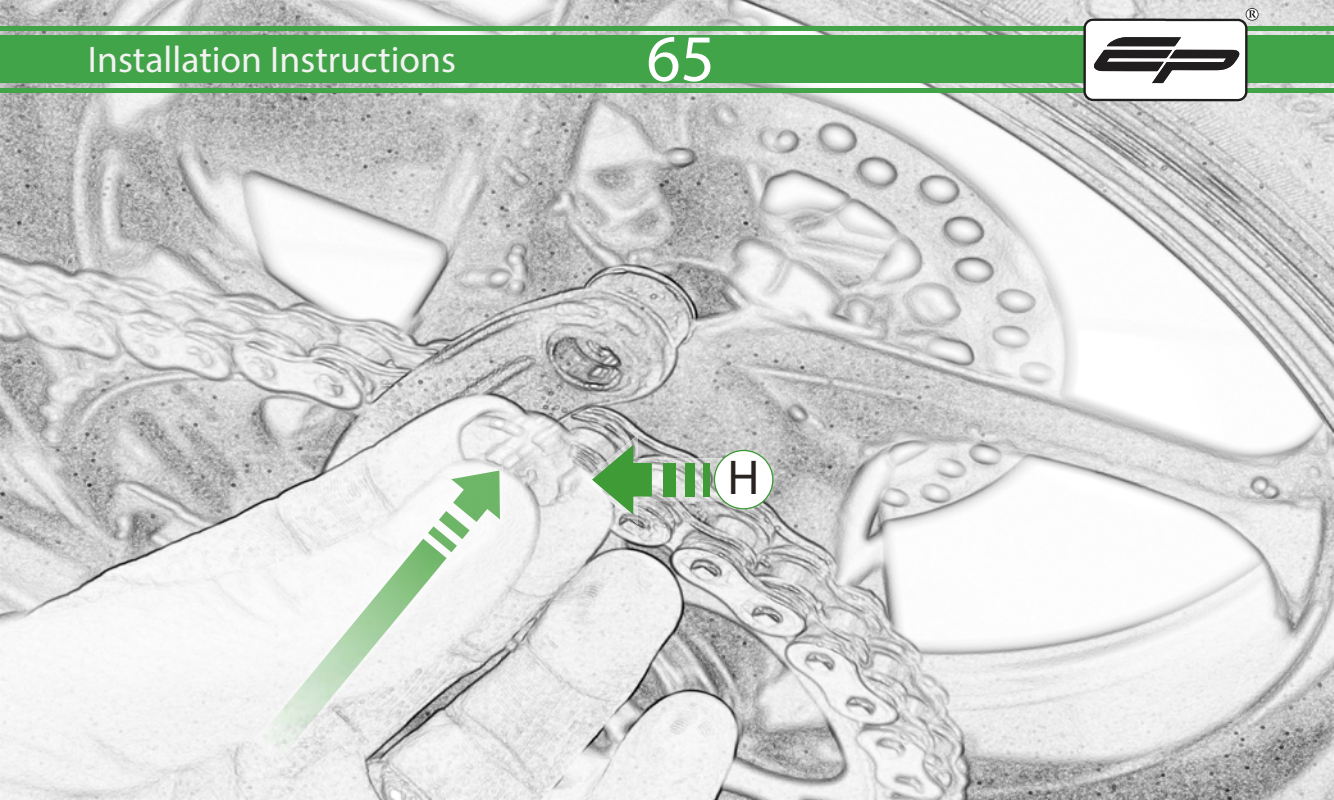


H

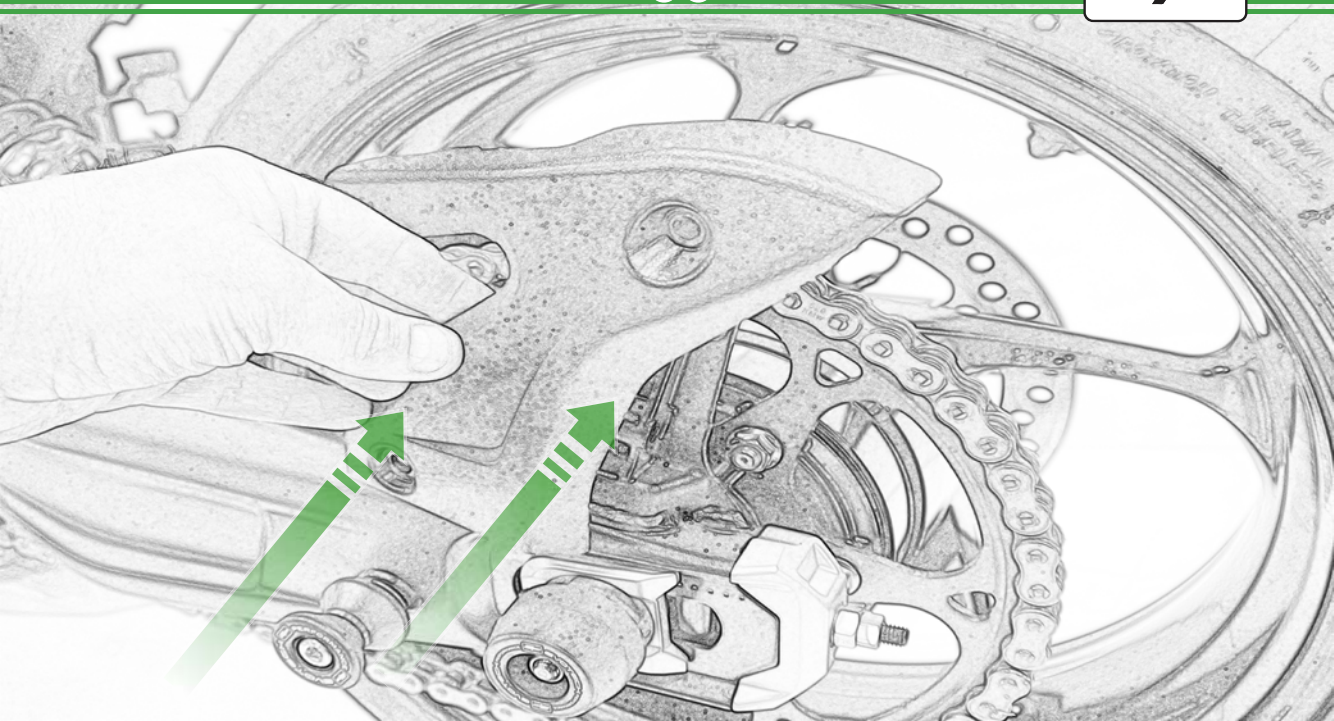




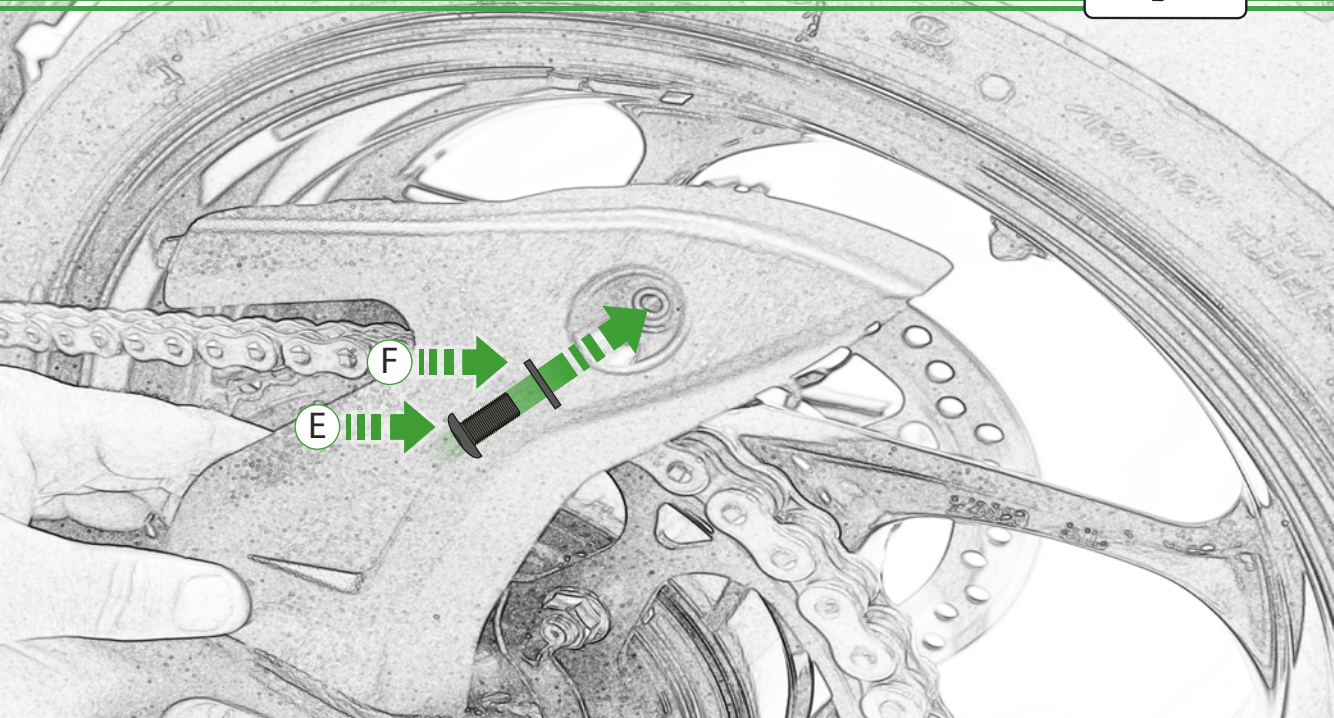



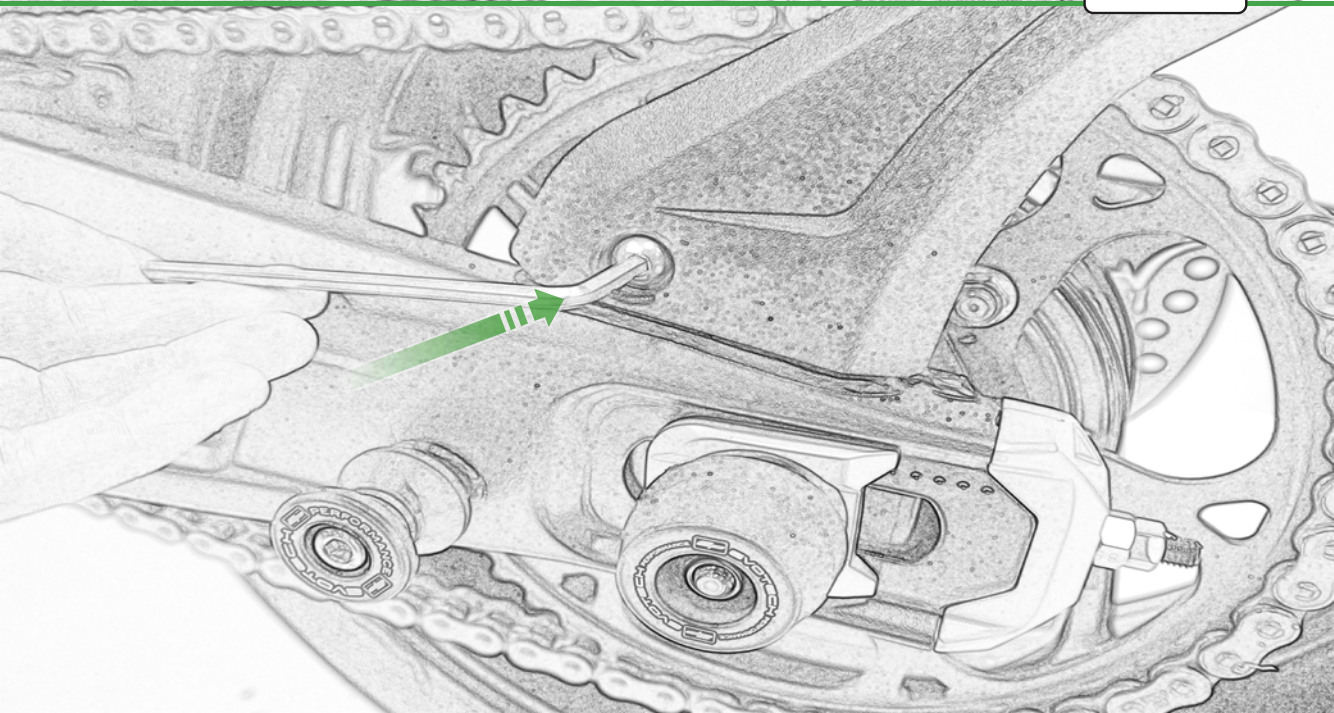

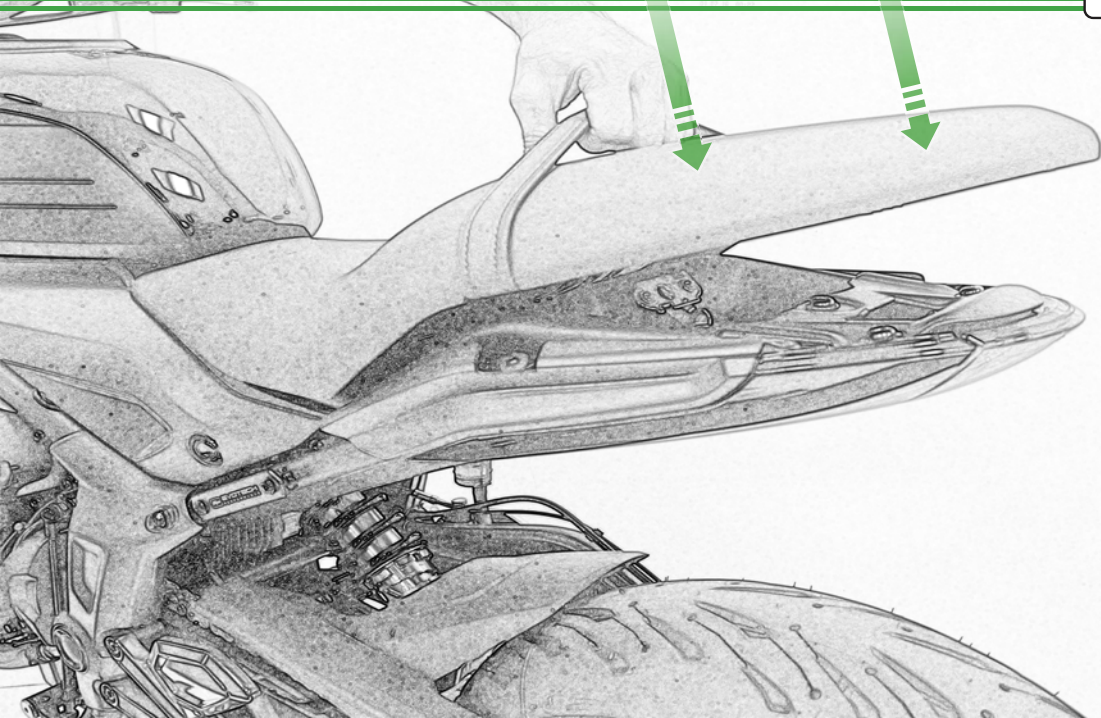




## ESSENTIAL CHECKS




After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

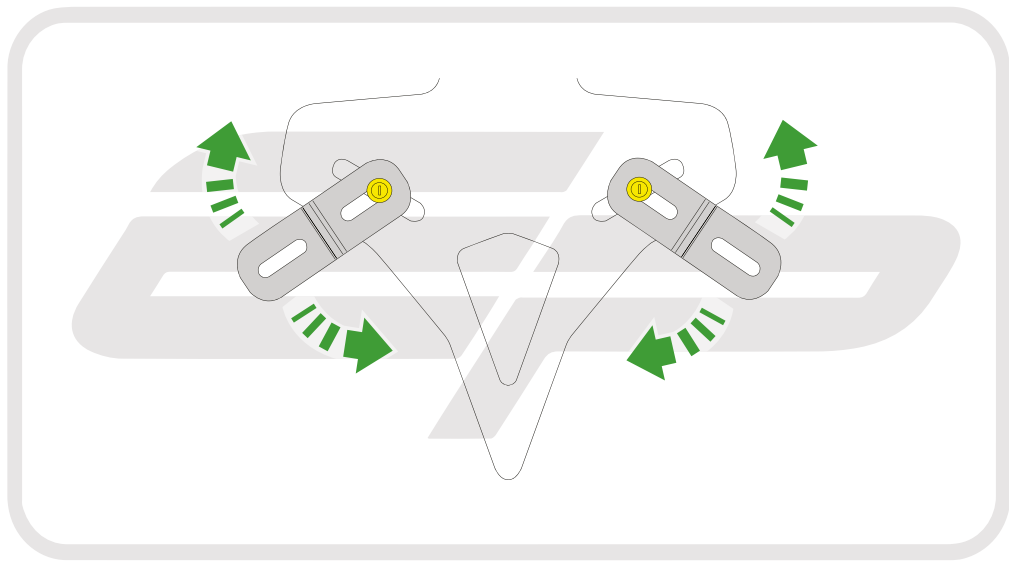



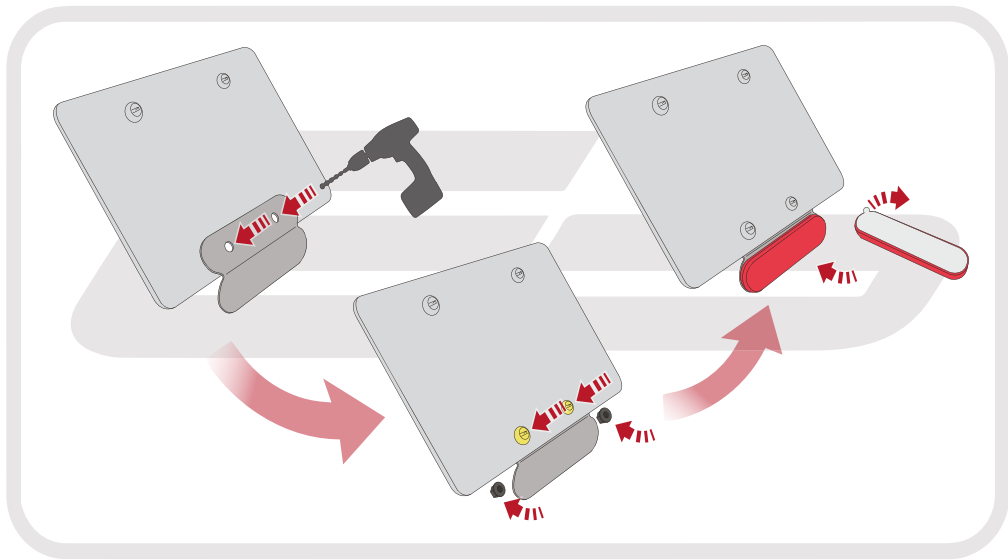



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)