

**EVOTECH**®  
P E R F O R M A N C E

KTM 1290 Super Duke R


Crash Protection


Installation Instructions





## Kit Contents PRN014848


- (A) 1 x RH Bobbin Bracket
- (B) 1 x LH Bobbin Bracket
- (C) 2 x M12 x 110 Caphead
- (D) 2 x Bobbin Spacer
- (E) 2 x Poly Washer
- (F) 2 x M12 Washer
- (G) 2 x Bobbin Head
- (H) 4 x M10 x 80 Caphead
- (I) 4 x Frame Spacer

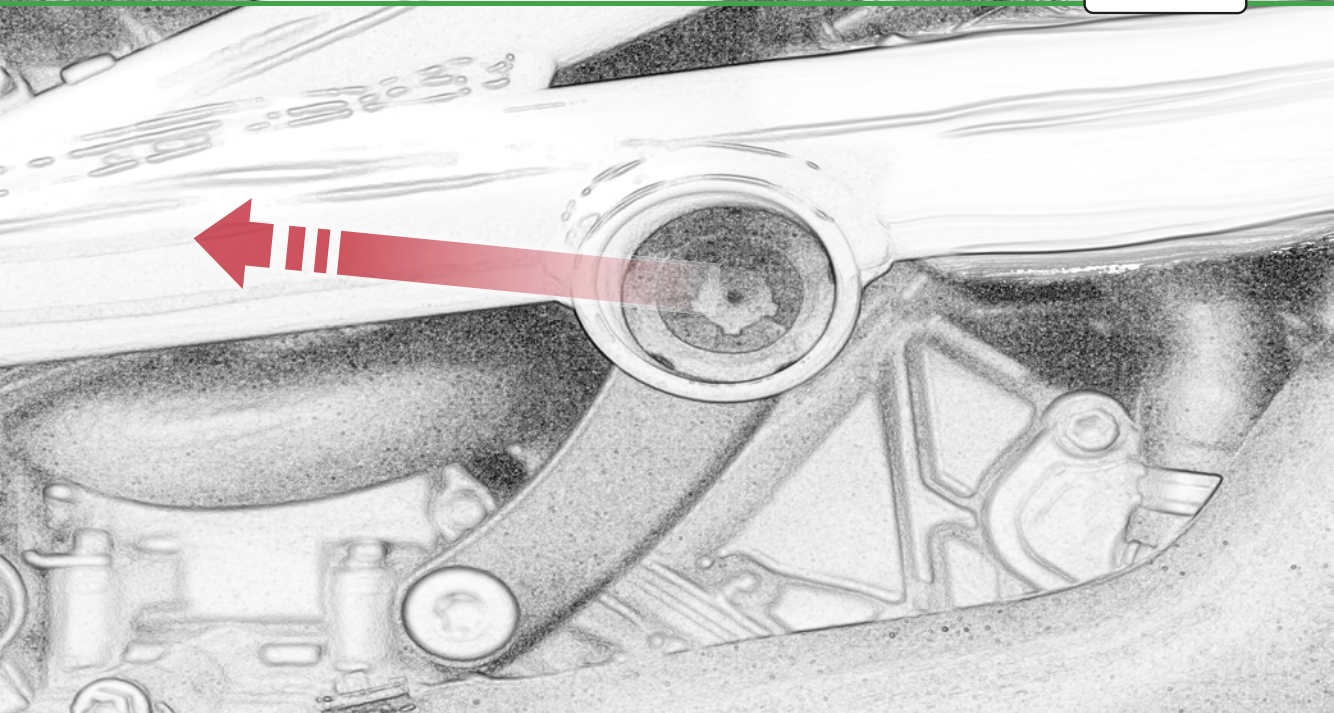

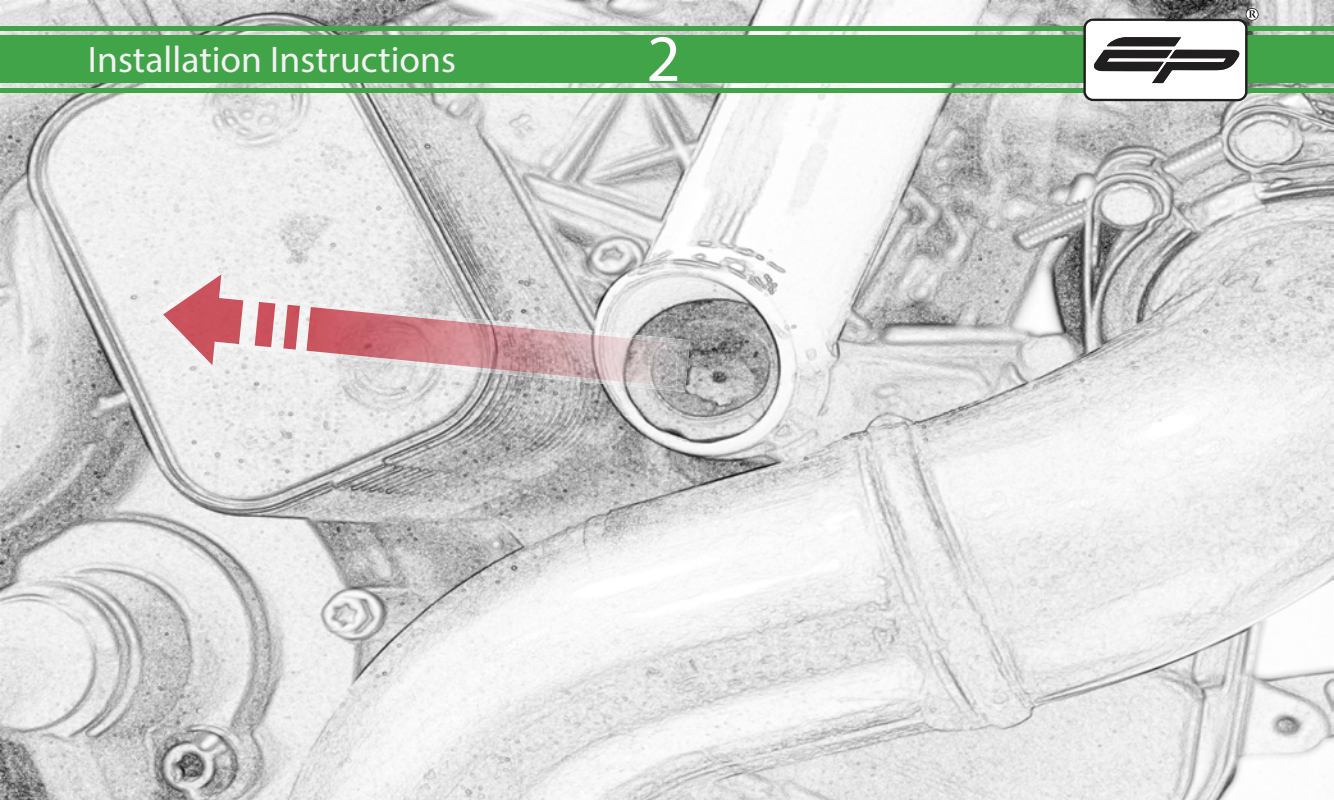

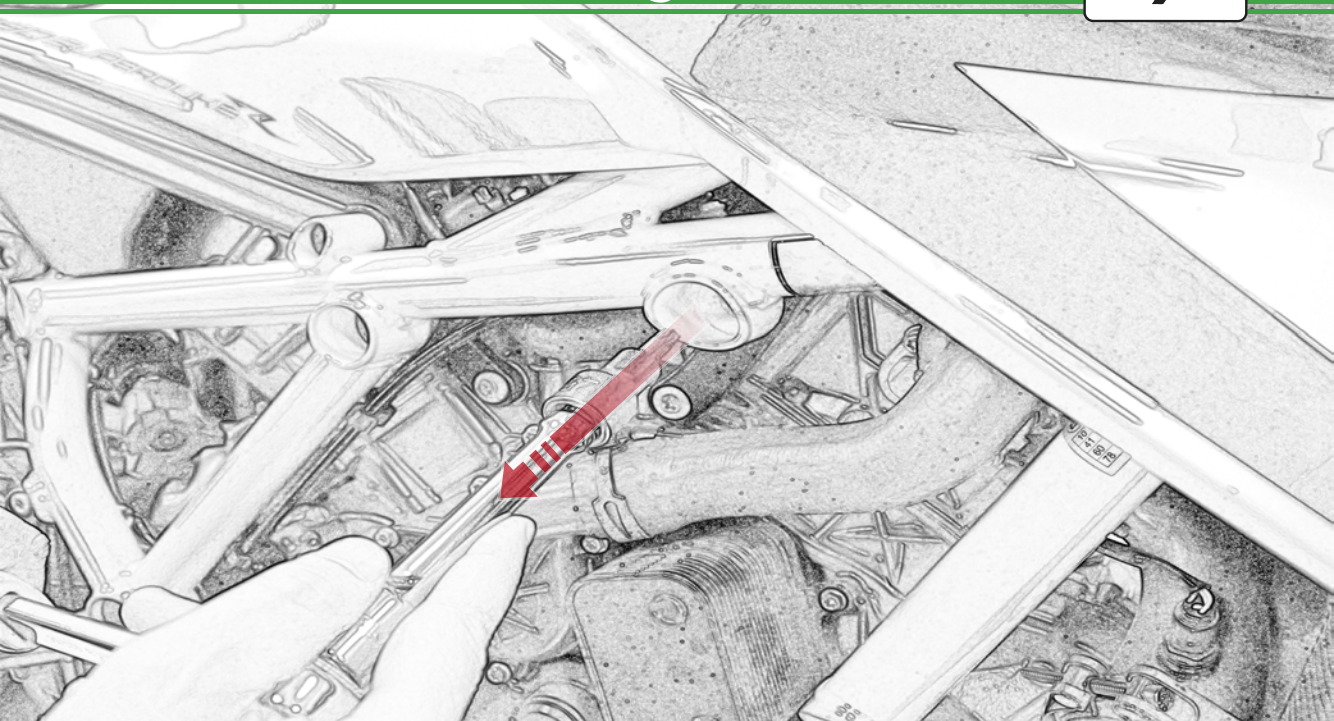


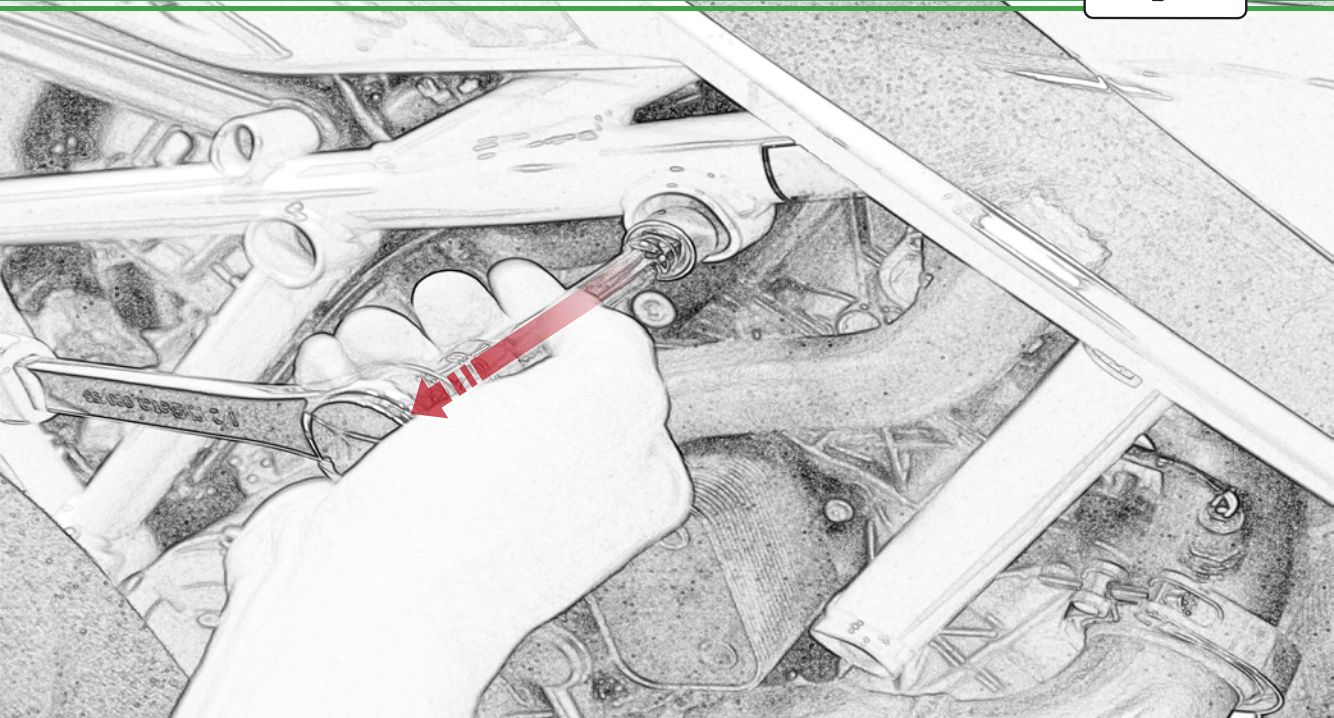

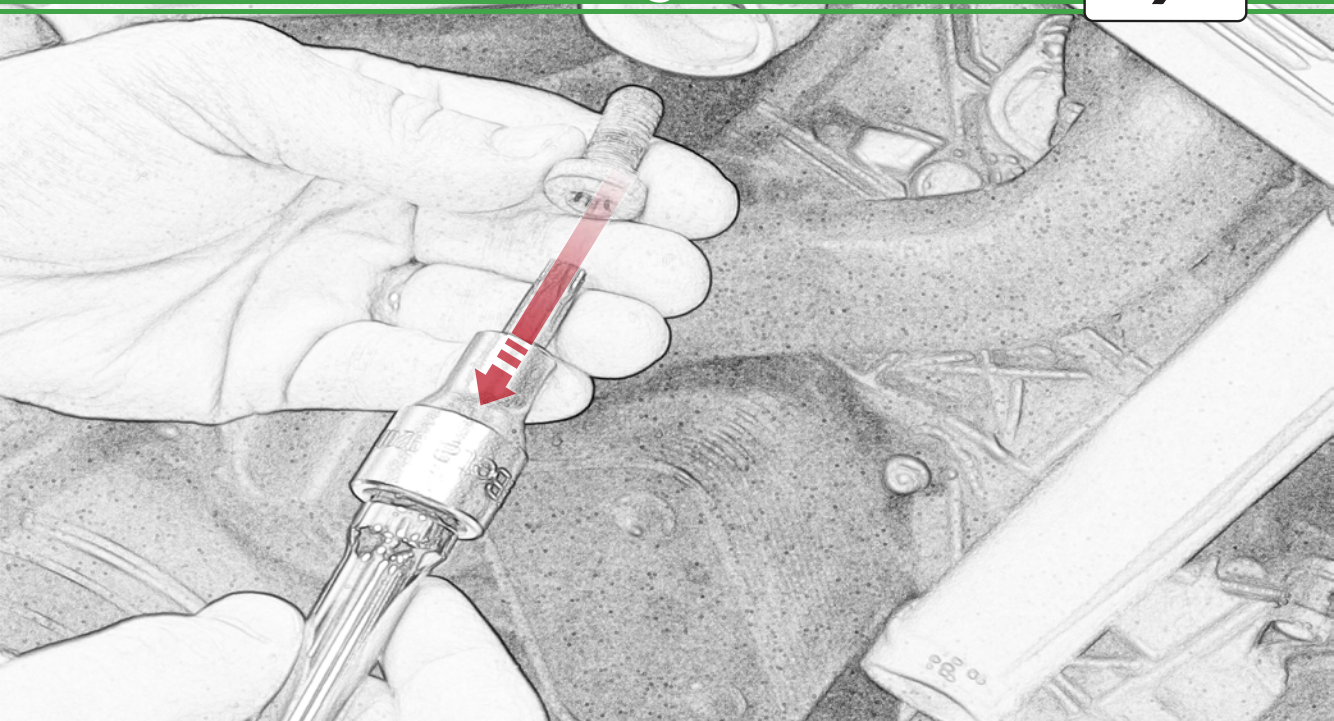







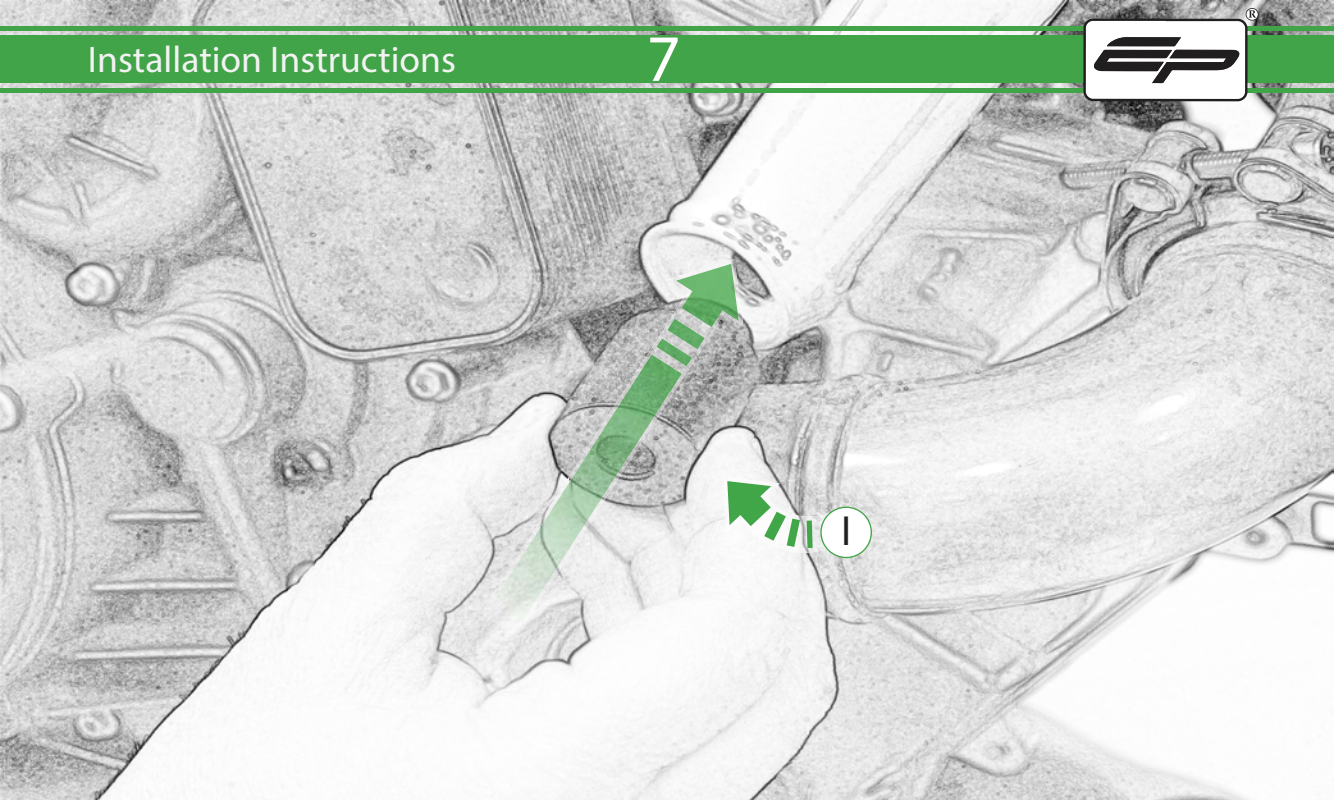





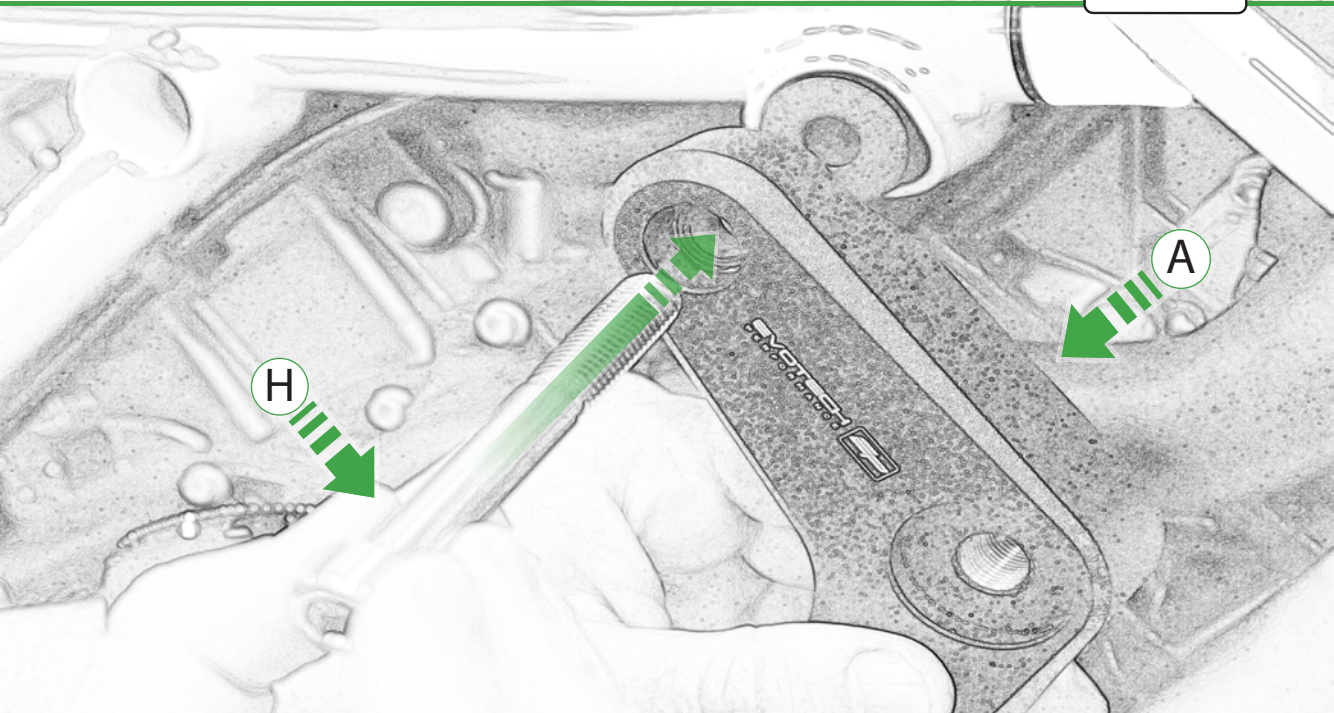

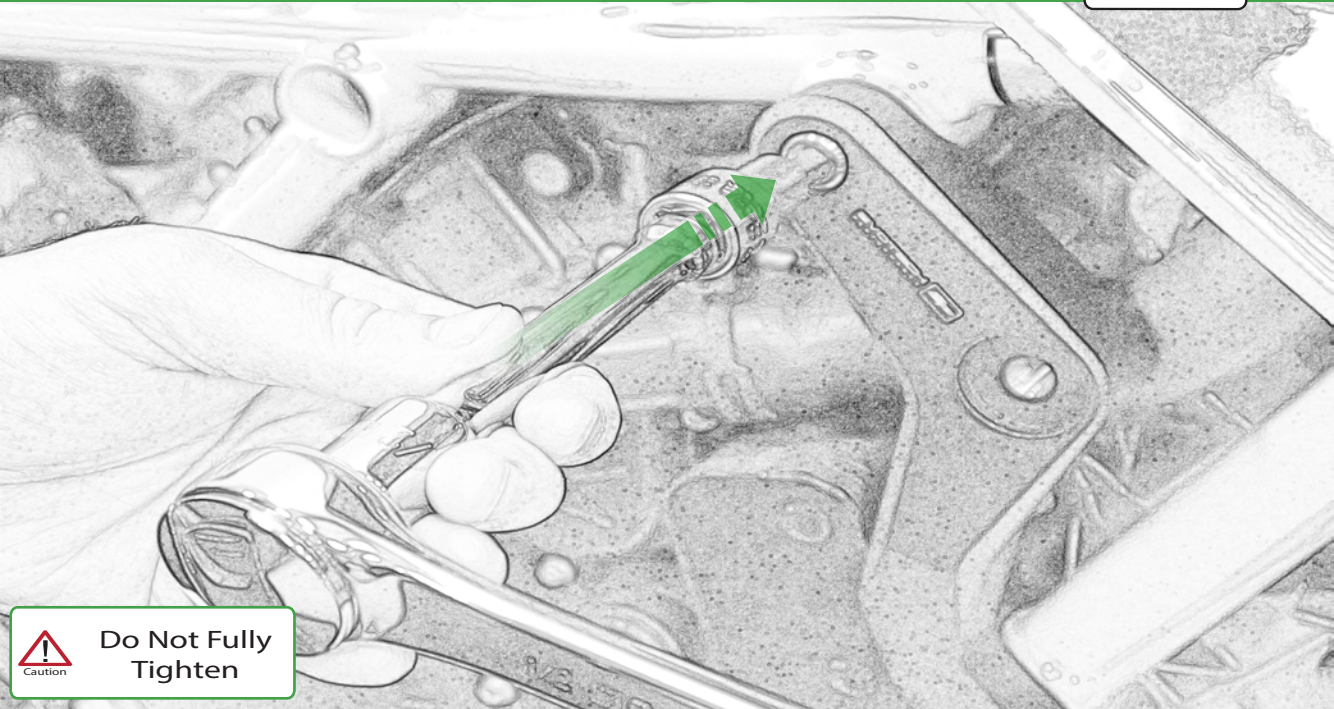

**Do Not Fully Tighten**

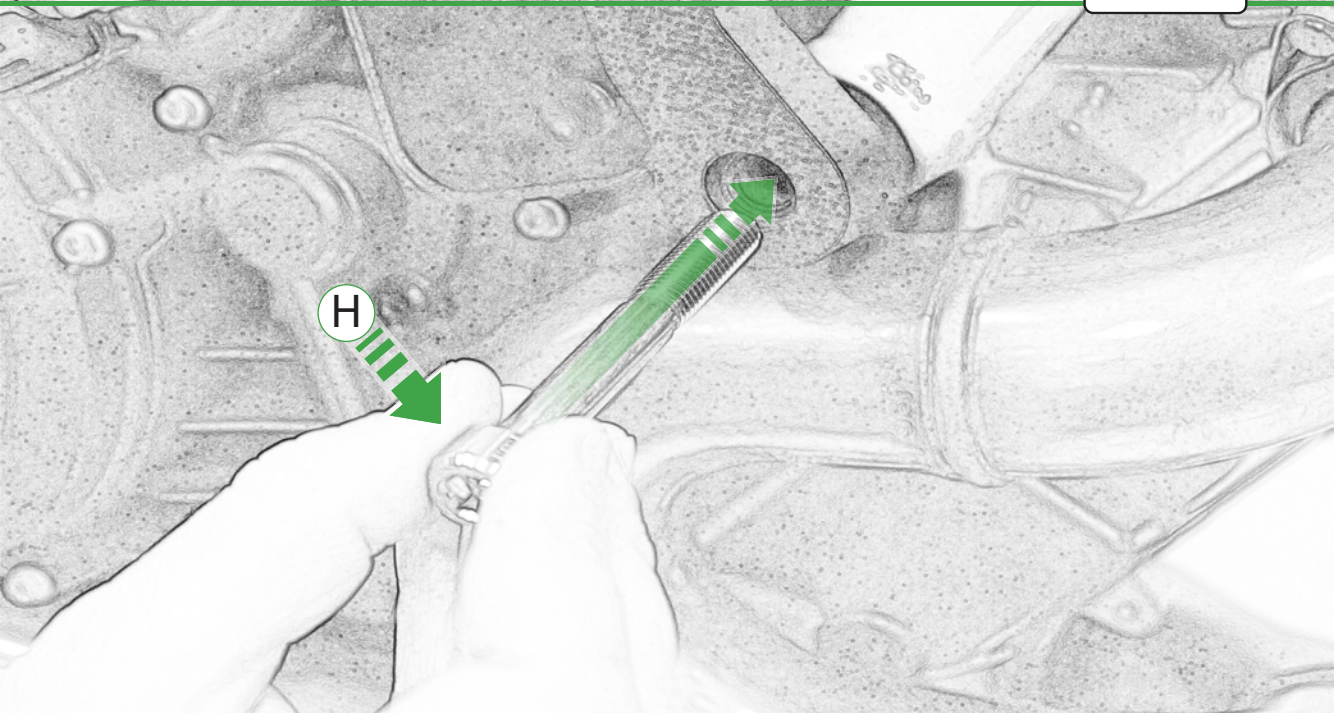


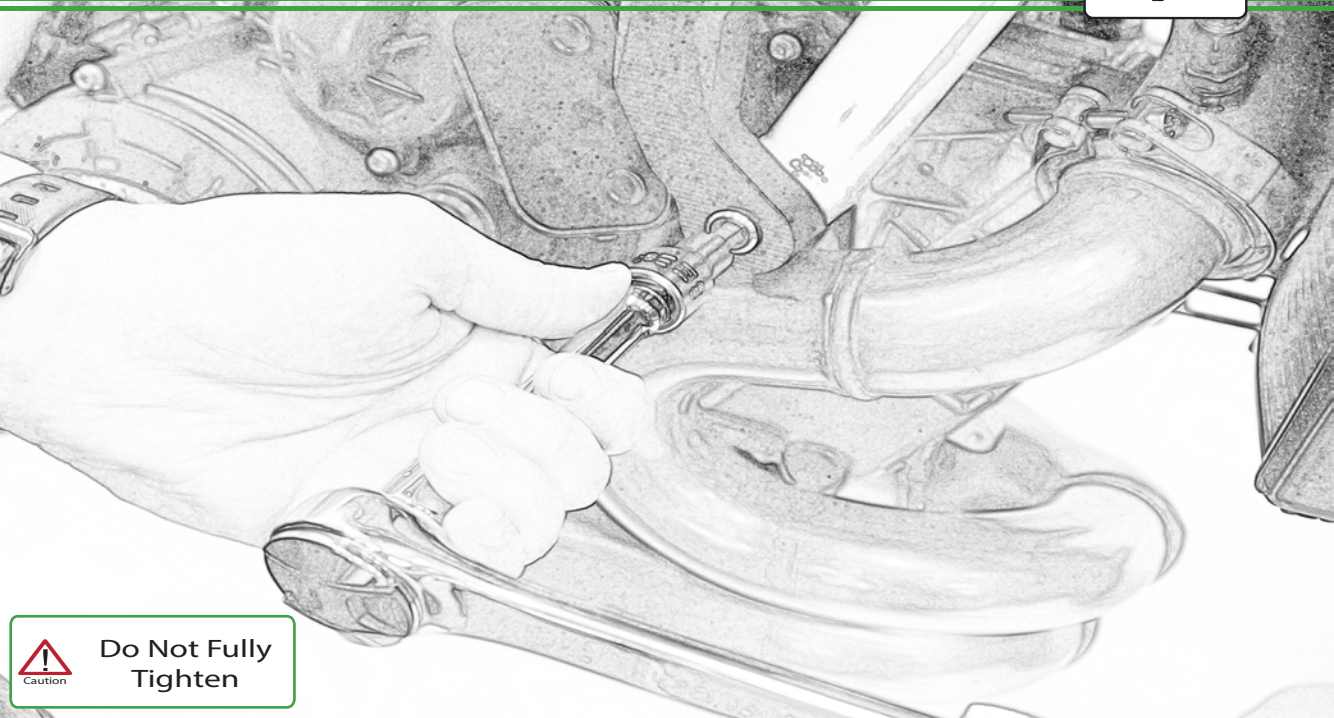

Do Not Fully  
Tighten





Fully Tighten  
45Nm

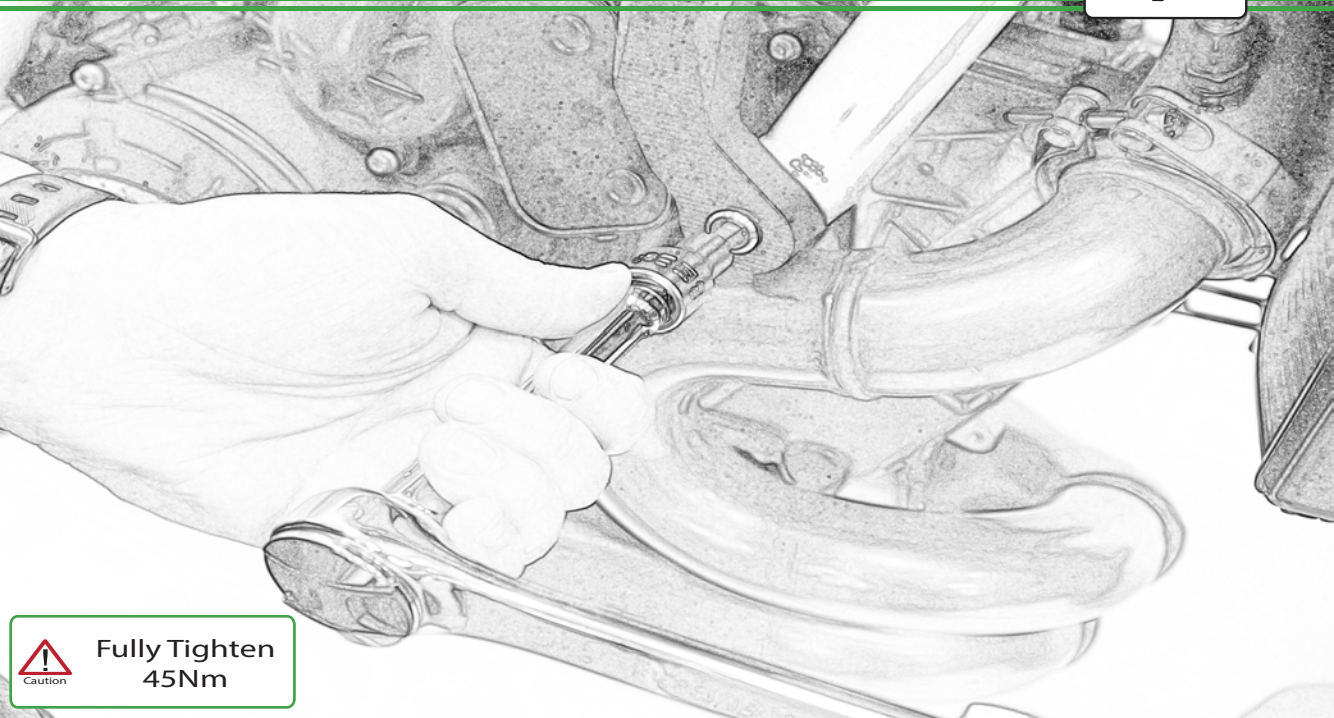



Fully Tighten  
45Nm




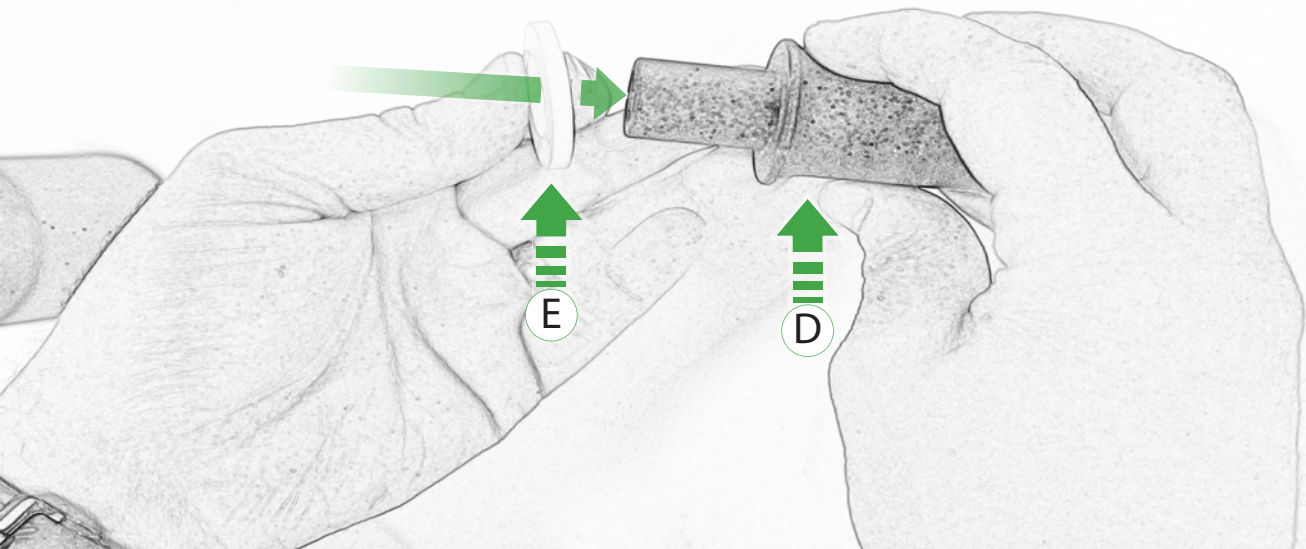


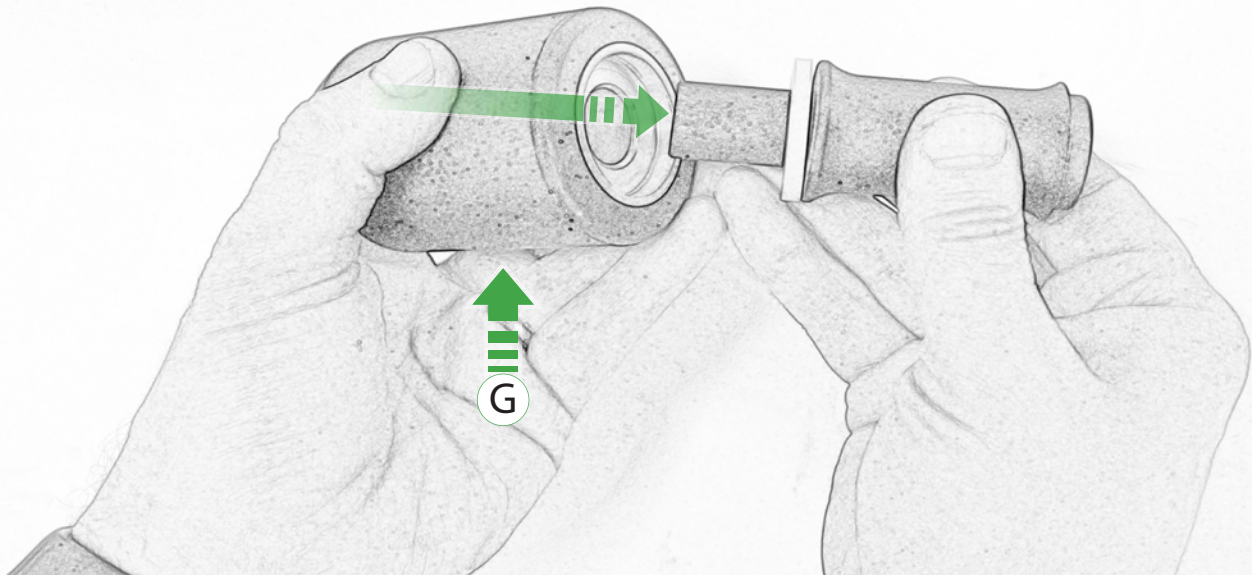

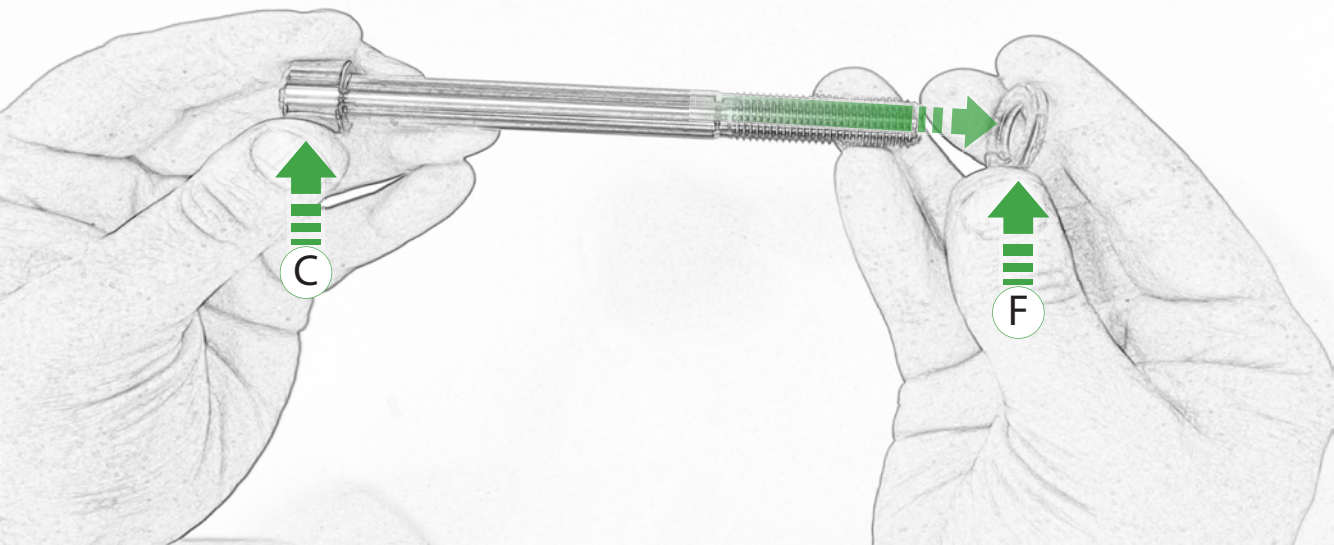

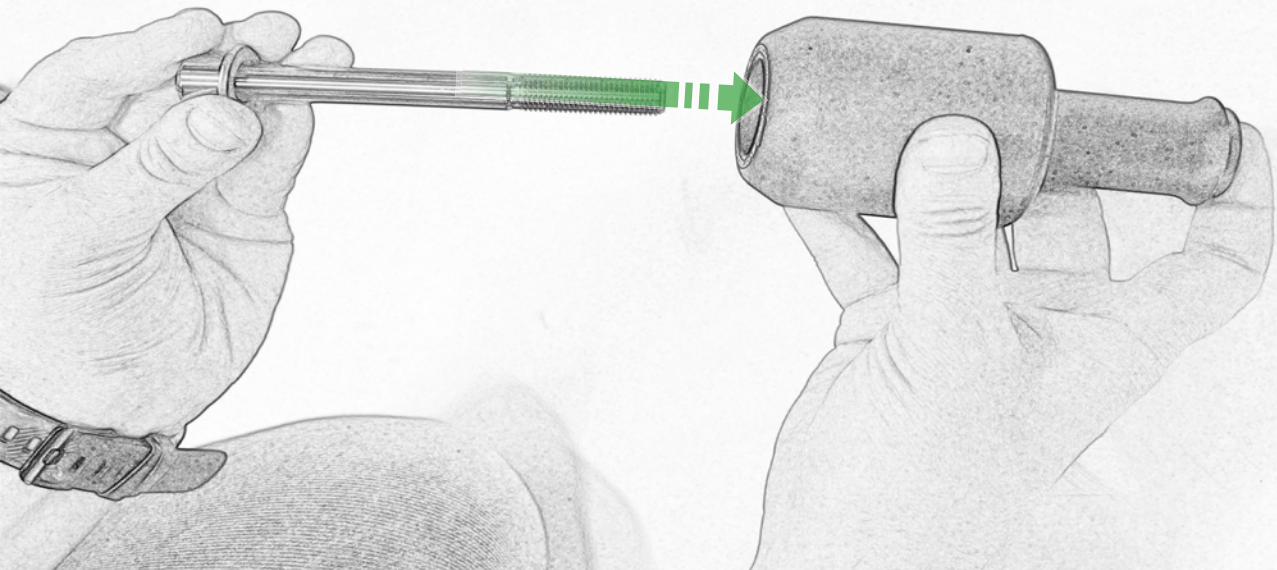


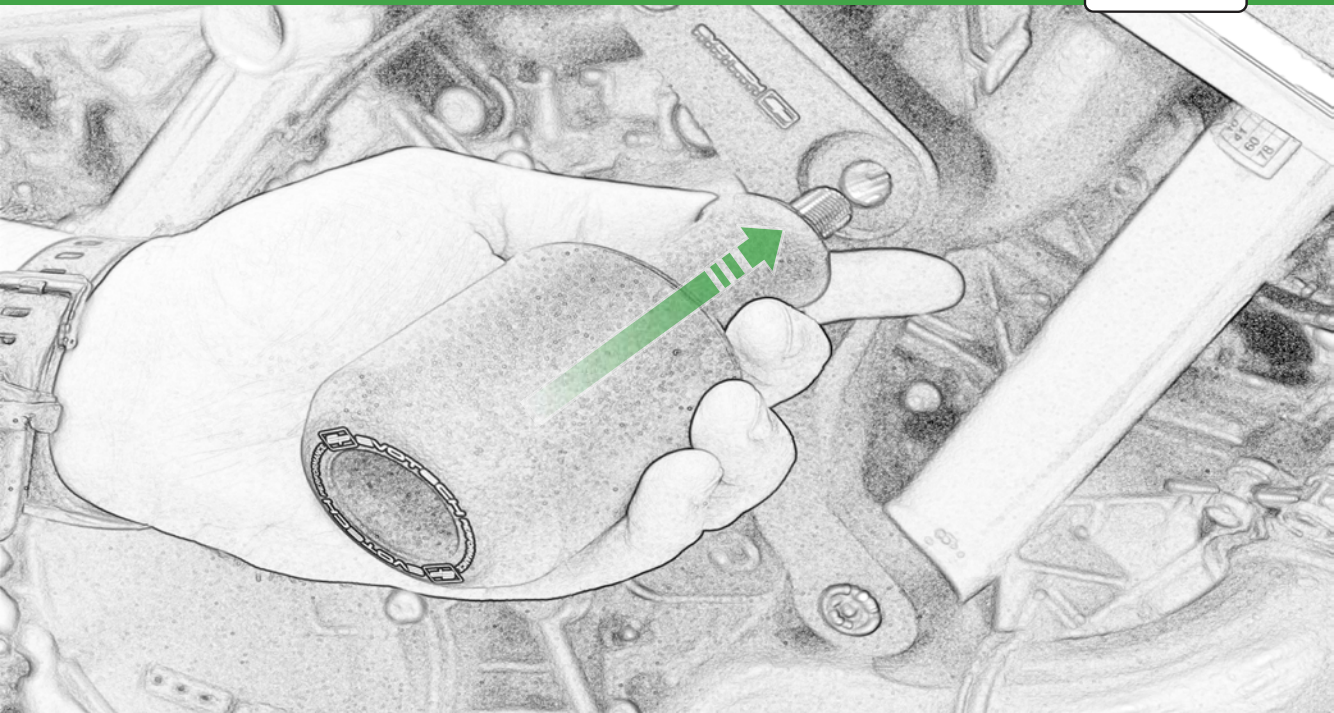

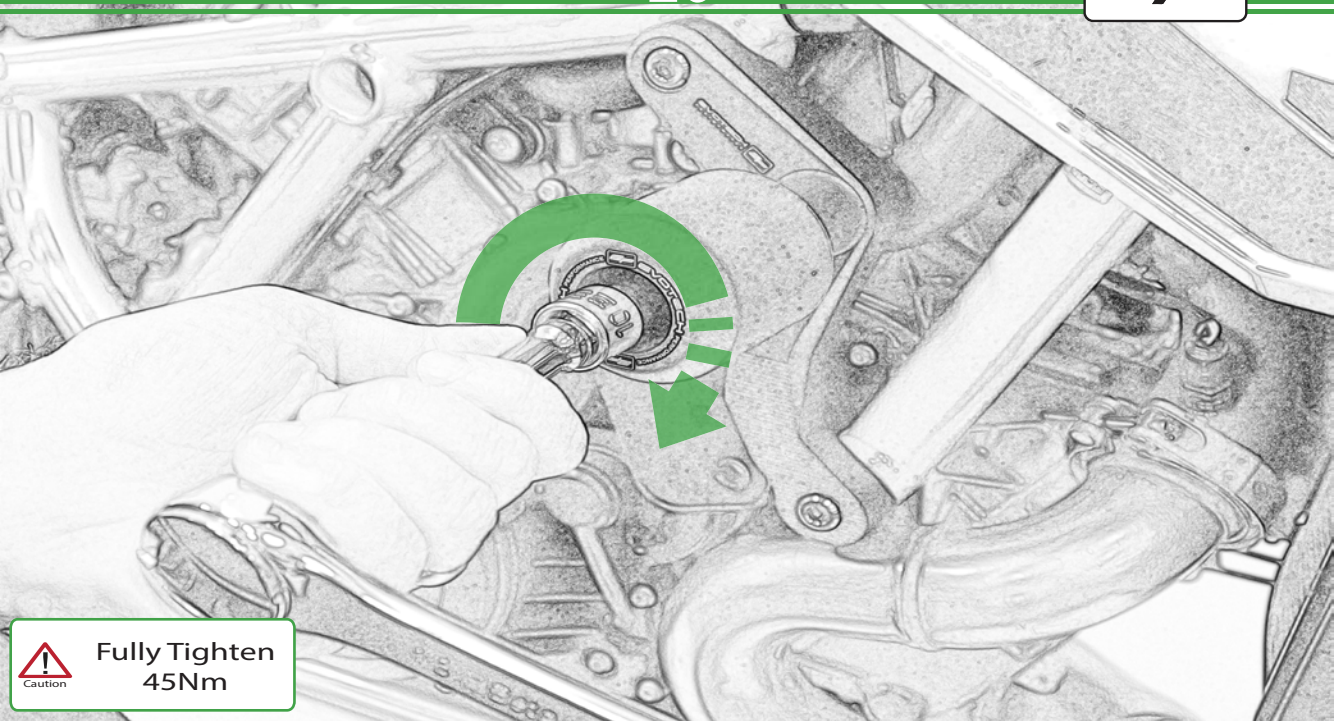

Caution

Fully Tighten  
45Nm

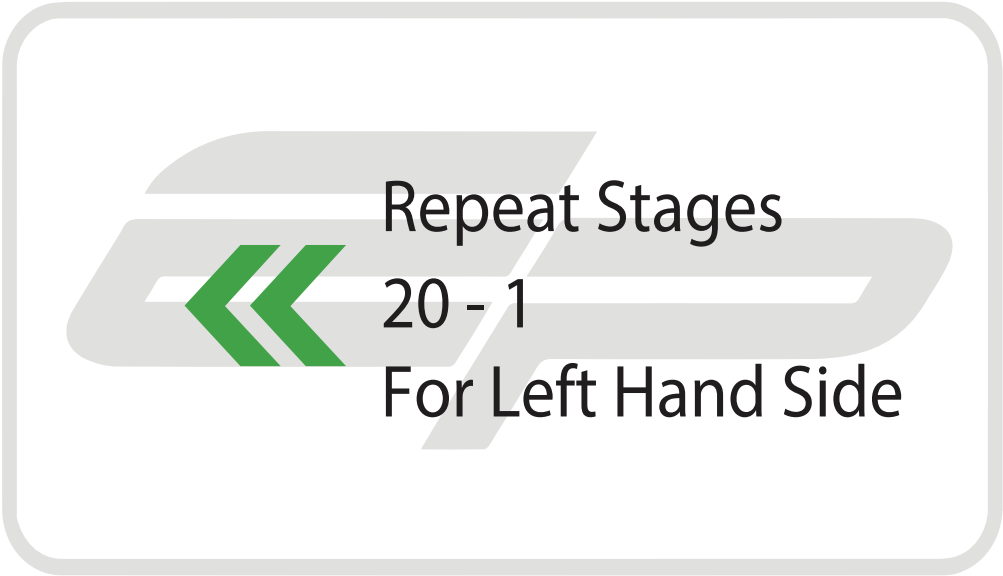



## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)