

Qty.

1

6

## PARTS LIST

Description
Lightbar Assembly, N930 or N930E
Connectors, Scotchlok

# PREPARATION

**1.** Remove Headlight from Headlight Shell (Screwdriver). Set aside.

**2.** Remove nuts from Headlight Shell mounting bracket, (10mm Socket), Lift mounting screws out of lower triple clamp.

**3.** Remove back cover from Headlight Shell mounting bracket (Screwdriver)

4. Unplug Turnsignal Wires.

**5.** Loosen clamping screws on Turnsignal mounting clamps. Pull Turnsignal wires from Headlight Shell.

6. Remove Upper Triple Clamp, Refer to Service Manual

**7.** Slide Turnsignals up fork tubes and remove. Set aside, they will not be reused.

8. Reinstall Upper Triple Clamp per Service Manual.

## INSTALLATION

**NOTE:** An assistant will make steps 1 (A through C) much easier.

**1.** Mount the Light Bar Assembly:

**A.** Route the wires from the Light Bar assembly through the lower triple clamp from below, and into the Headlight Shell.

**B.** Reinstall the back cover plate onto the Headlight Shell mounting bracket.

**C.** Hold the Light Bar assembly in place on the lower Triple Clamp and reinstall the Headlight Shell. Tighten the nuts manufacturer's specified torque.

2. Wire the Light Bar Assembly:

**NOTE:** check vertical aim of the lamps. They should aim approximately 5° downward. If adjustment is required see "Adjustment" page 2 of this instruction otherwise proceed with wiring step 2.

**A.** Attach the Light Bar assembly wires per the following list;


	<u>Light Bar</u>	<u>Motorcycle</u>
Turnsignal, Left	Short Red	= Light Green
Turnsignal, Right	Short Red	= Black
Running Light, Left	Short Black	= Grey
Running Light, Right	Short Black	= Grey
Passing Lamps	Long Blue	= White(Hi Beam)
Ground		= Black/White

3. Reinstall the headlight and rim.

**NOTE:** Check local regulations for proper passing lamp operation. Some states require passing lamps be lit only with hi-beam.

**NOTE:** Grounding is through the frame.


### INSTALLATION AND OWNER'S MANUAL N930 or N930E (European) LIGHT BAR for Suzuki® VS1400

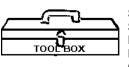

Screwdriver, #2 Phillips Socket, 10mm, and Ratchet Wrench Pliers, Slip Joint, Hex Key 5mm Plus tools required for removal of Upper Triple Clamp

**NOTE:** This installation to the VS1400 Intruder requires removal and reinstallation of the upper Triple Clamp. Refer to your Service Manual for the proper tools and procedure.

**NOTE:** right and left on the motorcycle are determined from the rider's position.

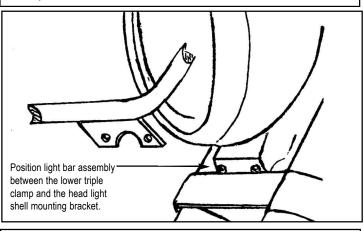

#### Note, Light Bar Wiring Helpful Hints:


The **long Blue** wire is the main power wire for the spotlights on the light bar. Connect that to the main power source from the headlight. Either the High Beam wire or the Low Beam wire. The choice is your preference. Turn on bike and Check.

The two short **RED** wires are for the turn signals. One **RED** wire for the Left side turn signal and one for the Right side turn signal. Turn on bike and check.

The two short **BLACK** wires are for the running lights. One **BLACK** wire for the Left side running light and one for the Right side running light. Turn on bike and check.

The Light Bar attached to the front fork of the motorcycle serves as the ground in most cases. A precautionary step to insure proper grounding is to take one of the Black with White Tracer Ground wires from the existing turn signals and ground that between the Light Bar Mount and the Triple Tree Bracket.

Always start by doing one side at a time. Preferably the right side or high side of the bike first.

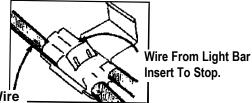

**Through Wire** 

Page 1 of 2

# A WARNING

After wiring the light bar check for clearance. Make sure the wires can not get pinched when the fork is turned to a full fork lock left and right.

Check all lights for proper operation.

Check the tightness of all fasterners that have been involved in this installation.

# MAINTENANCE

The high quality chrome finish of your National Cycle light bar can be maintained with any quality chrome cleaner and /or polish.

# REPLACEMENT PARTS and ACCESSORIES

Order parts through your local dealer or contact National Cycle.


	N930	N930E
<u>Description</u>	Part No.	Part No.
Light Head Assembly	90-910501-000	90-910501-000
Lamp Assembly E13/DOT Reflector, Lens and Bulb	90-901011-000	90-901011-000
Turn Signal Assembly	90-930921-000	90-930921-000
Turn Signal Lens	90-930213-000	90-930213-000

Turn Signal Bulb Only: Bulb 1157 Available at Most Auto Parts Stores.

NIQOOS

#### Light Bar Accessories Chrome Visor

	110000
Alternate Thumb Switch	N9001

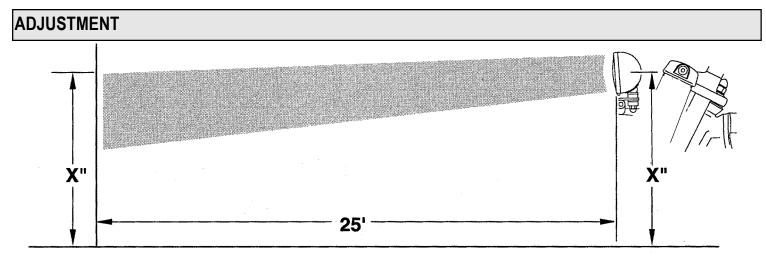

#### 1. HORIZONTAL AIM

**A.**To adjust the Spotlights or Turnsignals right or left gently rotate the lamp into the correct position. In the event that the lamps become loose, refer to the procedure for vertical adjustment.

#### 2. VERTICAL AIM

A. Disconnect wire connections inside the Headlight Shell.

**B.** Pull the wires out of the Light Bar tube.

**C.** Turn the Turn signal to provide access to the mounting screws.

**D.** Unscrew the Turn signal mounting screws and remove the Turnsignal (Hex Key).

- E. Push the Spotlight wire up into the Spotlight Shell.
- F. Loosen the nut on the Spotlight stud (Deep Socket).

**G**. Now, adjust the Spotlight. Reconnect the spotlight wire and illuminate to verify its projection.


**H.** Push wire into the Spotlight Shell.

I. Firmly retighten the nut on the Spotlight stud.

- J. Pull the wire out of the Spotlight Shell.
- K. Reassemble in reverse order of disassembly.


**L.** Adjust the Spotlights and Turn signals horizontally by rotating into position.

M.Verify operation of the lights.

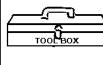

To adjust vertical aim you will need these additional tools: Hex Key, 5/32" or 4mm Deep Socket and Socket, 9/16" (14mm) or a 9/16" Slotted Socket.

**NOTE:** As a substitute for the deep socket you may use a slotted socket such as Snap On Brand part number FRX181 used in the auto trade as an OXY Sensor Socket. This eliminates the need to disconnect and move the wires.

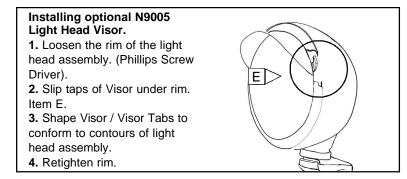

Page 2 of 2

10-110730-000 Rev. A 03/02

©2001 National Cycle, Inc. PO Box 158, Maywood, IL 60153-0158 USA 708-343-0400 / Fax: 708-343-0625 / www.nationalcycle.com / e mail: info@nationalcycle.com